

## ! Important! — You must read this —

## Limitations on simultaneous use of I/O cards

The rear panel of the AW4416 has two OPTION I/O slots, allowing you to install various I/O cards that are compatible with the Yamaha Mini YGDAI format.

The combinations of I/O cards shown in the table below cannot be installed in the AW4416's OPTION I/O slots 1/2 and used simultaneously. (However, the Y56K card can be used in combination with the three models marked by a O symbol.) Combinations of I/O card that cannot be used together


|        | AP8AD<br>(Apogee | AP8DA<br>(Apogee | Y56K<br>(WAVES |
|--------|------------------|------------------|----------------|
|        | Corporation)     | Corporation)     | Corporation)   |
| MY8-TD | ×                | ×                | ×              |
| MY8-AT | ×                | ×                | ×              |
| MY8-AE | ×                | ×                | ×              |
| MY4-AD | ×                | ×                | 0              |
| MY8-AD | ×                | ×                | 0              |
| MY4-DA | ×                | ×                | 0              |
| AP8AD  | ×                | ×                | ×              |
| AP8DA  | ×                | ×                | ×              |
| Y56K   | ×                | X                | ×              |

O: Can be used together


Using cards together in violation of the above restrictions will cause the AW4416 to be damaged. You must observe the restrictions described above. Please be aware that if an impermissible combination of cards is used inadvertently, Yamaha Corporation will take no responsibility for the damage that will occur.

If an impermissible combination of I/O cards is used inadvertently, a message of "CANNOT USE BOTH SLOTS!!" will appear in the display, either as shown in the form shown in 1 or 2, below.

Message ①

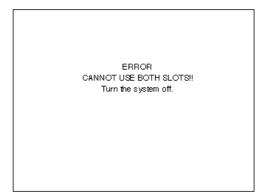

Message 2

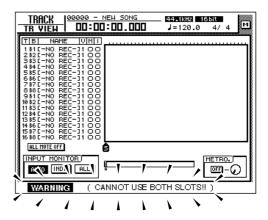

If you continue using the AW4416 in this state, it will be damaged.

Turn off the power in the following sequence.

- The monitor system connected to the output jacks of the AW4416
- 2. The AW4416 itself
- Storage devices connected to the SCSI connector of the AW4416, and external sound sources connected to its input/output jacks.

You must perform the shutdown procedure (Operation Guide p.17) before you turn off the power of the AW4416.

**However if display message** ① **is shown**, you will be unable to perform the shutdown procedure, so make sure that the access indicator located at the left of the level meter/counter is not lit, and then turn off the power.

Do not turn on the power until a permissible combination of I/O cards is installed.

- The limitation on the use of I/O cards is not dependent on the version of the AW4416's operating system. However, please be aware that if you are using an operating system version earlier than V2.0, the error messages shown above may not appear.
- This document ("You must read this") is current as of October 2001. To confirm operation of option I/O cards that become available in the future, refer to the AW4416 home page www.aw4416.com.
- If you have questions regarding this matter, please consult your Yamaha dealer.