



# R-N500

---

*Network Receiver*

OWNER'S MANUAL

## Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances.  
Top: 30 cm (11-3/4 in)  
Rear: 20 cm (7-7/8 in)  
Sides: 20 cm (7-7/8 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign objects may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cord disconnected from a wall outlet or the unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the “Troubleshooting” section in the owner’s manual on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press  $\phi$  downward to turn off this unit and then disconnect the AC power plug from the AC wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the system off, then leave this unit alone for cooling.
- 20 Install this unit near the wall outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
- 22 Excessive sound pressure from earphones and headphones can cause hearing loss.

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you set this unit to standby mode by  $\phi$ . In this state, this unit is designed to consume a very small quantity of power.

### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

### CAUTION

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.



This label is required to be attached to a product of which the temperature of the top cover may be hot during operation.

# Contents

## INTRODUCTION

<b>Useful features</b> .....	2
<b>Supplied accessories</b> .....	3
<b>Controls and functions</b> .....	4
Front panel .....	4
Front display .....	6
Rear panel .....	7
Remote control .....	8
Using the remote controls .....	9

## PREPARATION

<b>Connections</b> .....	10
Connecting speakers and source components .....	10
Connecting the speakers .....	11
Connecting the FM and AM antennas .....	12
Connecting to a network .....	13
Connecting power cable .....	13

## BASIC OPERATION

<b>Playback</b> .....	14
Playing a source .....	14
Using the sleep timer .....	16
<b>Listening to FM/AM radio</b> .....	17
FM/AM tuning .....	17
Automatic preset tuning (FM stations only) .....	18
Manual tuning preset .....	18
Recalling a preset station .....	19
Clearing a preset station .....	19
Radio Data System tuning .....	20
<b>Playing back iPod music</b> .....	21
Connecting an iPod .....	21
Playback of iPod content .....	21
<b>Playing back music stored on a USB storage device</b> .....	23
Connecting a USB storage device .....	23
Playback of USB storage device contents .....	23
<b>Playing back music stored on media servers (PCs/NAS)</b> .....	25
Setting the media sharing of music files .....	25
Playback of PC music contents .....	26
<b>Listening to Internet radio</b> .....	27
<b>Playing back iTunes/iPod music via a network (AirPlay)</b> .....	28
Playback of iTunes/iPod music contents .....	28
<b>Listening to Pandora service</b> .....	29
Account setup for Pandora .....	29
Creating Pandora stations .....	30
Playback of Pandora stations .....	31
Deleting Pandora stations .....	32
Editing the Pandora accounts .....	32
<b>Switching information on the front display</b> .....	33

## ADVANCED OPERATION

<b>Configuring playback settings for different playback sources (OPTION menu)</b> .....	34
OPTION menu items .....	34
<b>Configuring various functions (SETUP menu)</b> .....	35
SETUP menu items .....	35
Network Setup .....	36
Max Volume .....	37
Initial Volume .....	37
AutoPowerStdby .....	37
ECO Mode .....	37
DC OUT .....	37
<b>Configuring the system settings (ADVANCED SETUP menu)</b> .....	38
ADVANCED SETUP menu items .....	38
Changing the speaker impedance setting (SP IMP.) ...	38
Selecting the remote control ID (REMOTE ID) .....	38
Restoring the default settings (INIT) .....	39
Updating the firmware (UPDATE) .....	39
Checking the firmware version (VERSION) .....	39
<b>Controlling external devices with the remote control</b> .....	40
Registering the remote control code for a TV .....	40
Registering the remote control codes for playback devices .....	41
Resetting remote control codes .....	42
<b>Updating the unit's firmware via the network</b> .....	43

## ADDITIONAL INFORMATION

<b>Troubleshooting</b> .....	44
<b>Error indications on the front display</b> .....	49
<b>Trademarks</b> .....	50
<b>Specifications</b> .....	51
<b>Index</b> .....	52

(at the end of this manual)

<b>Information about software</b> .....	i
<b>LIST OF REMOTE CONTROL CODES</b> .....	v

INTRODUCTION

PREPARATION

BASIC OPERATION


ADVANCED OPERATION

ADDITIONAL INFORMATION

## Useful features

This unit allows you to:

<b>Play back music from your iPod and USB devices</b>	➔ p.21, 23
<b>Play back music from network sources (PC/NAS, AirPlay)</b>	➔ p.25, 28
<b>Listen to network streaming services</b>	➔ p.27, 29
<b>Listen to FM and AM radio stations</b>	➔ p.17
<b>Boost bass sounds by connecting a subwoofer</b>	➔ p.10
<b>Configure speaker impedance</b>	➔ p.11
<b>Use this unit's remote control to operate other components such as a CD player, BD/DVD player or TV</b>	➔ p.40
<b>Use this unit to eco mode (power saving function)</b>	➔ p.37

-  indicates a tip for your operation.
- This manual explains operations using the supplied remote control.
- This manual describes all the “iPod”, “iPhone” and “iPad” as the “iPod”. “iPod” refers to “iPod”, “iPhone” and “iPad”, unless otherwise specified.

### Easy operation and wireless music playback from iPhone or Android device.

By using the application for smartphone /tablet “NP Controller”, you can control the unit from an iPhone, iPad, iPod touch or Android devices.

#### Features


- Basic operations such as turning the power on/off and adjusting the volume
- Switching the input source
- Displaying FM tuner information
- Selecting songs and starting/stopping playback
- Playing back music from the iPhone or Android device
- To download the application or see the latest information, access the App Store or Google Play and search for “NP Controller.”

For details, please visit Yamaha website.

# Supplied accessories

Check that the following accessories are supplied with the product.


Remote control

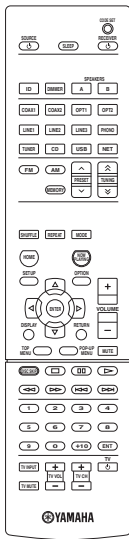


AM antenna



 FM antenna

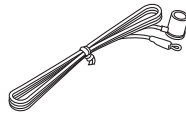

Batteries (x2)  
(AAA, R03, UM-4)

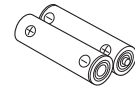 


## ■ Notes on remote controls and batteries

- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
  - places of high humidity, such as near a bath
  - places of high temperatures, such as near a heater or stove
  - places of extremely low temperatures
  - dusty places
- Insert batteries according to the polarity markings (+ and -).
- Change all batteries if you notice the operation range of the remote control narrows.
- If the batteries run out, immediately remove them from the remote control to prevent an explosion or acid leak.
- If you find leaking batteries, discard the batteries immediately, taking care not to touch the leaked material. If the leaked material comes into contact with your skin or gets into your eyes or mouth, rinse it away immediately and consult a doctor. Clean the battery compartment thoroughly before installing new batteries.
- Do not use old batteries together with new ones. This may shorten the life of the new batteries or cause old batteries to leak.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Read the packaging carefully as these different types of batteries may have the same shape and color.
- Before inserting new batteries, wipe the battery compartment clean.
- Keep the batteries in a location out of reach of children. Batteries can be dangerous if a child were to put in his or her mouth.
- If the batteries grow old, the effective operation range of the remote control decreases considerably. If this happens, replace the batteries with new one as soon as possible.
- If you plan not to use the unit for a long period of time, remove the batteries from the unit. Otherwise, the batteries will wear out, possibly resulting in a leakage of battery liquid that may damage the unit.
- Do not throw away batteries with general house waste. Dispose of them correctly in accordance with your local regulations.

# Controls and functions

## Front panel

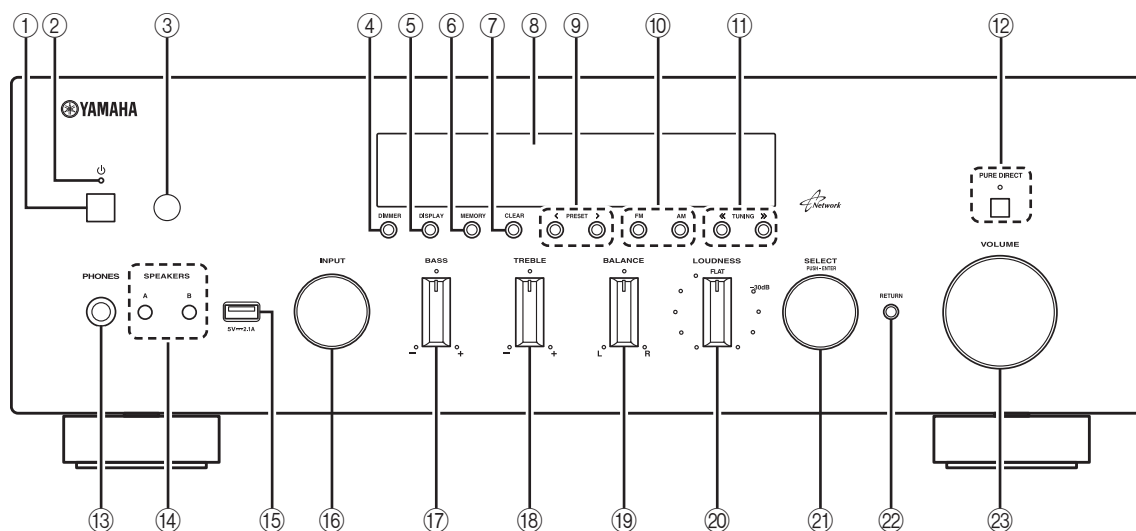

### ① **⏻ (power)**

Turns on/off (standby) the unit.

#### **Note**

In standby mode, this unit consumes a small amount of power to receive infrared signals from the remote control.

### ② **Power indicator**

Lights up as follows:

Brightly lit: Power is on

Dimly lit: Standby mode

### ③ **Remote control sensor**

Receives infrared signals from the remote control.

#### **Note**

Switch the remote control ID between ID1 and ID2 when using multiple Yamaha receivers or amplifiers (p.38).

### ④ **DIMMER**

Changes the brightness level of the front display. Choose brightness from 5 levels by pressing this button repeatedly.



This setting is retained even if you turn off this unit.

### ⑤ **DISPLAY**

Selects the information displayed on the front display (p.33).

### ⑥ **MEMORY**

Stores the current FM/AM station as a preset when TUNER is selected as the input source (p.18).

### ⑦ **CLEAR**

Clears a FM/AM preset station when TUNER is selected as the input source (p.19).

### ⑧ **Front display**

Shows information about the operational status of this unit.

### ⑨ **PRESET </>**

Selects a preset FM/AM station when TUNER is selected as the input source (p.19).

### ⑩ **FM and AM keys**

Switch between FM and AM (p.17).

### ⑪ **TUNING <</>**

Selects the tuning frequency when TUNER is selected as the input source (p.17).

### ⑫ **PURE DIRECT and indicator**

Allows you to listen to a source in the purest possible sound (p.14). The indicator above it lights up and the front display turns off when this function is turned on.

### ⑬ **PHONES jack**

Outputs audio to your headphones for private listening.

### ⑭ **SPEAKERS A/B**

Turns on or off the speaker set connected to the SPEAKERS A and/or SPEAKERS B terminals on the rear panel each time the corresponding button is pressed.

### ⑮ **USB jack**

For connecting a USB storage device (p.23) or an iPod (p.21).

**⑩ INPUT selector**

Selects the input source you want to listen to.

**⑪ BASS control**

Increases or decreases the low frequency response. The center position produces a flat response (p.15).

**⑫ TREBLE control**

Increases or decreases the high frequency response. The center position produces a flat response (p.15).

**⑬ BALANCE control**

Adjusts the sound output balance of the left and right speakers to compensate for sound imbalances caused by speaker locations or listening room conditions (p.15).

**⑭ LOUDNESS control**

Retains a full tonal range at any volume level to compensate for the human ears' loss of sensitivity to high and low-frequency ranges at a low volume level (p.15).

**⑮ SELECT/ENTER (jog dial)**

Turn the dial to select a numeric value or setting, and press the dial to confirm.


**⑯ RETURN**

Returns to the previous indication of the front display.

**⑰ VOLUME control**

Increases or decreases the sound output level.

## Front display

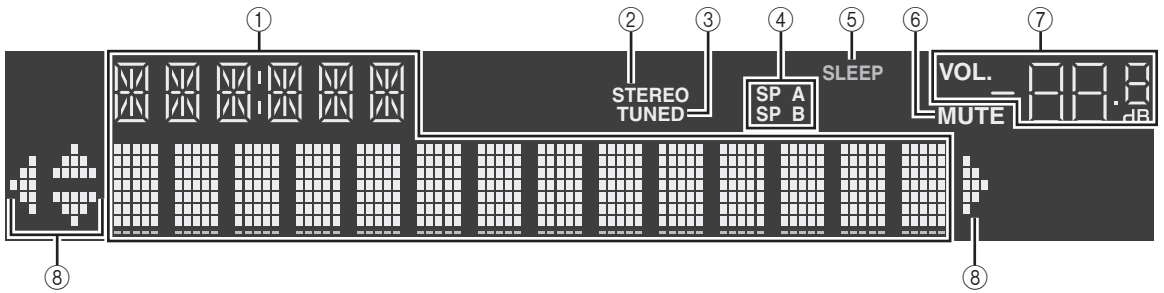

### ① Information display

Displays the current status (such as input name sound mode name).

You can switch the information that is displayed when you press DISPLAY (p.33).

### ② STEREO

Lights up when the unit is receiving a stereo FM radio signal.

### ③ TUNED

Lights up when the unit is receiving an FM/AM radio station signal.

### ④ Speaker indicators

“SP A” lights up when the SPEAKERS A output is enabled and “SP B” lights up when the SPEAKERS B output is enabled.

### ⑤ SLEEP

Lights up when the sleep timer is on.

### ⑥ MUTE

Blinks when audio is muted.

### ⑦ Volume indicator

Indicates the current volume.

### ⑧ Cursor indicators


Indicate the remote control cursor keys currently operational.



You can change the brightness level of the front display by pressing DIMMER on the remote control (p.8).



## Rear panel

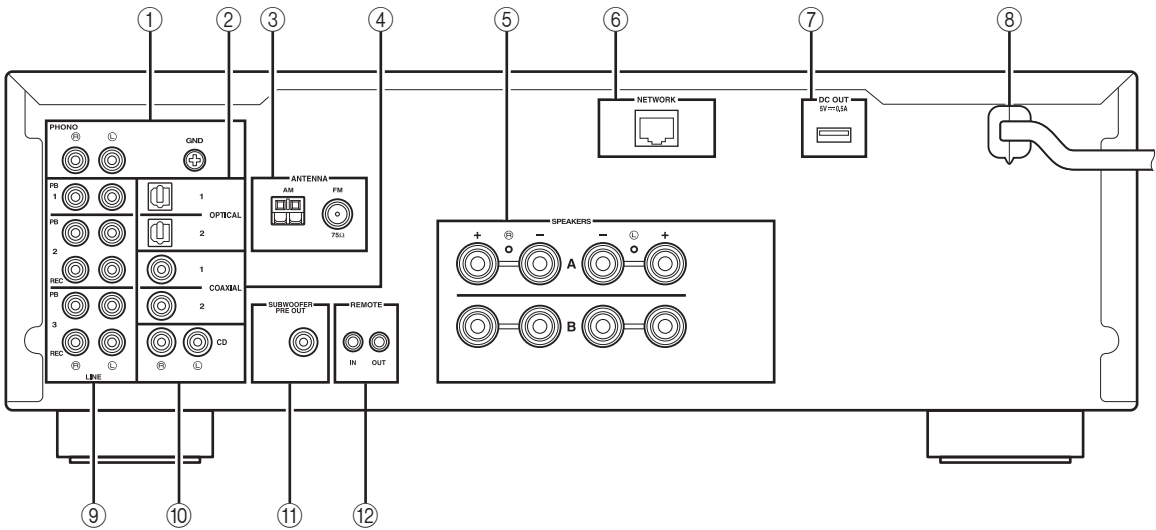

**① PHONO jacks**

For connecting to a turntable (p.10).

**② OPTICAL 1-2 jacks**

For connecting to audio components equipped with optical digital output (p.10).

**③ ANTENNA terminals**

For connecting to FM and AM antennas (p.12).

**④ COAXIAL 1-2 jacks**

For connecting to audio components equipped with a coaxial digital output (p.10).

**⑤ SPEAKERS terminals**

Used to connect speakers (p.11).

**⑥ NETWORK jack**

For connecting to a network (p.13).

**⑦ DC OUT jack**

For supplying power to a Yamaha AV accessory. For details on connections, refer to the instruction manual of the AV accessory.

**⑧ Power cable**

For connecting to an AC wall outlet (p.13).

**⑨ LINE 1-3 jacks**

For connecting to analog audio components (p.10).

**⑩ CD jacks**

For connecting to a CD player (p.10).


**⑪ SUBWOOFER PRE OUT jack**

For connecting to a subwoofer with built-in amplifier (p.10).

**⑫ REMOTE IN/OUT jacks**


When you have another Yamaha component supporting remote connection, as this unit does, an infrared transmitter is not necessary. You can transmit remote signals by connecting an infrared receiver and the REMOTE IN jack of the other component to the REMOTE IN/OUT jacks of this unit, using cables with monaural miniplugs.

Up to six Yamaha components (including this unit) can be connected.

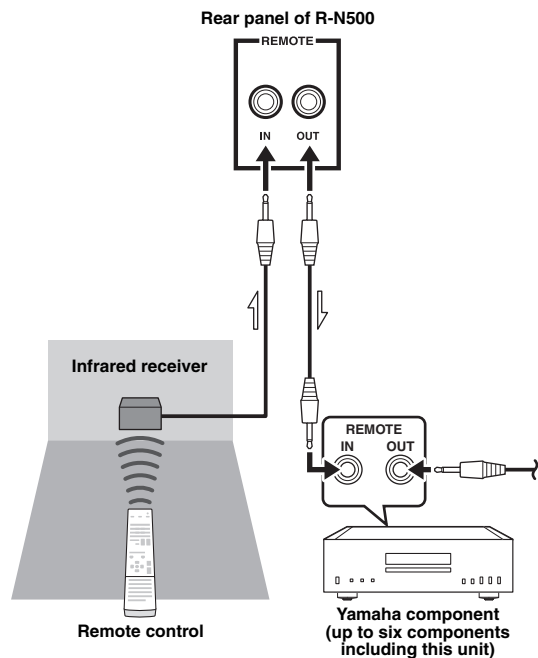

## Remote control

This section describes the function of each key on the remote control used to control this unit or other components made by Yamaha or other manufacturers.

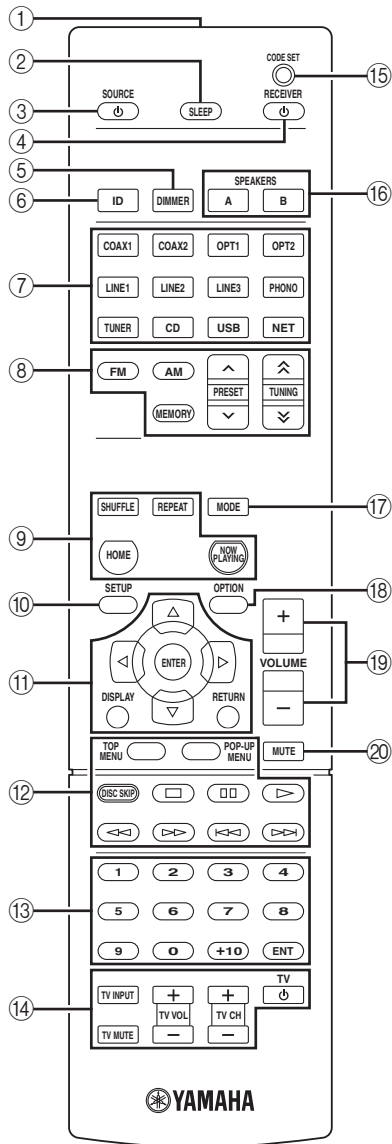

### ① Infrared signal transmitter

Sends infrared signals.

### ② SLEEP

Sets the sleep timer (p.16).

### ③ SOURCE

Turns on/off an external device.

### ④ RECEIVER

Turns on/off (standby) the unit.

### ⑤ DIMMER

Changes the brightness level of the front display. Choose brightness from 5 levels by pressing this key repeatedly.

### ⑥ ID

Changes the remote control ID (p.38).

### ⑦ Input selection keys

Select an input source for playback.

**COAX 1-2** COAXIAL 1-2 jacks

**OPT 1-2** OPTICAL 1-2 jacks

**LINE 1-3** LINE 1-3 jacks

**PHONO** PHONO jacks

**TUNER** FM/AM tuner

**CD** CD jacks

**USB** USB jack

**NET** NETWORK jack (press repeatedly to select a desired network source)

### ⑧ Radio keys

Operate the FM/AM radio (p.17).

**FM** Switches to FM radio.

**AM** Switches to AM radio.

**MEMORY** Registers FM/AM radio stations as presets.

**PRESET** Select a preset station.

**TUNING** Select the radio frequency.

### ⑨ Contents operation keys

**SHUFFLE** Switches shuffle modes.

**REPEAT** Switches repeat modes.

**HOME** Shows top-level menu in the front display.

**NOW PLAYING** Shows the playback information in the front display.

### ⑩ SETUP

Displays the "SETUP" menu (p.35).

### ⑪ Menu operation keys

**Cursor keys** Select a menu or a parameter.

**ENTER** Confirms a selected item.

**RETURN** Returns to the previous state.

**DISPLAY** Switches information shown in the front display.

### ⑫ External device operation keys

Let you play back and select menus and perform other operations for external devices (p.41).

### ⑬ Numeric keys

Let you enter numerical values, such as radio frequencies.

### ⑭ TV operation keys

Let you select TV input and volume, and perform other TV operations (p.40).

### ⑮ CODE SET

Registers remote control codes of external devices on the remote control (p.40).

### ⑯ SPEAKERS A/B

Turns on and off the set of speakers connected to the SPEAKERS A and/or SPEAKERS B terminals on the rear panel of this unit when the corresponding key is pressed.

### ⑰ MODE

Switches between "Stereo" and "Mono" for FM radio reception (p.17).

Switches the iPod operation modes (p.22).

### ⑱ OPTION

Displays the "OPTION" menu (p.34).

### ⑲ VOLUME keys

Adjust the volume.

### ⑳ MUTE


Mutes the audio output.



To operate external devices with the remote control, register a remote control code for each device before using (p.40).


## Using the remote controls

### ■ Installing batteries

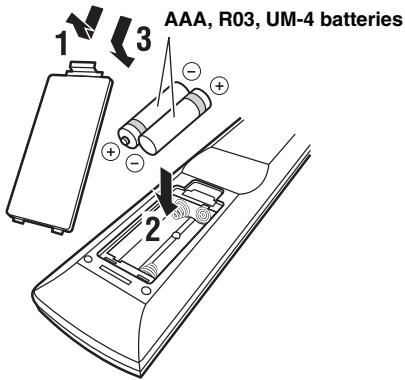

### ■ Operation range

The remote controls transmit a directional infrared beam. Be sure to aim the remote controls directly at the remote control sensor on the front panel of this unit.

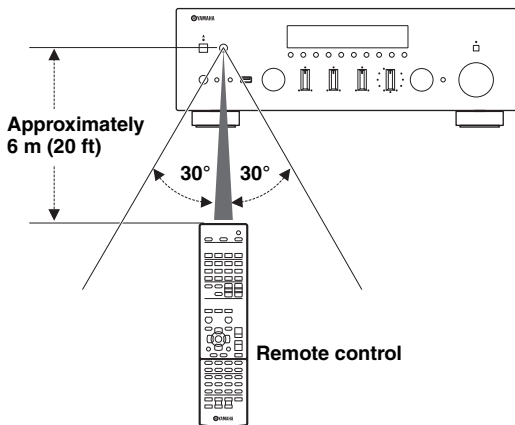


# Connections

## Connecting speakers and source components

### CAUTION

- Do not connect this unit or other components to the main power until all connections between components are complete.
- All connections must be correct: L (left) to L, R (right) to R, “+” to “+” and “-” to “-”. If the connections are faulty, no sound will be heard from the speakers, and if the polarity of the speaker connections is incorrect, the sound will be unnatural and lack bass. Refer to the owner’s manual for each of your components.
- Do not let bare speaker wires touch each other or any metal part of this unit. This could damage this unit and/or the speakers.

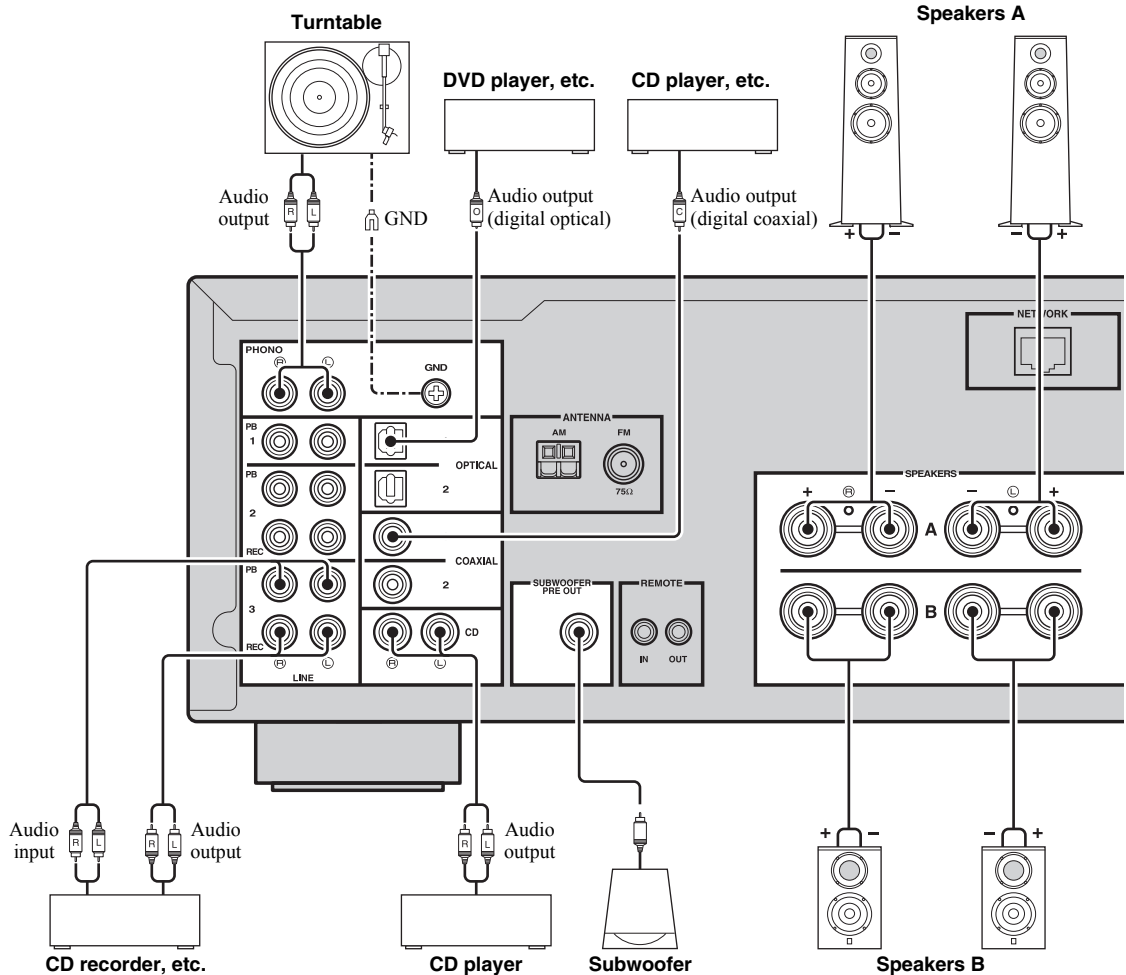

- The PHONO jacks are designed for connecting a turntable with an MM cartridge.
- Connect your turntable to the GND terminal to reduce noise in the signal. However, for some turntables, you may hear less noise without the GND connection.

### Connecting recording devices

You can connect audio recording devices to the LINE 2-3 (REC) jacks. This jack output analog audio signals selected as the input.

#### Notes

- Be sure to use the LINE 2-3 (REC) jacks only for connecting recording devices.
- If you select LINE2 as the input source, the audio output of the LINE 2 (REC) jacks will be muted. If you select LINE3 as the input source, the audio output of the LINE 3 (REC) jacks will be muted.


## Connecting the speakers

### Setting the speaker impedance

Under its default settings, the unit is configured for 8-ohm speakers. When connecting 4 to 6-ohm speakers, set the speaker impedance to “4 Ω MIN”.

**1** Before connecting speakers, connect the power cable to an AC wall outlet.

**2** While holding down RETURN on the front panel, press  $\odot$  (power).

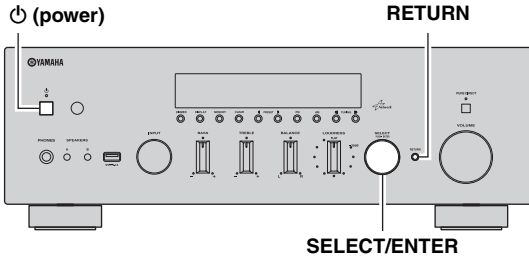

**3** Check that “SP IMP.” is displayed on the front display.

The front display shows the text "SP IMP. . . 8ΩMIN".

**4** Press SELECT/ENTER to select “4 Ω MIN”.


**5** Press  $\odot$  (power) to set the unit to turn off and remove the power cable from the AC wall outlet.

You are now ready to connect the speakers.

### Connecting speaker cables

Speaker cables have two wires. One is for connecting the negative (-) terminal of the unit and the speaker, and the other is for the positive (+) terminal. If the wires are colored to prevent confusion, connect the black wire to the negative and the other wire to the positive terminal.


- ① Remove approximately 10 mm (3/8") of insulation from the ends of the speaker cable and twist the bare wires of the cable firmly together.
- ② Loosen the speaker terminal.
- ③ Insert the bare wires of the cable into the gap on the side (upper right or bottom left) of the terminal.
- ④ Tighten the terminal.

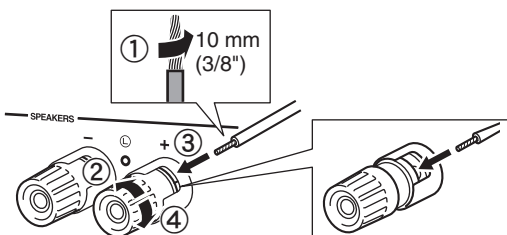

### Connecting via banana plug

(Australia model only)


Tighten the knob and then insert the banana plug into the end of the corresponding terminal.

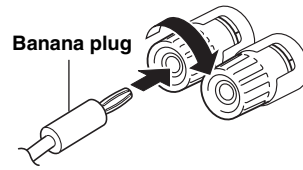

### Bi-wire connection

Bi-wire connection separates the woofer from the combined midrange and tweeter section. A bi-wire compatible speaker has four binding post terminals. These two sets of terminals allow the speaker to be split into two independent sections. With these connections, the mid and high frequency drivers are connected to one set of terminals and the low frequency driver to another set of terminals.

#### This unit

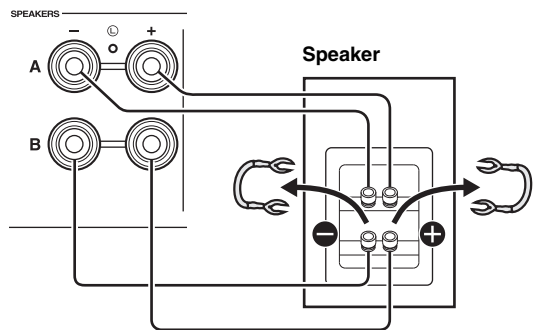



Connect the other speaker to the other set of terminals in the same way.

#### Note

When making bi-wire connections, remove the shorting bridges or cables on the speaker.



To use the bi-wire connections, press SPEAKERS A and SPEAKERS B on the front panel or on the remote control so that both SP A and B light up on the front display.

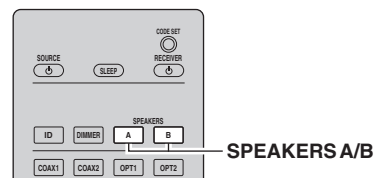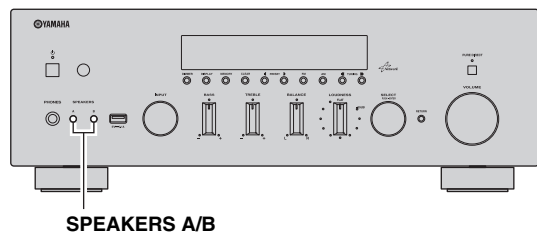


## Connecting the FM and AM antennas


The antennas for receiving FM and AM broadcasts are included with this unit. In general, these antennas should provide sufficient signal strength. Connect each antenna correctly to the designated terminals.

### Note


If you experience poor reception quality, install an outdoor antenna. Consult the nearest authorized Yamaha dealer or service center about outdoor antennas.

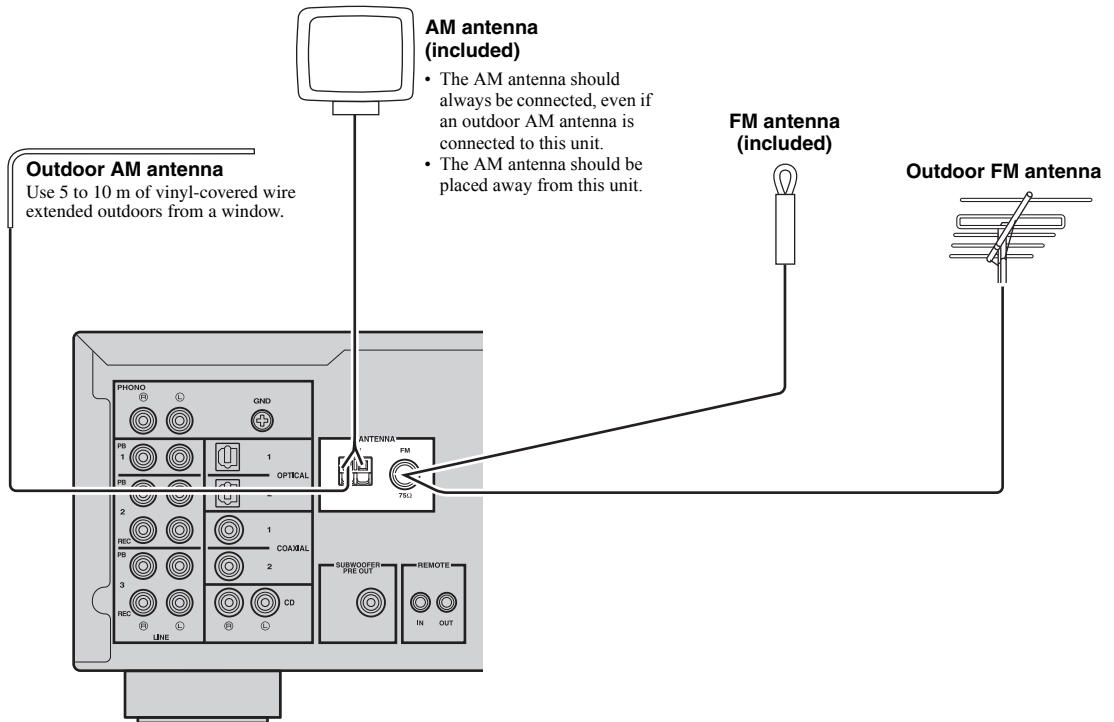

### ■ Assembling the supplied AM antenna

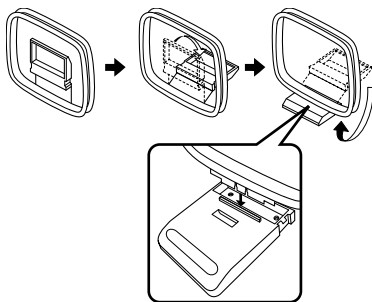


### ■ Connecting the wires of the AM antenna

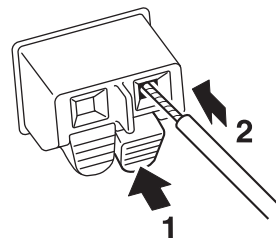

## Connecting to a network

You can enjoy Internet radio or music files stored on media servers, such as PCs and Network Attached Storage (NAS), on the unit.

Connect the unit to your router with a commercially-available STP network cable (CAT-5 or higher straight cable).

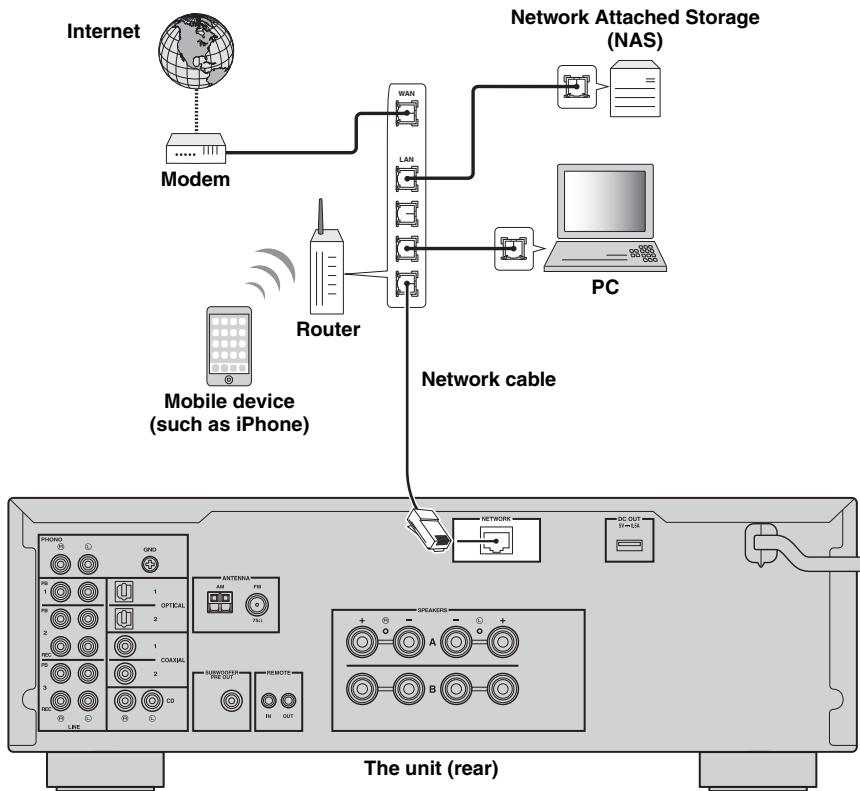


- If you are using a router that supports DHCP, you do not need to configure any network settings for the unit, as the network parameters (such as the IP address) will be assigned automatically to it. You only need to configure the network settings if your router does not support DHCP or if you want to configure the network parameters manually (p.36).
- You can check whether the network parameters (such as IP address) are properly assigned to the unit in “Information” (p.36) in the “SETUP” menu.

### Notes

- Some security software installed on your PC or the firewall settings of network devices (such as a router) may block the access of the unit to the network devices or the Internet. In these cases, configure the security software or firewall settings appropriately.
- Each server must be connected to the same subnet as the unit.
- To use the service via the Internet, broadband connection is strongly recommended.

## Connecting power cable

After all the connections are complete, plug in the power cable.

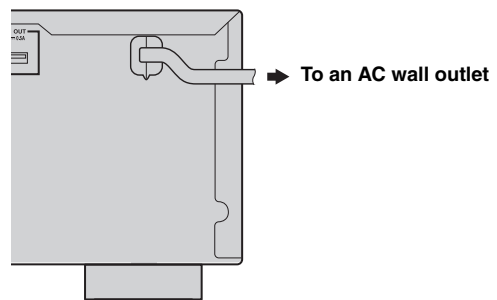



# Playback

## CAUTION

Extreme caution should be exercised when you play back CDs encoded in DTS.

If you play back a CD encoded in DTS on a CD player that does not support DTS, only noise will be heard, and this noise may damage your speakers. Check whether your CD player supports CDs encoded in DTS. Also, check the sound output level of your CD player before you play back a CD encoded in DTS.

## Playing a source

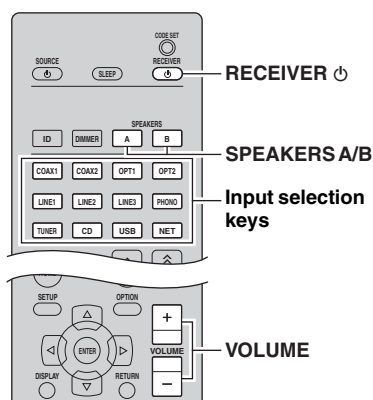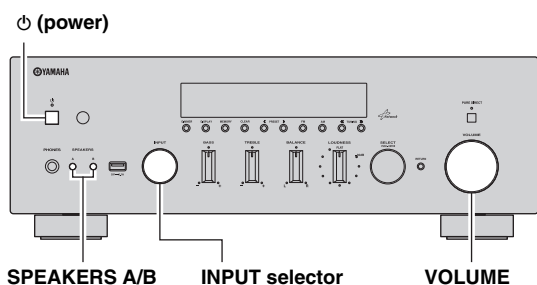

**1** Press **power** on the front panel (or **RECEIVER** on the remote control) to turn on this unit.

**2** Rotate the **INPUT selector** on the front panel (or press one of the input selection keys on the remote control) to select the input source you want to listen to.

**3** Press **SPEAKERS A** and/or **SPEAKERS B** on the front panel or on the remote control to select speakers A and/or speakers B.

When speaker set A or speaker set B are turned on, SP A or SP B is displayed on the front display accordingly (p.6).

## Notes

- When one set of speakers is connected using bi-wire connections, or when using two sets of speakers simultaneously (A and B), make sure SP A and SP B are displayed on the front display.
- When listening with headphones, turn off the speakers.

**4** Play the source.

**5** Rotate the **VOLUME** control on the front panel (or press **VOLUME +/-** on the remote control) to adjust the sound output level.




You can adjust the tonal quality by using the **BASS**, **TREBLE**, **BALANCE** and **LOUDNESS** controls or the **PURE DIRECT** switch on the front panel.

**6** Press **power** on the front panel again (or **RECEIVER** on the remote control) to finish using this unit and set it to standby mode.

## Using the PURE DIRECT switch

Routes input signals from your audio sources so that the input signals bypass the **BASS**, **TREBLE**, **BALANCE** and **LOUDNESS** controls, thus eliminating any alterations to the audio signals and creating the purest possible sound. The **PURE DIRECT** indicator lights up and the front display turns off after a few seconds.

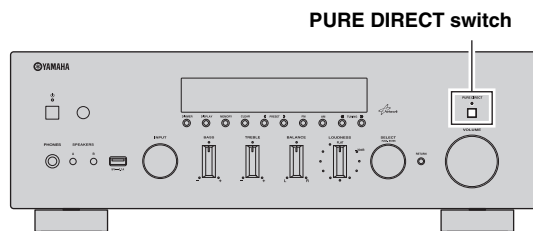


## Notes

- The **BASS**, **TREBLE**, **BALANCE**, and **LOUDNESS** controls do not function while the **PURE DIRECT** feature is turned on.
- This setting is retained even if you turn off this unit.



## ■ Adjusting the BASS and TREBLE controls

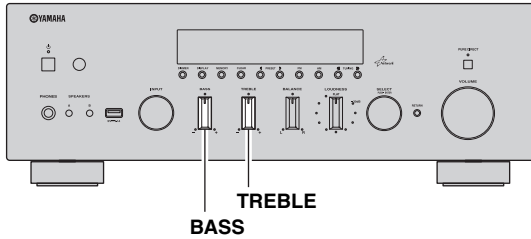

The BASS and TREBLE controls adjust high and low frequency response.

The center position produces a flat response.

### BASS

When you feel there is not enough bass (low frequency sound), rotate clockwise to boost. When you feel there is too much bass, rotate counterclockwise to suppress.

Control range: -10 dB to +10 dB (20 Hz)


### TREBLE

When you feel there is not enough treble (high frequency sound), rotate clockwise to boost. When you feel there is too much treble, rotate counterclockwise to suppress.


Control range: -10 dB to +10 dB (20 kHz)





## ■ Adjusting the BALANCE control

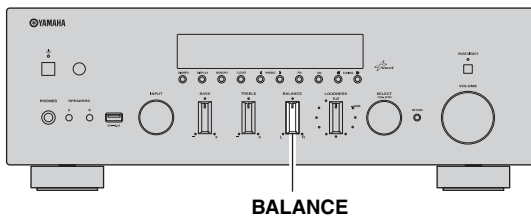

The BALANCE control adjusts the sound output balance of the left and right speakers to compensate for sound imbalance caused by speaker locations or listening room conditions.

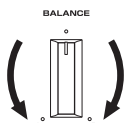

## ■ Adjusting the LOUDNESS control

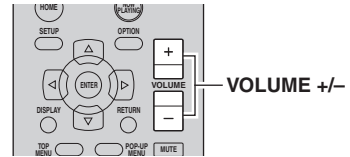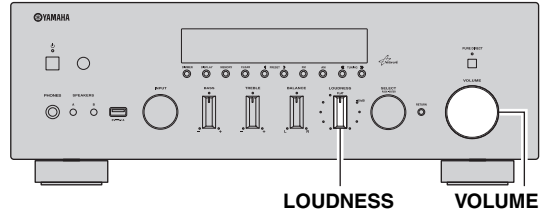


Retain a full tonal range at any volume level, thus compensating for the human ears' loss of sensitivity to high and low-frequency ranges at low volume.

### CAUTION

 
If the PURE DIRECT switch is turned on with the LOUDNESS control set at a certain level, the input signals bypass the LOUDNESS control, resulting in a sudden increase in the sound output level. To prevent your ears or the speakers from being damaged, be sure to press the PURE DIRECT switch after lowering the sound output level or after checking that the LOUDNESS control is properly set.

### 1 Set the LOUDNESS control to the FLAT position.

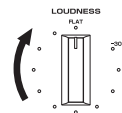

### 2 Rotate the VOLUME control on the front panel (or press VOLUME +/- on the remote control) to set the sound output level to the loudest listening level that you would listen to.


### 3 Rotate the LOUDNESS control until the desired volume is obtained.

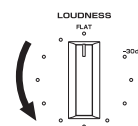

After setting the LOUDNESS control, enjoy listening to music at your preferred volume level. If the effect of the LOUDNESS control setting is too strong or weak, readjust the LOUDNESS control.

## Using the sleep timer

Use this feature to automatically set this unit to standby mode after a certain amount of time. The sleep timer is useful when you are going to sleep while this unit is playing or recording a source.

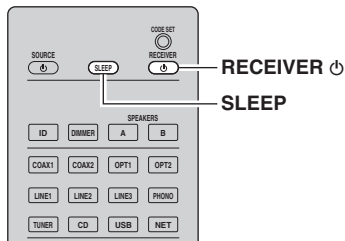


### Note

The sleep timer can only be set with the remote control.

### 1 Press SLEEP repeatedly to set the amount of time before this unit is set to standby mode.

 Each time you press SLEEP, the front display changes as shown below.

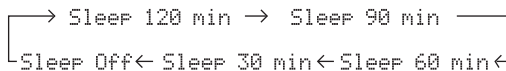


The SLEEP indicator blinks while setting the amount of time for the sleep timer.




If the sleep timer is set, the SLEEP indicator on the front display lights up.



- To disable the sleep timer, select “Sleep Off”.
- The sleep timer setting can also be canceled by pressing RECEIVER  on the remote control to set this unit to standby mode.

# Listening to FM/AM radio


## FM/AM tuning

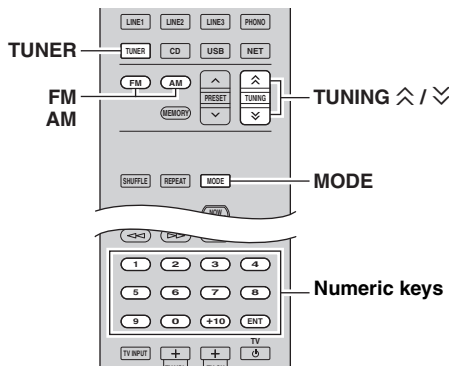

- 1 Press TUNER to select TUNER as the input source.**
- 2 Press FM or AM to select the reception band (FM or AM).**
- 3 Press and hold TUNING  $\wedge$  /  $\vee$  for more than 1 second to begin tuning.**  
Press  $\wedge$  to tune in to a higher frequency.  
Press  $\vee$  to tune in to a lower frequency.

The frequency of the received station is shown in the front display.

 If a broadcast is being received, “TUNED” indicator on the front display will be lit. If a stereo broadcast is being received, the “STEREO” indicator will also lit.

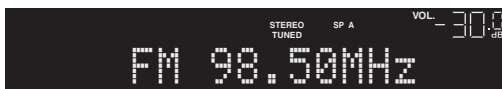

Frequency

If the tuning search does not stop at the desired station because the station signals are weak, use the following keys to set a frequency.

### TUNING $\wedge$ / $\vee$ :

Increase/decrease the frequency.

### Numeric keys:

Enter a frequency directly. For example, to select 98.50 MHz, press “9”, “8”, “5” and “0” (or ENT).

### Notes

- When you press the numeric keys on the remote control during preset tuning, a preset number is selected. Set the tuning mode to frequency tuning mode using TUNING  $\wedge$  /  $\vee$  before pressing the numeric keys.

- “Wrong Station!” is displayed on the front display if you enter a frequency that is out of receivable range. Make sure that the entered frequency is correct.



When the signal reception for an FM radio station is unstable, switching to monaural may improve it.

### Improving FM reception

If the signal from the station is weak and the sound quality is not good, set the FM band reception mode to monaural mode to improve reception.

- 1 Press MODE repeatedly to select “Stereo” (automatic stereo mode) or “Mono” (monaural mode) when this unit is tuned in to an FM radio station.**

- When Mono is selected, FM broadcasts will be heard in monaural sound.
- When Stereo is selected and an FM station with a stereo broadcast is tuned in, the broadcast will be heard in stereo.

### Note

The STEREO indicator on the front panel lights up while listening to a station in stereo.

## Automatic preset tuning (FM stations only)


You can use the automatic preset tuning function to automatically register FM stations as presets. This function enables this unit to automatically tune in to FM stations that have a strong signal and store up to 40 of those stations in order. You can then easily recall any preset station by selecting its preset number.

### Notes

- If a station is registered to a preset number that already has a station registered to it, the previously registered station is overwritten.
- If the station you want to store is weak in signal strength, try using the manual preset tuning method.



- FM stations registered as presets using the automatic preset registration feature will be heard in stereo.
- (U.K. model only)  
Only Radio Data System broadcasting stations are stored automatically by the Auto Preset function.

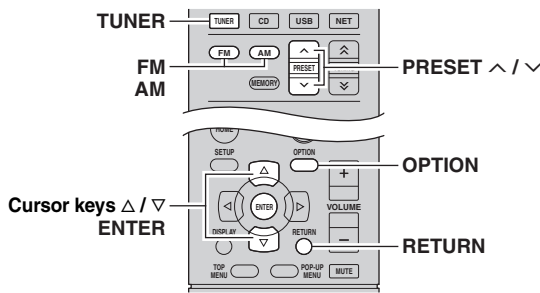

- 1 Press **TUNER** to select **TUNER** as the input source.
- 2 Press **OPTION** on the remote control. The “OPTION” menu is displayed (p.34).
- 3 Press **Δ / ∇** to select “Auto Preset”, and then press **ENTER**.



This unit starts scanning the FM band about 5 seconds later from the lowest frequency upwards. To begin scanning immediately, hold down the ENTER key.




- Before scanning begins, you can specify the first preset number to be used by pressing PRESET  $\wedge/\vee$  or cursor key ( $\Delta/\nabla$ ) on the remote control.
- To cancel scanning, press FM, AM or RETURN.



When scanning is complete, “FINISH” is displayed and then the display returns to original state.

## Manual tuning preset

You can manually register up to 40 FM/AM stations (40 total). You can then easily recall any preset station by selecting its preset number.

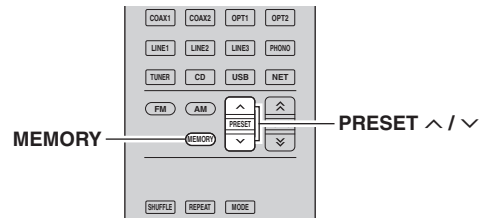


### ■ Registering a radio station manually

Select a radio station manually and register it to a preset number.

- 1 Follow “FM/AM tuning” (p.17) to tune into the desired radio station.
- 2 Hold down **MEMORY** for more than **2 seconds**.



 
To select a preset number for registering, press MEMORY once after tuning into the desired radio station, press PRESET  $\wedge/\vee$  to select a preset number, and then press MEMORY again.

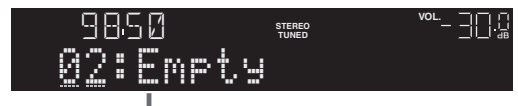

“Empty” (not in use) or the frequency currently registered

## Recalling a preset station

You can recall preset stations that were registered using automatic station preset or manual station preset.

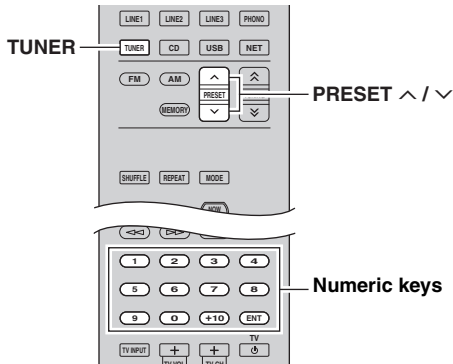

**1** Press TUNER to select “TUNER” as the input source.


**2** Press PRESET  $\wedge$  /  $\vee$  to select a preset number.



- Preset numbers to which no stations are registered are skipped.
- “No Presets” is displayed if no stations are registered.
- You can directly select a preset number by pressing the numeric keys on the remote control while recalling a preset station. “Empty” is displayed on the display if you enter a preset number to which no station is registered. “Wrong Num.” is displayed if you enter an invalid number.
- When you press the numeric keys on the remote control during normal tuning, a frequency is entered. Set the tuning mode to preset tuning mode using PRESET  $\wedge$  /  $\vee$  before pressing numeric keys.

## Clearing a preset station

Clear radio stations registered to the preset numbers.

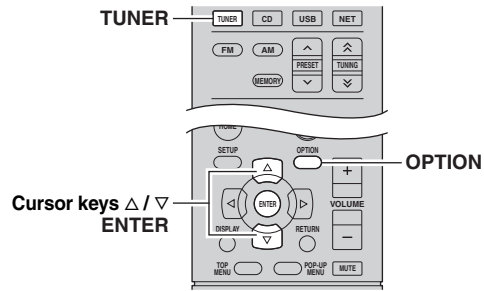


**1** Press TUNER to select “TUNER” as the input source.

**2** Press OPTION.

**3** Use the cursor keys to select “Clear Preset” and press ENTER.



 **4** Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select a preset station to be cleared and press ENTER.

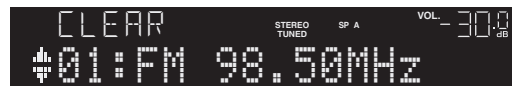

Preset station to be cleared

If the preset station is cleared, “Cleared” appears and then the next in-use preset number is displayed.



**5** Repeat step 4 until all desired preset stations are cleared.

**6** To exit from the menu, press OPTION.



You can clear a preset station from the front panel.


- ① Press CLEAR on the front panel.
- ② Rotate SELECT/ENTER to select the preset station that you want to clear.
- ③ Press SELECT/ENTER or CLEAR to clear the preset station.

## Radio Data System tuning

(U.K.model only)

Radio Data System is a data transmission system used by FM stations in many countries. The unit can receive various types of Radio Data System data, such as “Program Service”, “Program Type,” “Radio Text” and “Clock Time”, when it is tuned into a Radio Data System broadcasting station.

### ■ Displaying the Radio Data System information

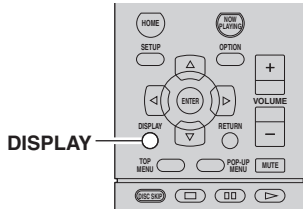

#### 1 Tune into the desired Radio Data System broadcasting station.



We recommend using “Auto Preset” to tune into the Radio Data System broadcasting stations (p.18).

 
#### 2 Press DISPLAY.

Each time you press the key, the displayed item changes.



Item name

About 3 seconds later, the corresponding information for the displayed item appears.

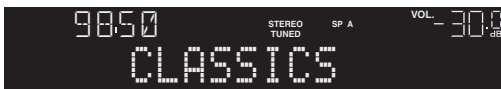

Information


<b>Program Service</b>	Program service name
<b>Program Type</b>	Current program type
<b>Radio Text</b>	Information on the current program
<b>Clock Time</b>	Current time
<b>Frequency</b>	Frequency

#### Note

“Program Service”, “Program Type”, “Radio Text”, and “Clock Time” are not displayed if the radio station does not provide the Radio Data System service.

### ■ Receiving traffic information automatically

When “TUNER” is selected as the input source, the unit automatically receives traffic information. To enable this function, follow the procedure below to set the traffic information station.

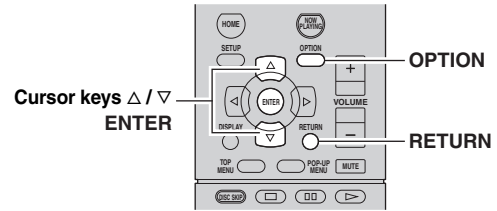

#### 1 When “TUNER” is selected as the input source, press OPTION.

#### 2 Use the cursor keys to select “TrafficProgram” and press ENTER.

The traffic information station search will start in 5 seconds. Press ENTER again to start the search immediately.



- To search upward/downward from the current frequency, press the cursor keys (Δ/▽) while “READY” is displayed.
- To cancel the search, press RETURN.
- Texts in parentheses denote indicators on the front display.

The following screen appears for about 3 seconds when the search finishes.



Traffic information station (frequency)

#### Note

“TP Not Found” appears for about 3 seconds when no traffic information stations are found.

# Playing back iPod music

You can play back iPod music on the unit using a USB cable supplied with the iPod.

## Note

An iPod may not be detected by the unit or some features may not be compatible, depending on the model or software version of the iPod.

### Made for


- iPod touch (1st, 2nd, 3rd, 4th and 5th generation)
- iPod nano (2nd, 3rd, 4th, 5th, 6th and 7th generation)
- iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone
- iPad (4th generation), iPad mini, iPad (3rd generation), iPad 2, iPad (as of August 2013)

## Connecting an iPod

Connect your iPod to the unit with the USB cable supplied with the iPod.

- 1 Connect the USB cable to the iPod.
- 2 Connect the USB cable to the USB jack.

The unit (front)

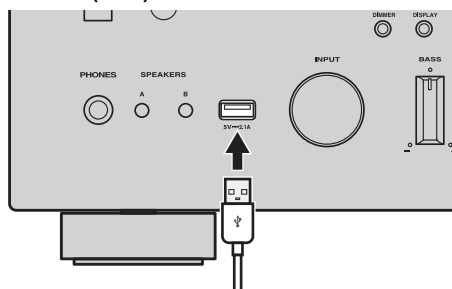

The iPod charges while it is connected to the unit. If you set the unit to standby mode while the iPod is charging, the iPod continues to charge up to 4 hours. If "NET Standby" (p.36) in the "SETUP" menu is set to "On", it continues to charge without limit.

## Note


Disconnect the iPod from the USB jack when it is not in use.

## Playback of iPod content

Follow the procedure below to operate the iPod contents and start playback.

## Note

"\_" (underscore) will be displayed for characters not supported by the unit.

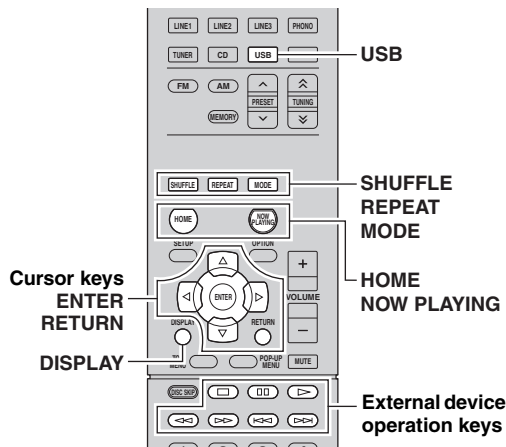

- 1 Press USB to select "USB" as the input source.



- 2 Use the cursor keys to select an item and press ENTER.

If a song is selected, playback starts and the playback information is displayed.



- To return to the previous state, press RETURN.
- If you press the DISPLAY repeatedly, you can switch the playback information on the front display (p.33).
- To operate the iPod manually to select content or control playback, switch to the simple play mode (p.22).

Use the following remote control keys to control playback.

External device operation keys	Function
	Resumes playback from pause.
	Stops playback.
	Stops playback temporarily.
	Skips forward/backward.
	Searches forward/backward (by holding down).
<b>HOME</b>	Displays the top menu of the iPod.
<b>NOW PLAYING</b>	Displays information about the song that's playing.

### ■ Operating the iPod itself or remote control (simple play)

#### 1 Press MODE to switch to the simple play mode.

Between the simple play mode, only the input name is displayed on the front display. If you confirm the playback information, see the iPod screen.



If you want to exit the simple play mode, press MODE again.

#### 2 Operate your iPod itself or the remote control to start playback.

Operational remote control keys	Function	
<b>Cursor keys</b>	Select an item.	
<b>ENTER</b>	Confirms the selection.	
<b>RETURN</b>	Returns to the previous state.	
<b>External device operation keys</b>		Starts playback or stops playback temporarily.
		Stops playback.
		Skips forward/backward.
		Searches forward/backward (while holding down).

### ■ Repeat/shuffle settings

You can configure the repeat/shuffle settings of your iPod.

#### 1 If the input source is “USB,” press REPEAT or SHUFFLE repeatedly to select the playback method.

Item	Setting	Function
<b>Repeat</b>	Off	Turns off the repeat function.
	One	Plays back the current song repeatedly.
	All	Plays back all songs repeatedly.
<b>Shuffle</b>	Off	Turns off the shuffle function.
	Songs	Plays back songs in random order.
	Albums	Plays back albums in random order.



- Repeat/shuffle can also be specified in the “OPTION” menu (p.34).
- The operation or display of repeat/shuffle may differ, depending on the type or software version of iPod used.



# Playing back music stored on a USB storage device

You can play back music files stored on a USB storage device on the unit. Refer to the instruction manuals for the USB storage device for more information.

The unit supports USB mass storage class devices (FAT16 or FAT32 format).


## Notes

- The unit supports WAV (PCM format only), MP3, WMA, MPEG-4 AAC and FLAC files (1- or 2-channel audio only).
- The unit is compatible with sampling rate of up to 192 kHz for WAV and FLAC files, and 48 kHz for other files.
- Some features may not be compatible, depending on the model or manufacturer of the USB storage device.
- Digital Rights Management (DRM) contents cannot be played back.

## Connecting a USB storage device

### 1 Connect the USB storage device to the USB jack.

The unit (front)

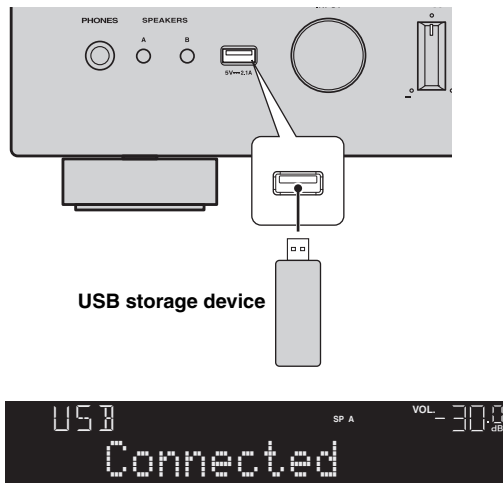

If the USB storage device contains many files, it may take time to load the them. In this case, “Loading...” appears in the front display.

## Notes


- Disconnect the USB storage device from the USB jack when it is not in use.
- Stop playback of the USB storage device before disconnect it from the USB jack.
- You cannot connect the PC to the USB jack of the unit.

## Playback of USB storage device contents

Follow the procedure below to operate the USB storage device contents and start playback.

## Note

“\_” (underscore) will be displayed for characters not supported by the unit.

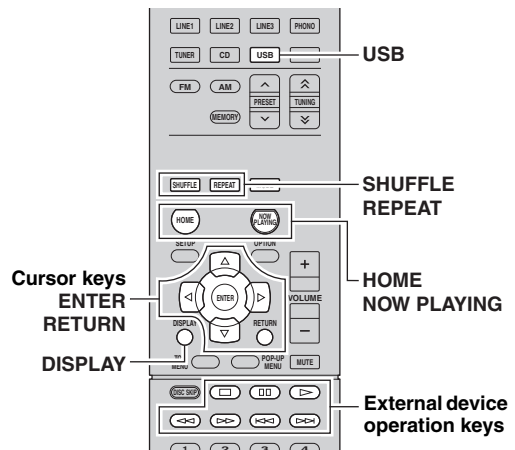

### 1 Press USB to select “USB” as the input source.



### 2 Use the cursor keys to select an item and press ENTER.






If a song is selected, playback starts and the playback information is displayed.



## Notes

- To return to the previous state, press RETURN.
- If you press the DISPLAY repeatedly, you can switch the playback information on the front display (p.33).
- If you select a file that is not supported by this unit, a warning icon appears at top of the file name.

Use the following remote control keys to control playback.

External device operation keys	Function
	Resumes playback from pause.
	Stops playback.
	Stops playback temporarily.
	Skips forward/backward.
	
<b>HOME</b>	Displays the top menu of the USB device.
<b>NOW PLAYING</b>	Displays information about the song that's playing.

### ■ Repeat/shuffle settings

You can configure the repeat/shuffle settings for playback of USB storage device contents.

#### 1 If the input source is “USB,” press REPEAT or SHUFFLE repeatedly to select the playback method.

Item	Setting	Function
<b>Repeat</b>	Off	Turns off the repeat function.
	One	Plays back the current song repeatedly.
	All	Plays back all songs in the current album (folder) repeatedly.
<b>Shuffle</b>	Off	Turns off the shuffle function.
	On	Plays back songs in the current album (folder) in random order.



Repeat/shuffle can also be specified in the “OPTION” menu (p.34).

# Playing back music stored on media servers (PCs/NAS)

You can play back music files stored on your PC or DLNA-compatible NAS on the unit.

## Notes

- To use this function, the unit and your PC must be connected to the same router (p.13). You can check whether the network parameters (such as the IP address) are properly assigned to the unit in “Information” (p.36) in the “SETUP” menu.
- The unit supports playback of WAV (PCM format only), MP3, WMA, MPEG-4 AAC and FLAC files.
- The unit is compatible with sampling rates of up to 192 kHz for WAV and FLAC files, and 48 kHz for other files.
- To play back FLAC files, you need to install server software that supports sharing of FLAC files via DLNA on your PC or use a NAS that supports FLAC files.

## Setting the media sharing of music files


To play back music files in your computer with this unit, you need to make the media sharing setting between the unit and computer (Windows Media Player 11 or later). In here, setting with Windows Media Player in Windows 7 is taken as an example.

**1 Start Windows Media Player 12 on your PC.**


**2 Select “Stream”, then “Turn on media streaming.”**

The control panel window of your PC is shown.


(Example of English version)

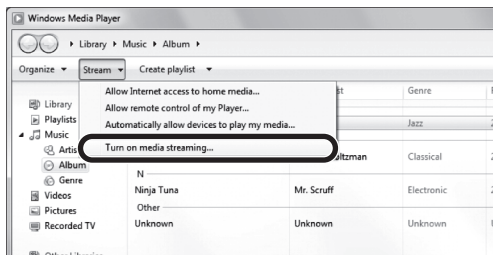

**3 Click “Turn on media streaming.”**

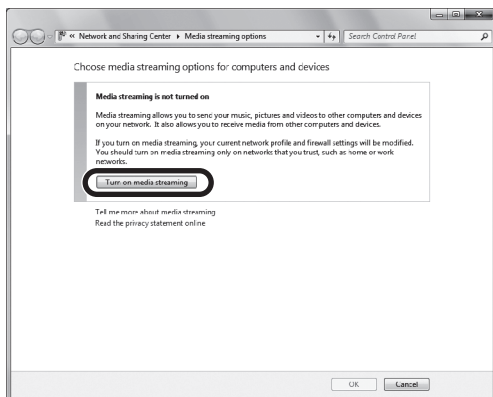

**4 Select “Allowed” from the drop-down list next to “R-N500”.**

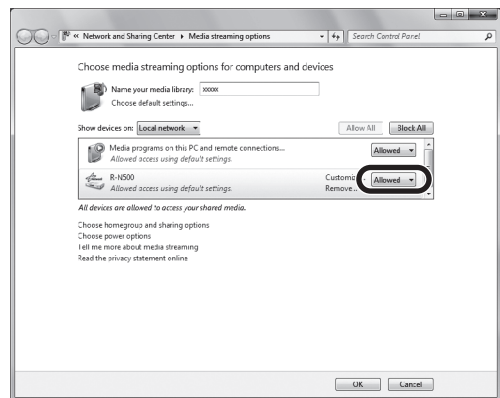

**5 Click “OK” to exit.**



For details on media sharing settings, refer to Windows Media Player help.

• **For Windows Media Player 11**

- ① Start the Windows Media Player 11 on your PC.
- ② Select “Library” then “Media Sharing”.
- ③ Check the “Share my media to” box, select the “R-N500” icon, and click “Allow”.
- ④ Click “OK” to exit.

• **For a PC or a NAS with other DLNA server software installed**


Refer to the user’s manual of your device or software and configure the media sharing settings.

## Playback of PC music contents

Follow the procedure below to operate the PC music contents and start playback.

### Note

“\_” (underscore) will be displayed for characters not supported by the unit.

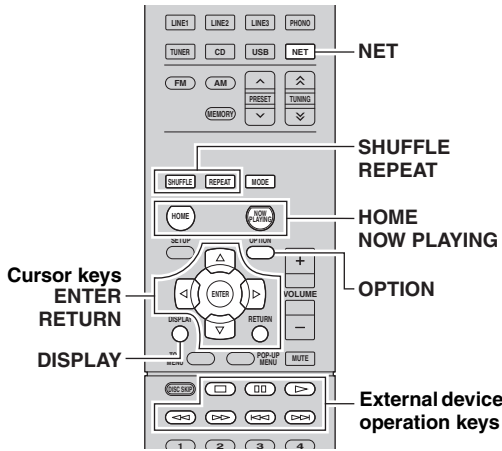

Use the following remote control keys to control playback.

External device operation keys	Function
	Resumes playback from pause.
	Stops playback.
	Stops playback temporarily.
	Skips forward/backward.
<b>HOME</b>	Displays the root directory of the music server.
<b>NOW PLAYING</b>	Displays information about the song that's playing.



You can also use a DLNA-compatible Digital Media Controller (DMC) to control playback. For details, see “DMC Control” (p.36).

### Repeat/shuffle settings

You can configure the repeat/shuffle settings for the playback of PC music content.

- 1 Press **NET** repeatedly to select “SERVER” as the input source.



Music server name



If playback of a music file selected from the unit is ongoing on your PC, the playback information is displayed.

- 2 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select a music server and press **ENTER**.

- 3 Use the cursor keys to select an item and press **ENTER**.

If a song is selected, playback starts and the playback information is displayed.



- To return to the previous state, press **RETURN**.
- If you press the **DISPLAY** repeatedly, you can switch the playback information on the front display (p.33).
- If you select a file that is not supported by this unit, appears at top of the file name.

- 1 When the input source is “SERVER,” press **REPEAT** or **SHUFFLE** repeatedly to select the playback method.

Item	Setting	Function
<b>Repeat</b>	Off	Turns off the repeat function.
	One	Plays back the current song repeatedly.
	All	Plays back all songs in the current album (folder) repeatedly.
<b>Shuffle</b>	Off	Turns off the shuffle function.
	On	Plays back songs in the current album (folder) in random order.



Repeat/shuffle can also be specified in the “OPTION” menu (p.34).

# Listening to Internet radio

You can listen to Internet radio stations from all over the world.

## Notes


- To use this function, the unit must be connected to the Internet (p.13). You can check whether the network parameters (such as the IP address) are properly assigned to the unit in “Information” (p.36) in the “SETUP” menu.
- You may not be able to receive some Internet radio stations.
- The unit uses the vTuner Internet radio station database service.
- This service may be discontinued without notice.



- To return to the previous state, press RETURN.
- If you press the DISPLAY repeatedly, you can switch the playback information on the front display (p.33).
- By accessing the following website from your computer's web browser, you can register your favorite Internet radio stations in the Bookmarks folder.
  - Before you register an Internet radio station, play back any Internet radio station on this unit.
  - To create the account that is required for registration, you'll need the vTuner ID of this unit (the MAC address of this unit) and an email address. You can confirm the vTuner ID of this unit in “Information” of the “Network Setup (SETUP menu)” (p.36).

<http://yradio.vtuner.com/>

- Use the external device operation key (□) to stop playback.
- Some information may not be available depending on the station.

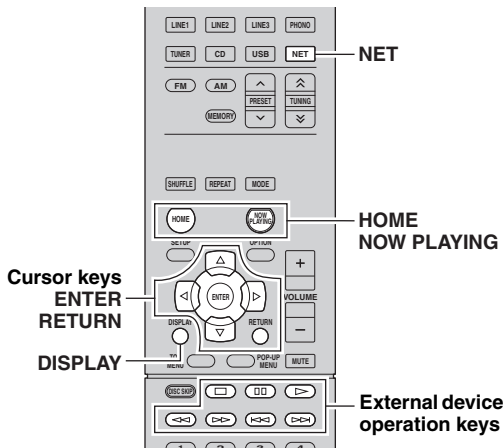

## 1 Press NET repeatedly to select “NET RADIO” as the input source.

The station list appears on the front display.



## 2 Use the cursor keys to select an item and press ENTER.


If an Internet radio station is selected, playback starts and the playback information is displayed.



If you want to display the station list during playback, press HOME. To return the playback information, press NOW PLAYING.

# Playing back iTunes/iPod music via a network (AirPlay)

The AirPlay function allows you to play back iTunes/iPod music on the unit via network.

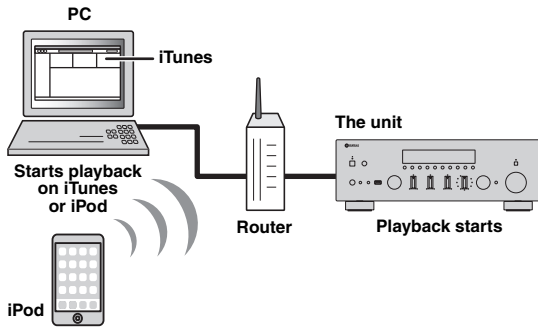

## Note


To use this function, the unit and your PC or iPod must be connected to the same router (p.13). You can check whether the network parameters (such as the IP address) are properly assigned to the unit in "Information" (p.36) in the "SETUP" menu.

AirPlay works with iPhone, iPad, and iPod touch with iOS 4.3.3 or later, Mac with OS X Mountain Lion, and Mac and PC with iTunes 10.2.2 or later. (as of August 2013)

## Playback of iTunes/iPod music contents

Follow the procedure below to play back iTunes/iPod music contents on the unit.

 
### 1 Turn on the unit, and start iTunes on the PC or display the playback screen on the iPod.

If the iTunes/iPod recognizes the unit, the AirPlay icon (  ) appears.

iTunes (example)



iPod (example)

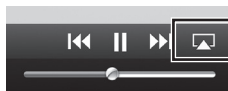


## Note

If the icon does not appear, check whether the unit and PC/iPod are connected to the router properly.

### 2 On the iTunes/iPod, click (tap) the AirPlay icon and select the unit (network name of the unit) as the audio output device.

 iTunes (example)

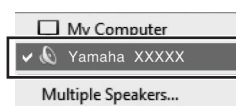

iPod (example)



Network name of the unit

### 3 Select a song and start playback.

The unit automatically selects "AirPlay" as the input source and starts playback. The playback information is displayed on the front display.








- If you press the DISPLAY repeatedly, you can switch the playback information on the front display (p.33).
- You can turn on the unit automatically when starting playback on iTunes or iPod by setting "NET Standby" (p.36) in the "SETUP" menu to "On".
- You can edit the network name (the unit's name on the network) displayed on iTunes/iPod in "Network Name" (p.37) in the "SETUP" menu.
- If you select the other input source on the unit during playback, playback on the iTunes/iPod stops automatically.
- You can adjust the unit's volume from the iTunes/iPod during playback. To disable volume controls from iTunes/iPod, set "Vol.Interlock" (p.34) in the "OPTION" menu to "Off".

## Caution

- When you use iTunes/iPod controls to adjust volume, the volume may be unexpectedly loud. This could result in damage to the unit or speakers. If the volume suddenly increases during playback, stop playback on the iTunes/iPod immediately.


Use the following remote control keys to control playback.

External device operation keys		Resumes playback from pause.
		Stops playback.
		Stops playback temporarily.
		Skips forward/backward.
		Changes the Repeat settings
Repeat		Changes the Repeat settings
Shuffle		Changes the Shuffle settings

## Note

To control iTunes playback with the remote control of the unit, you need to configure the iTunes preferences to enable iTunes control from remote speakers in advance.

iTunes (example of English version)

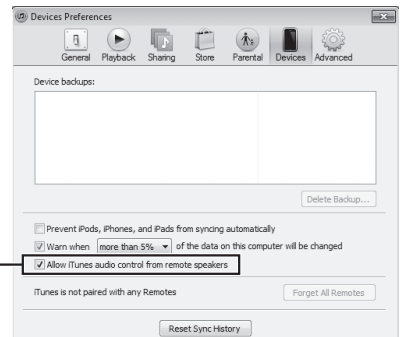

Check this box

# Listening to Pandora service

(Australia model only)

The Pandora service is available in the U.S.A, Australia, New Zealand only.

Pandora is a free, personalized Internet radio service playing only music you love. Enter your favorite artists or tracks and Pandora will bring an effortless personal soundtrack into your living room. Rate tracks as they play, because Pandora caters to your tastes and adapts stations to your feedback on the spot.

Since all Pandora accounts are portable, you can always access your own personalized Pandora stations from any computer or device in the United States, Australia and New Zealand that support Pandora. Pandora is currently only available within these countries due to licensing restrictions.

Pandora is always free, with the option to upgrade to Pandora One which is completely free of all advertising and comes with additional features.

For more information, <http://www.pandora.com>

## Notes


- To use this function, the unit must be connected to the Internet. For detail on connections and network settings (p.13).
- If any error message appears on the front display, see “Error indications on the front display” (p.49)

## Account setup for Pandora

If you have not set up your Pandora account yet, the account setup display appears when you select “Pandora”. To start using the Pandora service on the unit, follow the procedure below to set up your Pandora account.



You can register up to eight Pandora accounts on the unit. For details, see “Editing the Pandora accounts” (p.32).

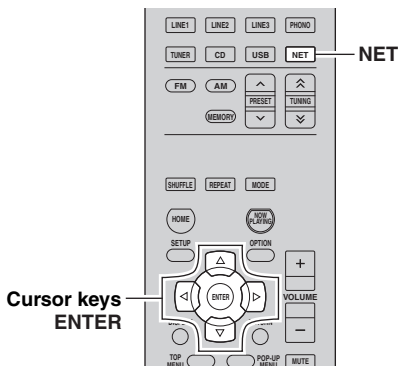

## 1 Press NET repeatedly to select “Pandora” as the input source.

If you have not set up your Pandora account on the unit yet, “Sign in” appears on the front display.



## 2 If you have a Pandora account, press ENTER. If you do not have a Pandora account, use the cursor keys to select “Activation” and press ENTER.

## 3 Perform the following procedure.

### If you select “Sign in” in Step 2

- ① Use the cursor keys to enter your Pandora account e-mail address.
- ② Press ENTER to enter password entry.
- ③ Use the cursor keys to enter your Pandora password.
- ④ Press ENTER to access your account.  
If you have successfully logged into your account, “Login OK” appears on the front display.

If “CREATE” appears on the front display, you can create Pandora stations. Refer to step 4 in “Creating Pandora stations” (p.30) for details.



- If you want to delete characters, press numeric key 1.
- If you want to insert characters, press numeric key 2.
- Rotate SELECT/ENTER on the front panel, you can change characters quickly.

## Notes

When login goes failed, “Login Failed” appears on front display.

- If you want to retry same password, use cursor key to select “Retry” and press ENTER.
- If you want to reset the password, select the “Forgot” and press ENTER twice. An e-mail message containing a link to reset your password will be sent to your e-mail address that you entered in step ①. Please check your mail and click it.



**If you select “Activation” in Step 2**

- Write down the URL and active code shown in the front display.



- Use a web browser on your PC to access the URL and follow the on-screen instruction to register for a Pandora account.
- After activation, press ENTER to log in with your new Pandora account.


If “CREATE” appears on the front display, you can create Pandora stations. Refer to step 4 in “Creating Pandora stations” (p.30) for details.

## Creating Pandora stations

Pandora lets you create up to 100 custom radio stations that play only music you love. Just type in your favorite track or artist and Pandora will create a station that plays similar music.



- If there are no Pandora stations in your account, the “CREATE” appears automatically. In this case, proceed to Step 4 and create Pandora stations.
- When the Pandora station is created to the maximum, “Max Stations” appears on the front display.

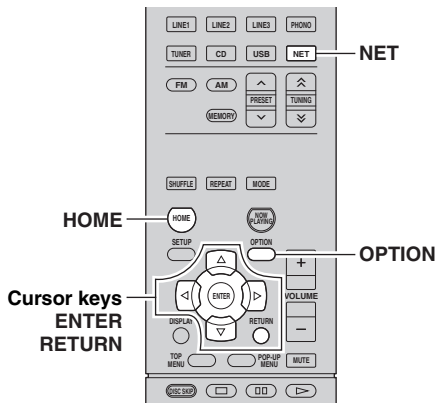

- Press NET repeatedly to select “Pandora” as the input source.**

The station list appears on the front display. If HOME is pressed, the station list can be displayed at any time. When a station list is not displayed, perform the following operations after press HOME.



station list

- Press OPTION.**

- Use the cursor keys (Δ / ▽) to select “Create Station” and press ENTER.**

- Use the cursor keys to enter the name of an artist or a track (all or part of the name) and press ENTER.**



- If you want to delete characters, press numeric key 1.
- If you want to insert characters, press numeric key 2.

- Perform the following procedure.**

**If both artists and tracks are found**



- Use the cursor keys to select “Artist” or “Track” and press ENTER.

- Use the cursor keys to select a desired item and press ENTER.

The selected item is added to your Pandora stations. The playback starts automatically and the playback information is displayed.

**If either artists or tracks are found**

Use the cursor keys to select a desired item and press ENTER.

The selected item is added to your Pandora stations. The playback starts automatically and the playback information is displayed.

**If only one item is found**

In this case, the item found is automatically added to your Pandora stations. The playback starts automatically and the playback information is displayed.

**If no items are found**

“No content” appears on front display. Press ENTER and repeat Step 4 to try another keyword.




To return to the previous state, press RETURN.




## Playback of Pandora stations

If you have created Pandora stations, follow the procedure below to select a Pandora station to be played.

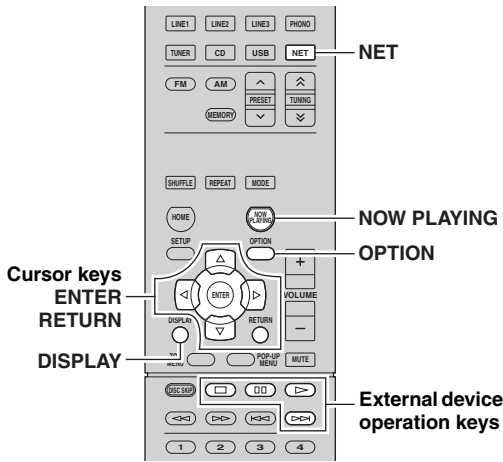

### 1 Press NET repeatedly to select “Pandora” as the input source.

The station list appears on the front display. When a station list is not displayed, perform the following operations after press HOME.

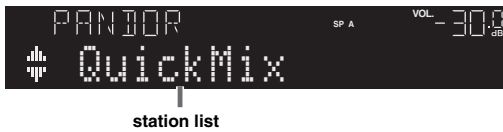

If playback of any Pandora station is ongoing, the playback information is displayed.

### 2 Use the cursor keys (Δ / ▽) to select a Pandora station and press ENTER.

Playback of the selected station starts and the playback information is displayed.

If NOW PLAYING is pressed during a playback, the playback information can be displayed at any time.



- If you press the DISPLAY repeatedly, you can switch the playback information on the front display (p.33).
- You can also use the external device operation keys (▶, ◻, ◻◻, ◻◻◻) on the remote control to control playback.
- If you display the station list during playback, 📶 appears at top of the Pandora station name.

### 3 Perform the following procedure if you needed.

#### If you want to set a rating of track

- ① When the playback information is displayed, press OPTION.
- ② Use the cursor keys (Δ / ▽) to select “RateThisTrack” and press ENTER.



- ③ Use the cursor keys (Δ / ▽) to select rating and press ENTER.

<b>I like it</b>	Gives positive feedback (thumbs up) for the current track. 📶 (thumbs up) is displayed in the track name.
<b>I dont like it</b>	Gives negative feedback (thumbs down) for the current track and skip to the next track. If you can not skip at skip limit, 📶 (thumbs down) is displayed in the track name.
<b>Tired of it</b>	Requests not to playback the current track for a month and skip to the next track.

#### If you want to bookmark track/artist

- ① When the playback information is displayed, press OPTION.
- ② Use the cursor keys (Δ / ▽) to select “Bookmark” and press ENTER.
- ③ Use the cursor keys (Δ / ▽) to select bookmark type and press ENTER.

<b>Track</b>	Adds the current track to your bookmarks on your Pandora profile page at “ <a href="http://www.pandora.com">http://www.pandora.com</a> ”.
<b>Artist</b>	Adds the current artist to your bookmarks on your Pandora profile page at “ <a href="http://www.pandora.com">http://www.pandora.com</a> ”.


#### If you want to confirm why you have to play

- ① When the playback information is displayed, press OPTION.
- ② Use the cursor keys (Δ / ▽) to select “WhyThisTrack?” and press ENTER.
- ③ Return to previous state, press RETURN.

Some functions are not available during advertisement broadcast.

## Deleting Pandora stations


The created Pandora station can be deleting in the following procedures.

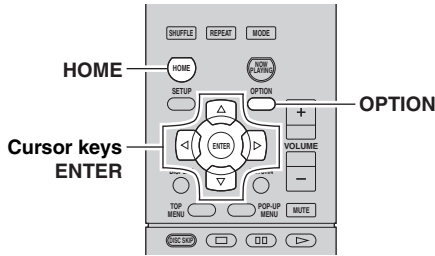

- 1 Press HOME to display the station list.
- 2 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select Pandora station to be delete.
- 3 Press OPTION.
- 4 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select “Delete station” and press ENTER.
- 5 Use the cursor keys ( $\triangleleft$  /  $\triangleright$ ) to select “OK” and press ENTER.

## Editing the Pandora accounts

You can register up to 8 Pandora accounts on the unit. Follow the procedure below to add or remove Pandora accounts, or switch to another Pandora account.

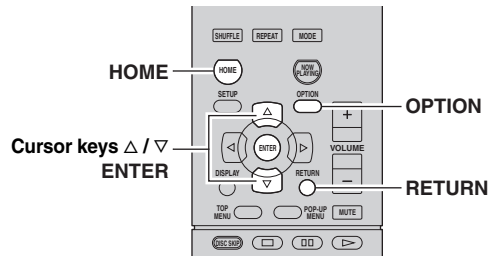

- 1 Press HOME to display the station list.
- 2 Press OPTION.
- 3 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select “PandoraAccount” and press ENTER.
- 4 Perform the following procedure.

### To add a new Pandora account

- ① Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select “Add Account” and press ENTER.
- ② Follow from Step 3 of “Account setup for Pandora” (p.29).



When the Pandora account is created to the maximum, “Max account” appears on the front display.

### To remove a Pandora account

- ① Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select “Remove Account” and press ENTER.
- ② Use the cursor keys to select a Pandora account to be removed and press ENTER.
- ③ Use the cursor keys to select “OK” and press ENTER.
- ④ Return to previous state, press RETURN.


### To switch to another Pandora account

- ① Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select “Switch User” and press ENTER.
- ② Use the cursor keys to select a Pandora account to be used and press ENTER.

Pandora and Pandora Internet Radio logo are registered trademarks or trademarks of Pandora Media, Inc. in the United States and/or other countries.

# Switching information on the front display

When you select USB or a network source as the input source, you can switch playback information on the front display.

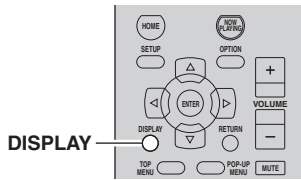

## 1 Press DISPLAY.

Each time you press the key, the displayed item changes.



Item name

About 3 seconds later, the corresponding information for the displayed item appears.




Information

Input source	Item
<b>USB (iPod) SERVER AirPlay</b>	Song (song title), Artist (artist name), Album (album name), Time
<b>NET RADIO</b>	Song (song title), Album (album name), Station (station name), Time
<b>Pandora *</b>	Track (track title), Station (station name), Album (album name), Time

\* Australia model only

# Configuring playback settings for different playback sources (OPTION menu)

You can configure separate playback settings for different playback sources. This menu allows you to easily configure settings during playback.

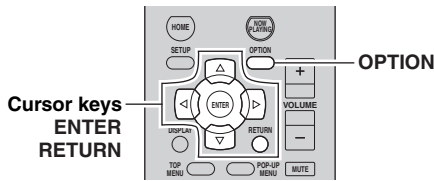

## 1 Press OPTION.



## 2 Use the cursor keys to select an item and press ENTER.



To return to the previous state during menu operations, press RETURN.

## 3 Use the cursor keys (◀/▶) to select a setting.

## 4 To exit from the menu, press OPTION.

### OPTION menu items



Available items vary depending on the selected input source.

Item	Function	Page
<b>Volume Trim</b>	Corrects volume differences between input sources.	34
<b>Signal Info</b>	Displays information about the audio signal.	34
<b>Auto Preset</b>	Automatically registers FM radio stations with strong signals as presets.	18
<b>Clear Preset</b>	Clear radio stations registered to preset numbers.	19
<b>TrafficProgram *1</b>	Automatically searches for a traffic information station.	20
<b>Repeat</b>	Configures the repeat setting for the iPod, USB storage device, or media server.	22, 24, 26
<b>Shuffle</b>	Configures the shuffle setting for the iPod, USB storage device, or media server.	22, 24, 26
<b>Vol.Interlock</b>	Enables/disables volume controls from iTunes/iPod via AirPlay.	34

Item	Function	Page
<b>PandoraAccount *2</b> <b>Create Station *2</b> <b>Delete Station *2</b>	(While the Pandora station list is displayed) Configures the Pandora accounts and create/delete Pandora stations.	32
<b>RateThisTrack *2</b> <b>Bookmark *2</b> <b>WhyThisTrack? *2</b>	(While the Pandora playback information is displayed) Configures the track rating, bookmark, etc.	31

\*1U.K. model only

\*2Australia model only

### ■ Volume Trim

Corrects volume differences between input sources. If you are bothered by volume differences when switching between input sources, use this function to correct it.



This setting is applied separately to each input source.

### Setting range

-10.0 dB to +10.0 dB (0.5 dB increments)

### Default

0.0 dB

### ■ Signal Info

Displays information about audio signal.

### Choices

<b>FORMAT</b>	Audio format of the input signal
<b>CHAN</b>	If other than two-channel audio is being input, the indication will be “---.”
<b>SAMPL</b>	The number of samples per second of the input digital signal



To switch the information on the front display, press the cursor keys (Δ / ▽) repeatedly.

### ■ Vol.Interlock


Enables/disables volume controls from iTunes/iPod via AirPlay.

### Settings

<b>Off</b>	Disables volume controls from iTunes/iPod.
<b>Ltd (default)</b>	Enables volume controls from iTunes/iPod within the limited range (-80.0 dB to 0.0 dB and mute).
<b>Full</b>	Enables volume controls from iTunes/iPod in the full range (-80.0 dB to +16.5 dB and mute).

# Configuring various functions (SETUP menu)

You can configure the unit's various functions.

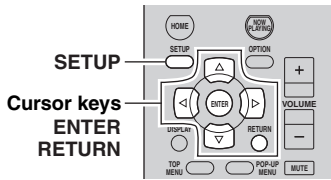

## 1 Press SETUP.



## 2 Use the cursor keys (Δ / ▽) to select a menu.



## 3 Press ENTER.



## 4 Use the cursor keys (◀ / ▶) to select a setting and press ENTER.



To return to the previous state during menu operations, press RETURN.

## 5 Exit from the menu, press SETUP.

## SETUP menu items

Menu item	Function	Page
<b>Information</b>	Displays the network information on the unit.	36
<b>IP Address</b>	Configures the network parameters (such as IP address).	36
<b>MAC Filter</b>	Filter Sets the MAC address filter to limit access to the unit from other network devices.	36
<b>DMC Control</b>	Selects whether to allow a DLNA-compatible Digital Media Controller (DMC) to control playback.	36
<b>NET Standby</b>	Selects whether to enable/disable the function that turns on the unit from other network devices.	36
<b>Network Name</b>	Edits the network name (the unit's name on the network) displayed on other network devices.	37
<b>Update</b>	Updates the firmware via the network.	37
<b>Max Volume</b>	Sets the maximum volume to prevent excessive loudness.	37
<b>Initial Volume</b>	Sets the initial volume for when this receiver is turned on.	37
<b>AutoPowerStdby</b>	Sets the amount of time for the auto-standby function.	37
<b>ECO Mode</b>	Enables/disables the eco mode (power saving mode).	37
<b>DC OUT</b>	Selects how to supply power through the DC OUT jack.	37

## Network Setup

Configures the network settings.

### Information

Displays the network information on the unit.

<b>NewFwAvailable</b>	Appears if an update for this unit's firmware is available (p.43).
<b>STATUS</b>	The connection status of the NETWORK jack
<b>MAC</b>	MAC address
<b>IP</b>	IP address
<b>SUBNET</b>	Subnet mask
<b>GTWY</b>	The IP address of the default gateway
<b>DNS P</b>	The IP address of the primary DNS server
<b>DNS S</b>	The IP address of the secondary DNS server
<b>VTUNER</b>	The ID of the Internet radio (vTuner)

### IP Address

Configures the network parameters (such as IP address).

#### DHCP

Select whether to use a DHCP server.

<b>Off</b>	Does not use a DHCP server. Configure the network parameters manually. For details, see "Manual network settings".
<b>On (default)</b>	Uses a DHCP server to automatically obtain the unit's network parameters (such as IP address).

#### Manual network settings

**1 Set "DHCP" to "Off".**

**2 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select a parameter type.**

<b>Address</b>	Specifies an IP address.
<b>Subnet Mask</b>	Specifies a subnet mask.
<b>Default Gateway</b>	Specifies the IP address of the default gateway.
<b>DNS Server(P)</b>	Specifies the IP address of the primary DNS server.
<b>DNS Server(S)</b>	Specifies the IP address of the secondary DNS server.

**3 Use the cursor keys ( $\leftarrow$  /  $\rightarrow$ ) to select the edit position.**



(Example: IP address setting)

Use the cursor keys ( $\leftarrow$  /  $\rightarrow$ ) to switch between segments (Address1, Address2...) of the address.

**4 Use the Cursor keys ( $\Delta$  /  $\nabla$ ) or numeric keys to change a value.**

**5 To exit from the menu, press SETUP.**

### MAC Filter

Sets the MAC address filter to limit access to the unit from other network devices.

#### Filter

Enables/disables the MAC address filter.

<b>Off (default)</b>	Disables the MAC address filter.
<b>On</b>	Enables the MAC address filter. In "MAC Address 01-10", specify the MAC addresses of the network devices that will be permitted access to the unit.

#### MAC address filter settings

**1 Set "Filter" to "On".**

**2 Use the cursor keys ( $\Delta$  /  $\nabla$ ) to select an MAC address number (01 to 10).**

**3 Use the cursor keys ( $\leftarrow$  /  $\rightarrow$ ) to move the edit position and the cursor keys ( $\Delta$  /  $\nabla$ ) to select a value.**

**4 To exit from the menu, press SETUP.**



When using "AirPlay" (p.28) and "DMC Control" (p.36), you cannot limit access from network devices regardless of the MAC address filter.

### DMC Control

Selects whether to allow DLNA-compatible Digital Media Controller (DMC) to control playback.

<b>Disable</b>	Does not allow DMCs to control playback.
<b>Enable (default)</b>	Allows DMCs to control playback.



A Digital Media Controller (DMC) is a device that can control other network devices through the network. When this function is enabled, you can control playback of the unit from DMCs (such as Windows Media Player 12) on the same network.

### NET Standby

Selects whether the unit can be turned on from other network devices (network standby).

<b>Off (default)</b>	Disables the network standby function.
<b>On</b>	Enables the network standby function. (The unit consumes more power than when "Off" is selected.)

## ■ Network Name

Edits the network name (the unit's name on the network) displayed on other network devices.

### 1 Select "Network Name".



### 2 Press ENTER to enter the name edit display.



### 3 Use the cursor keys (◀/▶) to move the edit position and the cursor keys (△/▽) to select a character.



### 4 To confirm the new name, press ENTER.

### 5 To exit from the menu, press SETUP.

## ■ Update

Updates the firmware via the network.

<b>Perform Update</b>	Starts the process to update the unit's firmware. For details, see "Updating the unit's firmware via the network" (p.43).
<b>Version</b>	Displays the version of the firmware installed on the unit.
<b>ID</b>	Displays the system ID number.

## Max Volume

Sets the maximum volume to prevent excessive loudness.

### Setting range

-30.0 dB to +15.0 dB (5.0 dB increments), +16.5 dB

### Default

+16.5 dB

## Initial Volume

Sets the initial volume when the receiver is turned on.

<b>Off (default)</b>	Sets the level to the volume level of the unit when it last entered standby mode.
<b>Mute</b>	Sets the unit to mute the audio output.
<b>-80.0 dB to +16.5 dB (0.5 dB increments)</b>	Sets the level to the specified volume level.

## AutoPowerStdby

Sets the amount of time for the auto-standby function. If you do not operate the unit for the specified time, the unit will automatically go into standby mode.

<b>Off</b>	Does not set the unit to standby mode automatically.
<b>2 hours, 4 hours, 8 hours, 12 hours</b>	Sets the unit to standby mode when you have not operated the unit for the specified time. For example, when "2 hours" is selected, the unit will switch to standby mode if you do not operate it for 2 hours.



- (U.K. model) Set to "8 hours" by default.
- (Australia model) Set to "Off" by default.
- Just before the unit enters standby mode, "AutoPowerStdby" appears and then countdown starts in the front display.

## ECO Mode

Enables/disables the eco (power saving) mode.

When the eco mode is enabled, you can reduce the unit's power consumption.

<b>Off (default)</b>	Disables the eco mode.
<b>On</b>	Enables the eco mode.

### Notes

- Be sure to press ENTER to restart the unit after selecting a setting. The new setting will take effect after the unit is restarted.
- When "ECO Mode" is set to "On", the front display may become dark.
- If you want to play audio at high volume, set "ECO Mode" to "Off".

## DC OUT

Configures the DC OUT jack setting.

### Power Mode

Selects how to supply power to the Yamaha AV accessory connected to the DC OUT jack.


<b>Cont (default)</b>	Supplies power through the DC OUT jack continuously regardless of the power state (on/standby) of the unit.
<b>Sync</b>	Supplies power through the DC OUT jack only when the unit is turned on.

# Configuring the system settings (ADVANCED SETUP menu)

Configure the system settings of the unit while viewing the front display.

**1 Turn off the unit.**

**2 While holding down RETURN on the front panel, press ⏻ (power).**

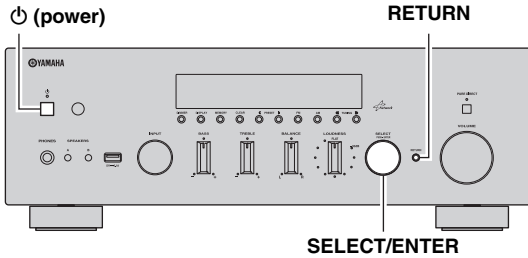

**3 Rotate SELECT/ENTER to select an item.**

**4 Press SELECT/ENTER to select a setting.**

**5 Press ⏻ (power) to set the unit to turn off and turn it on again.**

The new settings take effect.

## ADVANCED SETUP menu items

Item	Function	Page
SP IMP.	Changes the speaker impedance setting.	38
REMOTE ID	Selects the unit's remote control ID.	38
INIT	Restores the default settings.	39
UPDATE	Updates the firmware.	39
VERSION	Checks the version of firmware currently installed on the unit.	39

## Changing the speaker impedance setting (SP IMP.)

SP IMP. " 8ΩMIN

Change the unit's speaker impedance settings depending on the impedance of the speakers connected.

### Settings

<b>4 Ω MIN</b>	Select this option when you connect 4-ohm speakers to the unit.
<b>8 Ω MIN (default)</b>	Select this option when you connect 8-ohm or higher speakers to the unit.

## Selecting the remote control ID (REMOTE ID)

REMOTE ID " ID2

Change the unit's remote control ID so that it matches the remote control's ID (default: ID2). When using multiple Yamaha AV receivers, you can set each remote control with a unique remote control ID for its corresponding receiver.

### Settings

ID1, ID2 (default)

### ■ Changing the remote control ID of the remote control

**1 To select ID1, while holding down the ID, hold down numeric key "1" for more than 3 seconds.**

**To select ID2, while holding down the ID, hold down numeric key "2" for more than 3 seconds.**

Once the remote control code is successfully registered, "Rem: Success" appears on the front display.

If "Rem: Fail" appears on the front display, registration has failed. Repeat from Step 1.



The registered remote control codes (p.40) are not cleared even if you change the remote control ID.



## Restoring the default settings (INIT)

INIT " " " " CANCEL

Restores the default settings for the unit.

### Choices

<b>ALL</b>	Restores the default settings for the unit.
<b>CANCEL</b>	Does not perform an initialization.

## Updating the firmware (UPDATE)

UPDATE " " " " " USB

New firmware that provides additional features or product improvements will be released as needed. Updates can be downloaded from our website. If the unit is connected to the Internet, you can download the firmware via the network. For details, refer to the information supplied with updates.

### ■ Firmware update procedure

Do not perform this procedure unless firmware update is necessary. Also, make sure you read the information supplied with updates before updating the firmware.

- 1 Press SELECT/ENTER repeatedly to select “USB” or “NETWORK” and press DISPLAY to start firmware update.**

### Choices

<b>USB</b>	Update the firmware using a USB memory device.
<b>NETWORK</b>	Update the firmware via the network.



If the unit detects newer firmware over the network, “NewFwAvailable” appears as the “Information” menu item in “Network Setup”. In this case, you can also update the unit’s firmware by following the procedure in “Updating the unit’s firmware via the network” (p.43).

## Checking the firmware version (VERSION)

VERSION " " XX.XX

Check the version of firmware currently installed on the unit.



- You can also check the firmware version in “Update” (p.37) in the “SETUP” menu.
- It may take a while until the firmware version is displayed.

# Controlling external devices with the remote control

You can use the unit's remote control to operate external devices (such as CD players) if you have registered the remote control code of the external device.

## Notes


- You cannot control an external device that does not have a remote control sensor.
- Ensure that the remote control ID of the external device is set to "ID1". If any other ID is selected, the remote control operations may not work properly.
- If the unit's remote control is without batteries for more than 2 minutes, the registered codes may be cleared. If this happens, insert new batteries and register the codes again.

## Registering the remote control code for a TV

You can use the unit's remote control to operate a TV if you have registered its remote control code.



You can also register your TV's remote control code to the unit's input selection keys (p.41). This would allow you to use the cursor keys or numeric keys to operate the TV (this function may not be available on some TV models).

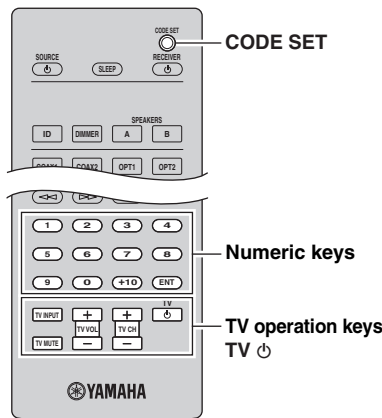

## 4 Use the numeric keys to enter the 4-digit remote control code.

Once the remote control code is successfully registered, "Rem: Success" appears on the front display.

If "Rem: Fail" appears on the front display, registration has failed. Repeat from Step 2.

## TV operations

Once you have registered the remote control code for your TV, you can control it using the TV operation keys, regardless of the input source selected on the unit.

TV operation keys	INPUT	Switches the video inputs of the TV.
	MUTE	Mutes the audio output of the TV.
	TV VOL	Adjust the volume of the TV.
	TV CH	Switch the channels of the TV
	TV	Turns on/off the TV.

## 1 Refer to "LIST OF REMOTE CONTROL CODES" (end of this manual) to find your TV's remote control code.



If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.


## 2 Press CODE SET using a pointed object such as the tip of a ballpoint pen.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

## 3 Press TV .


## Registering the remote control codes for playback devices

You can use the unit's remote control to operate playback devices if you have registered their remote control codes. You can also use the input selection keys to change the playback devices that are controlled by the remote control, because their remote control codes are assigned to the input selection keys.

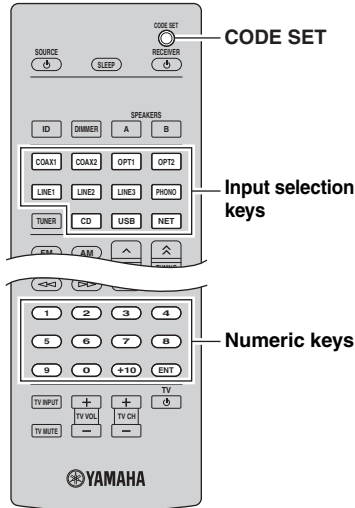

## Playback device operations

Once you have registered the remote control code for your playback device, you can control it using the following keys after selecting the input source or scene.

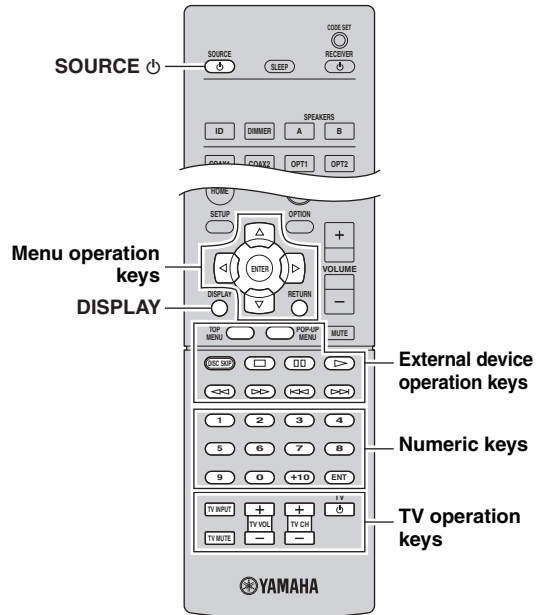

- 1 Refer to "LIST OF REMOTE CONTROL CODES" (end of this manual) to find the remote control code for your playback device.



If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.

- 2 Press **CODE SET** using a pointed object such as the tip of a ballpoint pen.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

- 3 Press the **input selection key**.

For example, press CD to set the remote control code for the playback device connected to the CD jack.

- 4 Use the **numeric keys** to enter the 4-digit remote control code.

Once the remote control code is successfully registered, "Rem: Success" appears on the front display.

If "Rem: Fail" appears on the front display, registration has failed. Repeat from Step 2.


<b>SOURCE</b>		Turns on/off the playback device.
<b>Menu operation keys</b>	<b>Cursor keys</b>	Select an item.
	<b>ENTER</b>	Confirms a selected item.
	<b>RETURN</b>	Returns to the previous state.
<b>DISPLAY</b>		Switches information on the display.
<b>External device operation keys</b>	<b>TOP MENU</b>	Displays the top menu.
	<b>POP-UP MENU</b>	Displays the pop-up menu.
		Stops playback.
		Stops playback temporarily.
		Starts playback of the selected song/video.
		Searches forward/backward (by holding down).
		Searches forward/backward (by holding down).
		Skips forward/backward.
<b>Numeric keys</b>		Enter numerical values.
<b>TV operation keys</b>		Control the TV (p.40).

### Note

These keys work only if the corresponding function is available on your playback device and if the device can be operated with an infrared remote control.

## Resetting remote control codes

You can reset the remote control codes assigned to each input selection keys to the factory default.

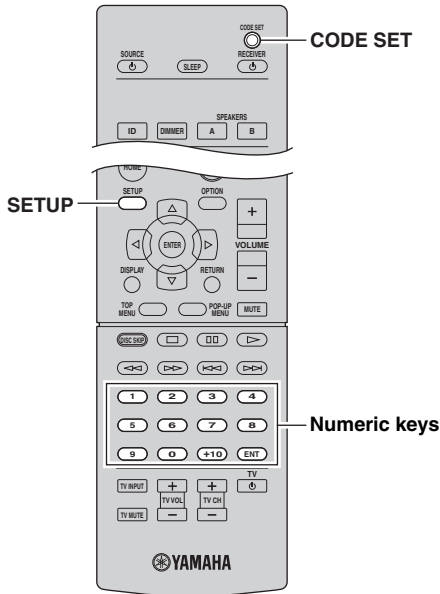

---

**1 Press CODE SET using a pointed object such as the tip of a ballpoint pen.**

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 1.

---

**2 Press SETUP.**

---

**3 Use the numeric keys to enter “9981”.**

Once the remote control code is successfully registered, “Rem: Success” appears on the front display.

If “Rem: Fail” appears on the front display, registration has failed. Repeat from Step 1.

# Updating the unit's firmware via the network


New firmware that provides additional features or product improvements will be released as needed. If the unit is connected to the Internet, you can download the firmware via the network and update it.

## Notes

- Do not operate the unit or disconnect the power cable or network cable during firmware update. Firmware update takes about 20 minutes or more (depending on your Internet connection speed).
- If the unit is connected to the wireless network via a wireless network adapter, network update may not be possible depending on the condition of the wireless connection. In this case, update the firmware using the USB memory device (p.39).



You can also update the firmware using the USB memory device from the “ADVANCED SETUP” menu (p.39).

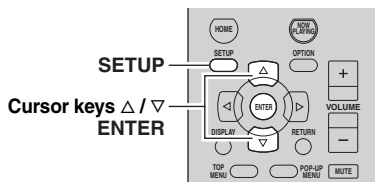

**1 Press SETUP.**

**2 Use the cursor keys to select “Network Setup” and press ENTER.**

**3 Use the cursor keys to select “Information” and press ENTER.**

If new firmware is available, “NewFwAvailable” appears on the front display.



**4 Press RETURN to return the previous state.**

**5 Use the cursor keys to select “Update” and press ENTER.**



**6 To start the firmware update, press ENTER.**

The unit to restart and the firmware update starts.



To cancel the operation without updating the firmware, press SETUP.

**7 If “UPDATE SUCCESS” appears on the front display, press ⏻ (power) on the front panel.**

The firmware update is complete.

# Troubleshooting

Refer to the chart below if this unit does not function properly. If the problem you are experiencing is not listed below or if the instructions below do not help, set this unit to standby mode, disconnect the power cable, and contact the nearest authorized Yamaha dealer or service center.

## ■ General

Problem	Cause	Remedy	See page
<b>This unit fails to turn on.</b>	The protection circuitry has been activated three times consecutively. If the unit is in this condition, the standby indicator on the unit blinks when you try to turn on the power.	As a safety precaution, capability to turn on the power is disabled. Contact your nearest Yamaha dealer or service center to request repair.	—
	The power cable is not connected or the plug is not completely inserted.	Connect the power cable firmly.	—
	The impedance setting is incorrect.	Set the impedance to match your speakers.	11
	The protection circuitry has been activated because of a short circuit, etc.	Check that the speaker wires are not touching each other and then turn the power of this unit back on.	10
	This unit has been exposed to a strong external electric shock (such as lightning or strong static electricity).	Set this unit to standby mode, disconnect the power cable, plug it back in after 30 seconds, then use it normally.	—
<b>No sound</b>	Incorrect input or output cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	10
	No appropriate input source has been selected.	Select an appropriate input source with the INPUT selector on the front panel (or one of the input selection keys on the remote control).	14
	The SPEAKERS A/B switches are not set properly.	Turn on the corresponding SPEAKERS A or SPEAKERS B.	14
	Speaker connections are not secure.	Secure the connections.	10
	Output has been muted.	Turn off the mute.	8
	The Max volume or Initial volume setting is set too low.	Set the setting to a higher value.	37
	The component corresponding to the selected input source is turned off or is not playing.	Turn the component on and make sure it is playing.	—
	The audio output of a device connected to a digital audio input (COAXIAL 1-2/OPTICAL 1-2 jacks) is set to other than PCM.	Set the audio output of the connected device to PCM.	—
<b>The sound suddenly goes off.</b>	The protection circuitry has been activated because of a short circuit, etc.	Set the speaker impedance to match your speakers.	11
		Check that the speaker wires are not touching each other and then turn the power of this unit back on.	10
	This unit has become too hot.	Make sure the openings on the top panel are not blocked.	—
	The auto power standby function has turned this unit off.	Change the auto power standby (“AutoPowerStdby” in the “SETUP” menu) to a longer setting or turn off.	38
<b>Only the speaker on one side can be heard.</b>	Incorrect cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	10
	Incorrect setting for the BALANCE control.	Set the BALANCE control to the appropriate position.	15

Problem	Cause	Remedy	See page
<b>There is a lack of bass and no ambience.</b>	The + and – wires are connected in reverse at the amplifier or the speakers.	Connect the speaker wires to the correct + and – phase.	10
<b>A “humming” sound can be heard.</b>	Incorrect cable connections.	Connect the audio plugs firmly. If the problem persists, the cables may be defective.	10
	No connection from the turntable to the GND terminal.	Make the GND connection between the turntable and this unit.	10
<b>The volume level is low while playing a record.</b>	The record is being played on a turntable with an MC cartridge.	The turntable should be connected to this unit through the MC head amplifier.	—
<b>The sound is degraded when listening with the headphones connected to the CD player or the tape deck connected to this unit.</b>	The power of this unit is turned off, or this unit is set to standby mode.	Turn on the power of this unit.	14
<b>The sound level is low.</b>	The loudness control function is operating.	Turn down the volume, set the LOUDNESS control to the FLAT position, and then adjust the volume again.	15

■ Tuner

Problem		Cause	Remedy	See page
FM	<b>FM stereo reception is noisy.</b>	The particular characteristics of the FM stereo broadcasts being received may cause this problem when the transmitter is too far away or the antenna input is poor.	Check the antenna connections. Try using a high-quality directional FM antenna.	12
			Switch to monaural mode.	17
	<b>There is distortion, and clear reception cannot be obtained even with a good FM antenna.</b>	There is multipath interference.	Adjust the antenna position to eliminate the multipath interference.	—
	<b>The desired station cannot be tuned in with the automatic tuning method.</b>	The signal is too weak.	Try using a high-quality directional FM antenna. Try using the manual tuning method.	12 17
FM/AM	<b>NO PRESETS is displayed.</b>	No preset stations are registered.	Register stations you want to listen to as preset stations before operation.	18
	<b>WRONG STATION is displayed.</b>	An invalid FM/AM frequency has been input.	Input a frequency that can be received.	17
AM	<b>The desired station cannot be tuned in with the automatic tuning method.</b>	The signal is weak or the antenna connections are loose.	Tighten the AM antenna connections and orient it for the best reception. Try using the manual tuning method.	— 17
	<b>Automatic station preset does not work.</b>	Automatic station preset is not available for AM stations.	Use manual station preset.	18
	<b>There are continuous crackling and hissing noises.</b>	The noises may result from lightning, fluorescent lamps, motors, thermostats or other electrical equipment.	Try using an outdoor antenna and a ground wire. This will help somewhat, but it is difficult to eliminate all noise.	—
	<b>There are buzzing and whining noises.</b>	A TV set is being used nearby.	Move this unit away from the TV set.	—



■ USB and network

Problem	Cause	Remedy	See page
<b>The unit does not detect the USB device.</b>	The USB device is not connected to the USB jack securely.	Turn off the unit, reconnect your USB device, and turn the unit on again.	—
	The file system of the USB device is not FAT16 or FAT32.	Use a USB device with FAT16 or FAT32 format.	—
<b>Folders and files in the USB device cannot be viewed.</b>	The data in the USB device is protected by the encryption.	Use a USB device without an encryption function.	—
<b>The network feature does not function.</b>	The network parameters (IP address) have not been obtained properly.	Enable the DHCP server function on your router and set “DHCP” in the “SETUP” menu to “On” on the unit. If you want to configure the network parameters manually, check that you are using an IP address which is not used by other network devices in your network.	36
<b>The unit does not detect the PC.</b>	The media sharing setting is not correct.	Configure the sharing setting and select the unit as a device to which music contents are shared.	—
	Some security software installed on your PC is blocking the access of the unit to your PC.	Check the settings of security software installed on your PC.	—
	The unit and PC are not in the same network.	Check the network connections and your router settings, and then connect the unit and the PC to the same network.	13
	The MAC address filter is enabled on the unit.	In “MAC Filter” in the “SETUP” menu, disable the MAC address filter or specify the MAC address of your PC to allow it to access to the unit.	36
<b>The files in the PC cannot be viewed or played back.</b>	The files are not supported by the unit or the media server.	Use the file format supported by both the unit and the media server. For information about the file formats supported by the unit, see “Playing back music stored on media servers (PCs/NAS)”.	25
<b>The Internet radio cannot be played.</b>	The selected Internet radio station is currently not available.	There may be a network problem at the radio station, or the service may have been stopped. Try the station later or select another station.	—
	The selected Internet radio station is currently broadcasting silence.	Some Internet radio stations broadcast silence at certain of times of the day. Try the station later or select another station.	—
	Access to the network is restricted by the firewall settings of your network devices (such as the router).	Check the firewall settings of your network devices. The Internet radio can be played only when it passes through the port designated by each radio station. The port number varies depending on the radio station.	—
<b>The application for smartphone/tablet “NP Controller” does not detect the unit.</b>	The MAC address filter is enabled on the unit.	In “MAC Filter” in the “Network Setup”, disable the MAC address filter or specify the MAC address of your smartphone/tablet to allow it to access to the unit.	36
	The unit and smartphone/tablet are not in the same network.	Check the network connections and your router settings, and then connect the unit and smartphone/tablet to the same network.	—
<b>Firmware update via the network is failed.</b>	It may not be possible depending on the condition of the network.	Update the firmware via the network again or use a USB memory device.	39

■ Remote control

Problem	Cause	Remedy	See page
<p><b>The remote control does not work nor function properly.</b></p>	<p>Wrong distance or angle.</p>	<p>The remote control will function within a maximum range of 6 m (20 ft) and no more than 30 degrees off-axis from the front panel.</p>	<p>9</p>
	<p>Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.</p>	<p>Reposition this unit.</p>	<p>—</p>
	<p>The batteries are weak.</p>	<p>Replace all batteries.</p>	<p>—</p>
	<p>The remote control ID and this unit's ID do not match.</p>	<p>Switch the remote control ID or this unit's ID.</p>	<p>38</p>
	<p>The remote control code was not correctly set.</p>	<p>Try setting another code of the same manufacturer using "LIST OF REMOTE CONTROL CODES" at the end of this manual.</p>	<p>—</p>
	<p>Even if the remote control code is correctly set, there are some models that do not respond to the remote control.</p>	<p>Use the supplied remote control for the components.</p>	<p>—</p>
	<p>You did not press the input selection key corresponding to the component you are trying to control.</p>	<p>Press the input selection key corresponding to the component you are trying to control, and then press the desired remote control key(s).</p>	<p>—</p>

## Error indications on the front display

Message	Cause	Remedy
<b>Access denied</b>	Access to the PC is denied.	Configure the sharing settings and select the unit as a device to which music contents are shared (p.25).
<b>Access error</b>	The unit cannot access the USB device.	Turn off the unit and reconnect your USB device. If the problem persists, try another USB device.
	The unit cannot access the iPod.	Turn off the iPod and turn it on again.
	The connected iPod is not supported by the unit.	Use an iPod supported by the unit (p.21).
	There is a problem with the signal path from the network to the unit.	Make sure your router and modem are turned on.
Check the connection between the unit and your router (or hub) (p.13).		
<b>Are you still there? *</b>	The Pandora service was not operated for 8 hours or more.	Press ENTER to resume playback.
<b>Check SP Wires</b>	The speaker cables short circuit.	Twist the bare wires of the cables firmly and connect to the unit and speakers properly.
<b>Licensing err *</b>	Access from the outside of the region for pandora service.	Access from the inside of the region for pandora service.
<b>No content</b>	There are no playable files in the selected folder.	Select a folder that contains files supported by the unit.
<b>No device</b>	The unit cannot detect the USB device.	Turn off the unit and reconnect your USB device. If the problem persists, try another USB device.
	The unit cannot detect the iPod.	Turn off the iPod and then turn it on again.
<b>Not signed in *</b>	The unit is not signed in to the Pandora service.	Sign in the pandora service.
<b>Please wait</b>	The unit is preparing for connecting to the network.	Wait until the message disappears. If the message stays more than 3 minutes, turn off the unit and turn it on again.
<b>Read only mode *</b>	The Pandora service is maintaining, it cannot access.	Access after waiting for a while.
<b>RemID Mismatch</b>	The remote control IDs of the unit and the remote control are not identical.	Change the remote control ID of the unit or the remote control (p.38).
<b>Skip limit *</b>	Skip operation in Pandora service has reached its maximum.	Skip operation cannot be performed any more.
<b>Suspended acct *</b>	The Pandora service account is unusable.	Try another account.
<b>Unable to play</b>	The unit cannot play back the songs stored on the iPod for some reason.	Check the song data. If it cannot be played on the iPod itself, the song data or storage area may be defective.
	The unit cannot play back the songs stored on the PC for some reason.	Check if the format of files you are trying to play is supported by the unit. For information about the formats supported by the unit, see "Playing back music stored on media servers (PCs/NAS)" (p.25). If the unit supports the file format, but still cannot play back any files, the network may be overloaded with heavy traffic.
<b>Version error</b>	Firmware update is failed.	Update the firmware again.

\*Australia model only

# Trademarks



“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

AirPlay, iPad, iPhone, iPod, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



**Fraunhofer** Institut  
Integrierte Schaltungen

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.



DLNA™ and DLNA CERTIFIED™ are trademarks or registered trademarks of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

## **Windows™**

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Internet Explorer, Windows Media Audio and Windows Media Player are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

## **Android™**

Android is a trademark of Google Inc.



This receiver supports network connections.

# Specifications

## AUDIO SECTION

- Minimum RMS Output Power  
(20 Hz to 20 kHz, 0.04% THD, 8 Ω) ..... 80W + 80W
- Dynamic power per channel (IHF)  
(8/6/4/2 Ω) ..... 105/125/150/178 W
- Maximum power per channel [Europe model only]  
(1 kHz, 0.7% THD, 4 Ω) ..... 105 W
- IEC power [Europe model only] (1 kHz, 0.04% THD, 8 Ω)..... 84 W
- Power band width  
(0.06% THD, 40W, 8 Ω) ..... 10 Hz to 50 kHz
- Damping factor (SPEAKERS A)  
1 kHz, 8 Ω ..... 150 or more
- Maximum effective output power (JEITA)  
[Asia and General models only]  
(1 kHz, 10% THD, 8 Ω) ..... 115 W
- Input sensitivity/Input impedance  
PHONO (MM) ..... 3.5 mV/47 kΩ  
CD, etc. .... 200 mV/47 kΩ
- Maximum input signal  
PHONO (MM) (1 kHz, 0.003% THD) ..... 60 mV or more  
CD, etc. (1 kHz, 0.5% THD) ..... 2.2 V or more
- Output level/Output impedance  
CD, etc. (Input 1 kHz, 200 mV)  
REC OUT ..... 200 mV/1.0 kΩ  
Subwoofer OUT ..... 4.0 V/1.2 kΩ  
Cut off frequency ..... 90 Hz  
CD, etc. (Input 1 kHz, 200 mV, 8 Ω)  
PHONES ..... 410 mV/470 Ω
- Frequency response  
CD, etc. (20 Hz to 20 kHz) ..... 0 ± 0.5 dB  
CD, etc., PURE DIRECT on (10 Hz to 100 kHz) ..... 0 ± 1.0 dB
- RIAA equalization deviation  
PHONO (MM) ..... ± 0.5 dB
- Total harmonic distortion  
PHONO (MM) to REC (20 Hz to 20 kHz, 3 V) ..... 0.025% or less  
CD, etc. to SPEAKERS  
(20 Hz to 20 kHz, 40.0 W, 8 Ω) ..... 0.015% or less
- Signal to noise ratio (IHF-A network)  
PHONO (MM) (5 mV input shorted) ..... 87 dB or more  
CD, etc., PURE DIRECT on  
(200 mV input shorted) ..... 100 dB or more
- Residual noise (IHF-A network) ..... 30 μV
- Channel separation  
CD, etc. (5.1 kΩ input shorted, 1/10 kHz) ..... 65/50 dB or more
- Tone control characteristics  
BASS  
Boost/Cut (20 Hz) ..... ± 10 dB  
Turnover Frequency ..... 350 Hz  
TREBLE  
Boost/Cut (20 kHz) ..... ± 10 dB  
Turnover Frequency ..... 3.5 kHz
- Continuous loudness control  
Attenuation (1 kHz) ..... -30 dB
- Gain tracking error (+16.5 to -80 dB) ..... 0.5 dB or less
- Digital input  
OPTICAL  
COAXIAL  
Support audio sample rate ..... 32 kHz to 192 kHz

## FM SECTION

- Tuning range  
[U.S.A. and Canada models] ..... 87.5 to 107.9 MHz  
[Asia and General models] ..... 87.5/87.50 to 108.0/108.00 MHz  
[U.K., Europe, Korea, Australia models] ..... 87.50 to 108.00 MHz
- 50 dB quieting sensitivity (IHF, 1 kHz, 100% MOD.)  
Mono ..... 3.0 μV (20.8 dBf)
- Signal to noise ratio (IHF)  
Mono/Stereo ..... 71 dB/69 dB
- Harmonic distortion (1 kHz)  
Mono/Stereo ..... 0.3%/0.5%  
Antenna input ..... 75 Ω unbalanced

## AM SECTION

- Tuning range  
[U.S.A. and Canada models] ..... 530 to 1710 kHz  
[Asia and General models] ..... 530/531 to 1710/1611 kHz  
[U.K., Europe, Korea, Australia] ..... 531 to 1611 kHz

## GENERAL

- Power supply  
[U.S.A. and Canada models] ..... AC 120 V, 60 Hz  
[General model] ..... AC 110-120/220-240 V, 50/60 Hz  
[Korea model] ..... AC 220V 60Hz  
[Australia model] ..... AC 240 V, 50 Hz  
[U.K. and Europe models] ..... AC 230 V, 50 Hz  
[Asia model] ..... AC 220-240 V, 50/60 Hz
- Power consumption ..... 190 W
- Standby power consumption ..... 0.1 W or less  
Network standby on ..... 2.0 W Typical
- Maximum power consumption  
[General model only] ..... 380 W
- Dimensions (W × H × D) ..... 435 × 151 × 387 mm  
(17-1/8" × 6" × 15-1/4")
- Weight ..... 9.8 kg (21.6 lbs)

\* Specifications are subject to change without notice.

# Index

- A**
- ADVANCED SETUP menu..... 38
  - AirPlay..... 28
  - AM antenna connection..... 12
  - AM radio listening..... 17
  - Audio device connection..... 10
  - Audio file format (PC/NAS)..... 25
  - Audio file format (USB storage device)..... 23
  - AUDIO jack..... 7, 10
  - Auto Power Standby (SETUP menu)..... 37
  - Auto Preset (FM radio, OPTION menu)..... 18
  - Automatic station preset (FM radio)..... 18
  - AutoPowerStdby (SETUP menu)..... 37
- B**
- BALANCE (Tone Control)..... 15
  - Banana plug..... 11
  - Basic playback operation..... 14
  - BASS (Tone Control)..... 15
  - Batteries..... 9
  - Bi-Amp (Speaker connection)..... 11
  - Bi-wire (Speaker connection)..... 11
- C**
- CAT-5 cable..... 13
  - CHAN (Signal Info, OPTION menu)..... 34
  - Clear Preset (FM/AM radio, OPTION menu)..... 19
  - Clock Time (Radio Data System)..... 20
  - COAXIAL jack..... 7, 10
- D**
- DC OUT (SETUP menu)..... 37
  - DC OUT jack..... 7
  - Default Gateway (Information, SETUP menu)..... 36
  - Default Gateway (IP Address, SETUP menu)..... 36
  - DHCP (IP Address, SETUP menu)..... 36
  - Digital Media Controller (DMC)..... 36
  - Dimmer (Front display)..... 6
  - Direct playback..... 14
  - DISPLAY key..... 4, 8, 33
  - DLNA..... 25
  - DMC Control (Network Setup, SETUP menu)..... 36
  - DNS Server (Information, SETUP menu)..... 36
  - DNS Server (IP Address, SETUP menu)..... 36
- E**
- ECO Mode (SETUP menu)..... 37
  - Error indication..... 49
- F**
- Filter (MAC Filter, SETUP menu)..... 36
  - Firmware update..... 43
  - Firmware update (network)..... 39, 43
  - Firmware update (USB)..... 39
  - Firmware version check..... 37, 39
  - FM antenna connection..... 12
  - FM radio listening..... 17
  - FM/AM radio tuning..... 17
  - FORMAT (Signal Info, OPTION menu)..... 34
- G**
- Gateway..... 36
- H**
- Headphones..... 4
  - HOME key (Internet radio)..... 27
  - HOME key (iPod)..... 21
  - HOME key (Pandora)..... 30
  - HOME key (PC/NAS)..... 26
  - HOME key (USB storage device)..... 23
- I**
- ID (Network Setup, SETUP menu)..... 37
  - In.Trim (Volume Trim, OPTION menu)..... 34
  - Indicator (part names and functions)..... 6
  - Information (Network Setup, SETUP menu)..... 36
  - Information display (front display)..... 6
  - Information switching (front display)..... 33
  - INIT (ADVANCED SETUP menu)..... 39
  - Initial Volume (SETUP menu)..... 37
  - Input selection key..... 8
  - Input Trim (Volume Trim, OPTION menu)..... 34
  - Internet radio listening..... 27
  - IP Address (Information, SETUP menu)..... 36
  - IP Address (Network Setup, SETUP menu)..... 36
  - iPod charge..... 21
  - iPod connection..... 21
  - iPod content playback..... 21
  - iPod content playback (AirPlay)..... 28
  - iTunes content playback (AirPlay)..... 28
- L**
- LOUDNESS (Tone Control)..... 15
- M**
- MAC Address (Information, SETUP menu)..... 36
  - MAC Address (MAC Filter, SETUP menu)..... 36
  - MAC Filter (Network Setup, SETUP menu)..... 36
  - Manual station preset (FM/AM radio)..... 18
  - Max Volume (SETUP menu)..... 37
  - Media sharing setup..... 25
  - MODE key..... 8
  - Monaural reception (FM radio)..... 17
  - MUTE key..... 8
- N**
- NAS (Network Attached Storage) connection..... 13
  - NAS content playback..... 25
  - NET Standby (Network Setup, SETUP menu)..... 36
  - Network cable..... 13
  - Network connection..... 13
  - Network information..... 36
  - Network Name (Network Setup, SETUP menu)..... 37

Network Setup (SETUP menu) .....	36	Shuffle (iPod).....	22
Network Update (Network Setup, SETUP menu).....	37	Shuffle (PC/NAS) .....	26
NewFwAvailable .....	43	Shuffle (USB storage device) .....	24
NOW PLAYING key (Internet radio) .....	27	Signal Info (OPTION menu).....	34
NOW PLAYING key (iPod) .....	21	Signal information.....	34
NOW PLAYING key (Pandora).....	31	Simple play (iPod) .....	22
NOW PLAYING key (PC/NAS).....	26	SLEEP key .....	16
NOW PLAYING key (USB storage device).....	23	Sleep timer .....	16
Numeric key.....	8	SP IMP. (ADVANCED SETUP menu).....	38
<b>O</b>		Speaker cable connection .....	11
OPTICAL jack.....	7	Speaker impedance .....	11, 38
OPTION key .....	8	Speaker indicator (front display).....	6
OPTION menu.....	34	Station preset (FM/AM radio).....	18
<b>P</b>		Status (Information, SETUP menu).....	36
Pandora service account .....	29, 32	STP network cable .....	13
Pandora service listening .....	29	Subnet Mask (Information, SETUP menu).....	36
Pandora service playback .....	31	Subnet Mask (IP Address, SETUP menu).....	36
Pandora station.....	30	<b>T</b>	
Pandora station editing .....	32	TONE CONTROL .....	15
PC connection.....	13	TP (Traffic Program) .....	20
PC content playback .....	25	Traffic information (Radio Data System).....	20
Perform Update (Network Setup, SETUP menu).....	37	Traffic Program (FM radio, OPTION menu).....	20
PHONES jack .....	4	TREBLE (Tone Control) .....	15
Playback device connection.....	10	<b>U</b>	
Playback device operation (remote control).....	40	UPDATE (ADVANCED SETUP menu).....	39
Power cable connection .....	13	Update (Network Setup, OPTION menu).....	37
Power indicator (front panel).....	4	USB jack .....	4
Power Mode (DC OUT, SETUP menu) .....	37	USB mass storage class device .....	23
Preset station selection (FM/AM radio) .....	19	USB storage device connection .....	23
Program Service (Radio Data System).....	20	USB storage device content playback.....	23
Program Type (Radio Data System).....	20	<b>V</b>	
PURE DIRECT.....	14	VERSION (ADVANCED SETUP menu) .....	39
<b>R</b>		Version (Network Setup, SETUP menu) .....	37
Radio Data System (FM radio).....	20	Vol.Interlock (OPTION menu).....	34
Radio Data System information.....	20	Volume Interlock (OPTION menu) .....	34
Radio Data System tuning .....	20	Volume Trim (OPTION menu).....	34
Radio Text (Radio Data System).....	20	vTuner ID (Information, SETUP menu).....	36
Rear panel (part names and functions) .....	7		
REC (REC OUT) jack .....	10		
Recording device connection.....	10		
Remote control (part names and functions).....	8		
Remote control code registration (playback device) .....	40		
Remote control range.....	9		
Remote control signal transmitter (remote control).....	8		
REMOTE ID (ADVANCED SETUP menu) .....	38		
Rename (network name).....	37		
Repeat (iPod) .....	22		
Repeat (PC/NAS).....	26		
Repeat (USB storage device).....	24		
Reset (remote control) .....	42		
Router connection .....	13		
<b>S</b>			
SAMPL (Signal Info, OPTION menu).....	34		
SETUP key .....	8		
SETUP menu .....	35		





## ■ Information about software

This product uses the following free software. For information (copyright, etc) about each software, read the original sentences stated below.

### ■ About ASN.1 object dumping code

ASN.1 object dumping code, copyright Peter Gutmann <pgut001@cs.auckland.ac.nz>, based on ASN.1 dump program by David Kemp <dpkemp@missi.ncsc.mil>, with contributions from various people including Matthew Hamrick <hamrick@rsa.com>, Bruno Couillard <bcouillard@chrysalis-its.com>, Hallvard Furuseth <h.b.furuseth@usit.uio.no>, Geoff Thorpe <geoff@raas.co.nz>, David Boyce <d.boyce@isode.com>, John Hughes <john.hughes@entegrity.com>, Life is hard, and then you die <ronald@trustpoint.com>, Hans-Olof Hermansson <hans-olof.hermansson@postnet.se>, Tor Rustad <Tor.Rustad@bbs.no>, Kjetil Barvik <kjetil.barvik@bbs.no>, James Sweeny <jsweeny@us.ibm.com>, and several other people whose names I've misplaced.

This code grew slowly over time without much design or planning, with features being tacked on as required.

It's not representative of my normal coding style.

### ■ About FLAC codec Library

Copyright © 2000,2001,2002,2003,2004,2005,2006,2007, 2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO

EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### ■ About libexpat

Copyright © 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper

Copyright © 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

### ■ About The Independent JPEG Group's JPEG software

**The Independent JPEG Group's JPEG software**  
Copyright © 1991-2010, Thomas G. Lane, Guido Vollbeding.

All Rights Reserved except as specified below.

The authors make NO WARRANTY or representation, either express or implied, with respect to this software, its quality, accuracy, merchantability, or fitness for a particular purpose. This software is provided “AS IS”, and you, its user, assume the entire risk as to its quality and accuracy.

Permission is hereby granted to use, copy, modify, and distribute this software (or portions thereof) for any purpose, without fee, subject to these conditions:

- (1) If any part of the source code for this software is distributed, then this README file must be included, with this copyright and no-warranty notice unaltered; and any additions, deletions, or changes to the original files must be clearly indicated in accompanying documentation.
- (2) If only executable code is distributed, then the accompanying documentation must state that “this software is based in part on the work of the Independent JPEG Group”.
- (3) Permission for use of this software is granted only if the user accepts full responsibility for any undesirable consequences; the authors accept NO LIABILITY for damages of any kind.

These conditions apply to any software derived from or based on the IJG code, not just to the unmodified library. If you use our work, you ought to acknowledge us.

Permission is NOT granted for the use of any IJG author's name or company name in advertising or publicity relating to this software or products derived from it. This software may be referred to only as “the Independent JPEG Group’s software”.

We specifically permit and encourage the use of this software as the basis of commercial products, provided that all warranty or liability claims are assumed by the product vendor.

## ■ About JsonCpp

Copyright © 2007-2010 Baptiste Lepilleur

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## ■ About Network

Copyright © 1988 Stephen Deering.

Copyright © 1992, 1993

The Regents of the University of California. All rights reserved.

Copyright © 1985, 1986, 1993

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986 Regents of the University of California.

All rights reserved.

Copyright © 1982, 1986, 1988 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## ■ About PNG Reference Library

libpng versions 1.2.6, August 15, 2004, through 1.4.5, December 9, 2010, are Copyright © 2004, 2006-2010 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-1.2.5 with the following individual added to the list of Contributing Authors

Cosmin Truta

libpng versions 1.0.7, July 1, 2000, through 1.2.5 - October 3, 2002, are Copyright © 2000-2002 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-1.0.6 with the following individuals added to the list of Contributing Authors

Simon-Pierre Cadieux

Eric S. Raymond

Gilles Vollant

and with the following additions to the disclaimer:

There is no warranty against interference with your enjoyment of the library or against infringement.

There is no warranty that our efforts or the library will fulfill any of your particular purposes or needs. This library is provided with all faults, and the entire risk of satisfactory quality, performance, accuracy, and effort is with the user.

libpng versions 0.97, January 1998, through 1.0.6, March 20, 2000, are Copyright © 1998, 1999 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-0.96, with the following individuals added to the list of Contributing Authors:

Tom Lane

Glenn Randers-Pehrson

Willem van Schaik

libpng versions 0.89, June 1996, through 0.96, May 1997, are Copyright © 1996, 1997 Andreas Dilger  
Distributed according to the same disclaimer and license as libpng-0.88, with the following individuals added to the list of Contributing Authors:

John Bowler

Kevin Bracey

Sam Bushell

Magnus Holmgren

Greg Roelofs

Tom Tanner

libpng versions 0.5, May 1995, through 0.88, January 1996, are Copyright © 1995, 1996 Guy Eric Schalnat, Group 42, Inc.

For the purposes of this copyright and license, "Contributing Authors" is defined as the following set of individuals:

Andreas Dilger

Dave Martindale

Guy Eric Schalnatz  
Paul Schmidt  
Tim Wegner

The PNG Reference Library is supplied “AS IS”. The Contributing Authors and Group 42, Inc. disclaim all warranties, expressed or implied, including, without limitation, the warranties of merchantability and of fitness for any purpose. The Contributing Authors and Group 42, Inc. assume no liability for direct, indirect, incidental, special, exemplary, or consequential damages, which may result from the use of the PNG Reference Library, even if advised of the possibility of such damage.

Permission is hereby granted to use, copy, modify, and distribute this source code, or portions hereof, for any purpose, without fee, subject to the following restrictions:

1. The origin of this source code must not be misrepresented.
2. Altered versions must be plainly marked as such and must not be misrepresented as being the original source.
3. This Copyright notice may not be removed or altered from any source or altered source distribution.

The Contributing Authors and Group 42, Inc. specifically permit, without fee, and encourage the use of this source code as a component to supporting the PNG file format in commercial products. If you use this source code in a product, acknowledgment is not required but would be appreciated.

### ■ About RC4 Algorithm

Copyright Mocana Corp 2003-2005. All Rights Reserved.

Proprietary and Confidential Material.

### ■ About WPA Supplicant

Copyright © 2003-2008, Jouni Malinen <j@w1.fi> and contributors

All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### ■ About zlib Library

Copyright notice:

© 1995-2010 Jean-loup Gailly and Mark Adler

This software is provided ‘as-is’, without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Do not disassemble, decompile, or reverse engineer the software included in Yamaha AV products.

# LIST OF REMOTE CONTROL CODES

		Autovox	0171, 0282, 0337, 0339, 0342	CMS	0277	Elbe	0161, 0168, 0282, 0320
<b>TV</b>		Aventura	0051	CMS Hightec	0282	Elcit	0339
A.R. Systems	0320	Awa	0277, 0282	Coby	0197	Electa	0348
Acme	0342	Axion	0156	Colorlyme	0008, 0026	ELECTRO TECH	0343
Acura	0323, 0343	Baird	0282	Commercial Solutions	0021	Electroband	0055, 0107
ADC	0337	Bang & Olufsen	0180, 0339	Concerto	0008, 0026	Electrograph	0176
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Concorde	0323, 0343	Electrohome	0008, 0026, 0052, 0055
Advent	0158	Bastide	0282, 0342	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Element	0230
Adventura	0057	Baur	0320, 0349	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elin	0277, 0320, 0323, 0342, 0349, 0350
Adyson	0277, 0282, 0342	Bazin	0282	Contec/Cony	0012, 0058	Elite	0320, 0340, 0350
Agashi	0277, 0282	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Continental Edison	0345	Elman	0341
Agazi	0337	Belcor	0008	Cosmel	0323, 0343	Elta	0277, 0323, 0343
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Bell & Howell	0019, 0054	Craig	0058, 0179	Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Aim	0320	Benq	0097, 0242, 0361	Crosley	0010, 0037, 0171, 0339	Emprex	0154
Aiwa	0078, 0379	Beon	0320, 0349, 0350	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Envision	0008, 0026, 0050
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	BGH	0400	CS Electronics	0277, 0340, 0342	Epson	0155, 0206, 0359
Akiba	0320, 0340	Binatone	0282, 0342	CTC Clatronic	0341	Erres	0320, 0349, 0350
Akura	0320, 0323, 0337, 0340	Blue Sky	0320, 0340	CTX	0205	ESA	0051
Alaron	0277	Blue Star	0348	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	ESC	0282
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	Boots	0282, 0342	CXC	0058, 0179	Etron	0343
Albatron	0140	BPL	0320, 0348	Cybertron	0340	Eurofeel	0282
Alcyon	0171	Bradford	0058, 0179	Cytron	0152	Euro-Feel	0337
Alleron	0059	Brandt	0322, 0345	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Euroline	0349
Allorgan	0282	Brilliant	0182	Dainichi	0277, 0340	Euroman	0161, 0277, 0282
Allstar	0320, 0350	Brinkmann	0320	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Euromann	0320, 0337, 0342, 0350
America Action	0179	Brionvega	0320, 0339, 0349, 0350	Dantax	0161, 0349	Europhton	0277, 0282, 0320, 0341, 0342, 0350
AMOi	0276	Britannia	0277, 0282, 0342	Dawa	0320	Expert	0321
Amplivision	0161, 0282, 0321, 0342	Brockwood	0008	Daytron	0007, 0008, 0026, 0323, 0343	Exquisit	0320
Amstrad	0320, 0323, 0337, 0340, 0343	Broksonic	0109, 0179	De Graaf	0346	Fenner	0323, 0343
Amtron	0058	Bruns	0339	Decca	0282, 0320, 0342, 0349, 0350	Ferguson	0322, 0345, 0349
Anam	0179, 0343	BTC	0340	Dell	0145, 0245	Fidelity	0277, 0320, 0342, 0346
Anam National	0052, 0058	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Denver	0358, 0362	Filsai	0282
Anglo	0323, 0343	byd:sign	0093	Desmet	0320, 0349, 0350	Finlandia	0346
Anitech	0171, 0320, 0323, 0337, 0343	Candle	0008, 0026, 0050, 0057	Diamant	0320	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	Capsonic	0337	Diamond	0277	FIRST LINE	0342, 0343, 0350
AOC	0008, 0026, 0050, 0053	Carena	0320	DiamondVision	0135, 0143	Firstline	0277, 0282, 0320, 0323
Apex	0039, 0111, 0217	Carnivale	0050	Dimensia	0049	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Arcam	0277, 0282	Carrefour	0344	Disney	0219	Flint	0320, 0350
Arcam Delta	0342	Carver	0010	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Aristona	0320, 0349, 0350	Cascade	0320, 0323, 0343	Dream Vision	0461, 0498	Formenti/Phoenix	0277
Arthur Martin	0321	Casio	0367	DTS	0323, 0343	Fortress	0336, 0339
ASA	0339, 0347	Cathay	0320, 0349, 0350	Dual	0282, 0320, 0342	Fraba	0161, 0320
Asberg	0171, 0320, 0350	CCE	0183, 0282	Dual-Tec	0342, 0343	Friac	0161
Astra	0343	Celebrity	0055, 0107	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Asuka	0277, 0282, 0337, 0340, 0342	Celera	0039	Durabrand	0031, 0051, 0179, 0215	Fujitsu	0059, 0069, 0074, 0075, 0282
Atlantic	0277, 0320, 0342, 0349, 0350	Centurion	0320, 0349, 0350	Dux	0349	Fujitsu General	0282
Atori	0323, 0343	Century	0339	Dwin	0178	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Auchan	0321	CGE	0161, 0171	Dynatron	0320, 0349, 0350	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337, 0488, 0489
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Changhong	0039	Dynex	0228, 0231	Futuretech	0058, 0179
AudioTon	0161, 0282, 0342	Chimei	0273	EIZO	0509	Galaxi	0320, 0351
Audiovox	0058, 0179, 0194	Cimline	0323, 0343			Galaxis	0161, 0320
Ausind	0171	Citizen	0007, 0008, 0026, 0050, 0058				
		City	0323, 0343				
		Clarion	0179				
		Clarivox	0349				
		Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351				

Gateway	0176, 0177, 0241	Hitachi	0008, 0012, 0026,	Kamp	0277, 0342	Manesth	0282, 0320, 0337,
GBC	0323, 0343, 0344		0066, 0084, 0092,	Kapsch	0347		0342, 0349, 0350
GE	0008, 0021, 0023,		0093, 0120, 0172,	Karcher	0161, 0320, 0342,	Marantz	0008, 0010, 0026,
	0026, 0027, 0031,		0173, 0255, 0270,		0343, 0349		0050, 0204, 0320,
	0034, 0049, 0052,		0271, 0282, 0320,	Kawasho	0008, 0026, 0055,		0349, 0350
	0056, 0209		0335, 0338, 0342,		0277	Marelli	0339
Geant Casino	0321		0344, 0346, 0347,	KEC	0179	Mark	0277, 0282, 0320,
GEC	0282, 0320, 0342,		0365, 0382, 0448,	Kendo	0161, 0320, 0341,		0323, 0349, 0350
	0347, 0349, 0350		0456, 0467, 0482,		0346	Masuda	0282
Geloso	0323, 0343, 0346		0484, 0487	Kenwood	0008, 0026, 0050	Matsui	0282, 0320, 0323,
General Technic	0323, 0343	Hornophon	0320, 0350	KIC	0282		0342, 0343, 0344,
Genexxa	0320, 0340, 0347,	Hoshai	0340	Kingsley	0277, 0342		0346, 0349, 0350,
	0350	Huanyu	0277, 0342	KLH	0039		0455
GFM	0128, 0227	Hygashi	0277, 0282, 0342	Kloss Novabeam	0057, 0058	Matsushita	0017
Giant	0282	Hyper	0277, 0282, 0323,	Kneissel	0161, 0168, 0320	Maxent	0147, 0176
Gibraltar	0008, 0030, 0050,		0342, 0343	Kolster	0320, 0350	Mediator	0320, 0349, 0350
	0062	Hypson	0282, 0320, 0321,	Konka	0340	Medion	0320, 0337, 0343
GoldHand	0277		0337, 0342, 0348,	Korpel	0320, 0349, 0350	Megapower	0140
Goldline	0320		0349, 0350	Korting	0161, 0339	Megatron	0026, 0031
GoldStar	0007, 0008, 0012,	Hyundai	0141	Kosmos	0320	MElectronic	0277, 0282, 0320,
	0026, 0031, 0050,	Iberia	0320	Koyoda	0343		0323
	0053, 0161, 0277,	ICE	0277, 0282, 0320,	KTV	0007, 0050, 0058,	Melvox	0321
	0282, 0320, 0323,		0323, 0337, 0340,		0179, 0183, 0282,	Memorex	0019, 0026, 0031,
	0342, 0343, 0346,		0342, 0343, 0350		0342		0053, 0054, 0137,
	0349, 0350	ICeS	0277	Kyoto	0277, 0282		0215, 0323, 0343
Goodmans	0246, 0272, 0282,	Ilo	0148, 0153	Lasat	0161	Memphis	0323, 0343
	0320, 0323, 0337,	IMA	0058	Lenco	0323, 0343	Mercury	0320, 0323
	0343, 0344, 0349,	Imperial	0161, 0171, 0320,	Lenoir	0323, 0342, 0343	Metz	0339
	0350, 0462, 0473,		0347, 0350, 0351	Leyco	0320, 0337, 0349,	MGA	0008, 0026, 0031,
	0477	Indiana	0320, 0349, 0350		0350		0050, 0053
Gorenje	0161, 0351	Infinity	0010	LG	0031, 0053, 0066,	Micromaxx	0337, 0343
GPM	0340	InFocus	0250, 0327, 0363,		0116, 0117, 0140,	Microstar	0337, 0343
GPX	0129		0479, 0508		0161, 0164, 0175,	Midland	0007, 0021, 0023,
Gradiente	0240	Ingelen	0347		0195, 0269, 0277,		0027, 0030, 0056,
Graetz	0347	Ingersol	0323, 0343		0282, 0300, 0309,		0062
Granada	0171, 0282, 0320,	Initial	0153		0317, 0320, 0323,	Minerva	0171
	0321, 0342, 0344,	Inno Hit	0171, 0282, 0320,		0328, 0342, 0343,	Minoka	0320, 0350
	0346, 0349, 0350		0323, 0340, 0342,		0346, 0349, 0350,	Mintek	0153
Grandin	0340, 0343, 0348,		0343, 0349, 0350		0366, 0368, 0377,	Mitsubishi	0008, 0026, 0031,
	0349	Innovation	0337, 0343		0466, 0471, 0478		0053, 0066, 0084,
Gronic	0282	Insignia	0131, 0228, 0236,	LG/GoldStar	0164		0093, 0098, 0150,
Grundig	0160, 0161, 0171,		0238	Liesenk	0349		0178, 0289, 0320,
	0310, 0320	Inteq	0030	Liesenkotter	0320		0339, 0344, 0350,
Grunpy	0058, 0059, 0179	Interactive	0161	Life	0337, 0343		0376
Haier	0157, 0233	Interbuy	0323, 0343	Lifetec	0320, 0323, 0337,	Mivar	0161, 0168, 0171,
Halifax	0277, 0282, 0337,	Interfunk	0161, 0320, 0339,		0343		0277, 0282, 0342
	0342		0347, 0349, 0350	Lloyds	0323	Monivision	0140
Hallmark	0008, 0026, 0031	International	0277	Loewe	0161, 0168, 0265,	Montgomery Ward	
Hampton	0277, 0282, 0342	Intervision	0161, 0282, 0320,		0320, 0330, 0352		0054
Hanseatic	0161, 0168, 0282,		0337, 0341, 0342	Loewe Opta	0339, 0349, 0350	Motion	0171
	0320, 0323, 0342,	Irradio	0171, 0320, 0323,	Logik	0054	Motorola	0052, 0178
	0343, 0344, 0349,		0340, 0343, 0349,	Luma	0320, 0323, 0346,	MTC	0008, 0026, 0050,
	0350		0350		0349		0053, 0161, 0277
Hantarex	0320, 0323, 0343	Isukai	0320, 0340	Lumatron	0282, 0320, 0346,	Multi System	0349
Hantor	0320	ITC	0282, 0342		0349, 0350	Multitech	0058, 0161, 0179,
Harman/Kardon	0010	ITS	0277, 0320, 0340,	Lux May	0350		0183, 0277, 0282,
Harvard	0058, 0179		0348, 0350	Luxman	0008, 0026		0320, 0323, 0341,
Harwood	0320, 0323	ITT	0343, 0347	Luxor	0282, 0342, 0346		0342, 0343, 0344,
Havermy	0178	ITV	0320, 0343, 0349	LXI	0010, 0019, 0021,		0346, 0349
HCM	0282, 0320, 0323,	Janeil	0057		0026, 0027, 0031,	Murphy	0277, 0342
	0337, 0342, 0343,	JBL	0010		0049, 0111	NAD	0026, 0031, 0111
	0348	JC Penney	0007, 0008, 0026,	M Electronic	0342, 0343, 0345,	Naonis	0346
			0027, 0049, 0053,		0347, 0349, 0350	NEC	0008, 0026, 0050,
Hema	0282, 0323		0056	MAG	0096		0052, 0053, 0072,
Hewlett Packard	0192	JCB	0055, 0107	Magnadyne	0339, 0341, 0349		0103, 0282, 0344
Higashi	0277	Jensen	0008, 0026	Magnafon	0171, 0277, 0341,	Neckermann	0161, 0282, 0320,
HiLine	0320	JVC	0012, 0014, 0015,		0342		0339, 0342, 0346,
Hinari	0320, 0323, 0340,		0056, 0064, 0065,	Magnavox	0008, 0009, 0010,		0349, 0350, 0351
	0343, 0344, 0349,		0067, 0169, 0174,		0013, 0026, 0032,	NEI	0320, 0349, 0350
	0350		0297, 0314, 0344,		0033, 0048, 0050,	Net-TV	0176
Hisawa	0321, 0340, 0348		0350, 0375		0128, 0211, 0212,	Neufunk	0320, 0323
Hisense	0247				0224, 0226, 0239	New Tech	0343, 0350
		Kaisui	0277, 0282, 0320,		0337, 0343	New World	0340
			0323, 0340, 0342,	Magnum	0054	NewTech	0282, 0320, 0323
			0343, 0348	Majestic		Nicamagic	0277, 0342
		Kamosonic	0342	Mandor	0337		

Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350		0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360,	Reflex Revox	0320 0161, 0320, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091,
Nikko	0026, 0031, 0050		0380, 0383, 0452, 0459, 0460	Rex RFT	0337, 0346, 0347 0161, 0168, 0339		0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279,
Noblisko	0171, 0277, 0341, 0342		0011, 0032, 0033	Rhapsody R-Line	0277 0320, 0349, 0350		0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476, 0481
Nokia	0347	Philips Magnavox	0161, 0277, 0320, 0339, 0349, 0350	Roadstar	0323, 0337, 0340, 0343		0370, 0449, 0450, 0451, 0464, 0474, 0476, 0481
Norcent	0201	Phoenix	0277, 0320, 0339, 0349, 0350	Robotron Rowa	0339 0277, 0282, 0400, 0403, 0494		0476, 0481
Nordic	0282	Phonola	0007, 0008, 0050 0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458, 0480	Royal Lux RTF	0161 0339	Sheng Chia	0178
Nordmende	0339, 0345, 0347, 0350	Pioneer	0345, 0347, 0349, 0350, 0458, 0480	Runco Saba	0030, 0050, 0062 0298, 0322, 0339, 0345, 0347	Shogun	0008
Nordvision	0349	Pilot	0320, 0323, 0337, 0350	Saisho	0282, 0323, 0337, 0342, 0343	Siarem	0320, 0339, 0341
Novatronic	0320	Playsonic	0282	Salora	0346, 0347	Sierra	0320, 0350
Oceanic	0321, 0347	Polaroid	0039, 0142, 0202, 0234	Sambors Sampo	0171, 0341 0007, 0008, 0026, 0050, 0176, 0400	Siesta	0161
Okano	0161, 0320, 0351	Poppy	0323, 0343	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Skyworth	0402, 0492, 0493, 0495
Olevia	0102, 0199, 0200, 0207, 0222	Prandoni-Prince	0171, 0346	Solavox	0050, 0176, 0400	Sonitron	0161, 0282
ONCEAS	0342	Precision	0282, 0342	Sonoko	0171, 0341	Sonolor	0321, 0347
Onwa	0058, 0179	Prima	0157, 0243, 0323, 0343, 0347	Sontec	0007, 0008, 0026, 0050, 0176, 0400	Sony	0038, 0044, 0045, 0047, 0055, 0090, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475, 0486
Opera	0320	Princeton	0140	Sony	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Sound & Vision	0340, 0341
Oppo	0130	Proton	0008, 0012, 0026, 0031	Sony	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Soundesign	0008, 0026, 0031, 0058, 0059, 0179
Optimus	0017, 0019	PROVIEW	0096, 0246	Sony	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Soundwave	0320, 0349, 0350
Optoma	0144	Provision	0320, 0349	SBR	0320, 0349	Squareview	0051
Optonica	0178	Pulsar	0008, 0030, 0062	Sceptre	0235, 0244	SSS	0008, 0058, 0179
Orbit	0320, 0350	Pye	0256, 0320, 0349, 0350, 0378	Schaub Lorenz Schneider	0347 0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350
Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350	Quasar	0323, 0343	SEI	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Starlite	0058, 0179, 0320, 0323, 0349
Orline	0320	Quelie	0282, 0320, 0337, 0342, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Stenway	0348
Osaki	0282, 0320, 0337, 0340, 0342	Questa	0344	Seleco	0344, 0346, 0347	Stern	0346, 0347
Oso	0340	Radialva	0320	Sencora	0323, 0343	Strato	0320, 0323
Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350	RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Sentra	0323	Stylandia	0282
Pael	0277, 0342	RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Serino	0277	Sunkai	0343
Palladium	0161, 0282, 0320, 0342, 0351	Radiola	0282, 0320, 0349, 0350	SEI	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Sunstar	0320, 0323
Palsonic	0282	Radiomarelli	0320, 0339	SEI	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Sunwood	0320, 0323, 0343, 0350
Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343	Radiotone	0161, 0320, 0323, 0350	SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Superla	0277, 0282, 0342
Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356, 0483, 0485, 0490	Rank	0344	SEI	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Superscan	0013, 0178
Panavision	0320	RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	SEI	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	SuperTech	0277, 0320, 0323
Pathe Cinema	0161, 0168, 0277, 0321, 0342	Realistic	0019, 0031, 0050, 0179	SEI-Sinudyne	0339, 0341, 0347	Supra	0323, 0343
Pausa	0323, 0343	Recor	0320	Sencora	0323, 0343	Supre-Macy	0057
Penney	0021, 0023, 0031, 0050, 0111	Redstar	0320	Sentra	0323	Supreme	0055, 0107
Perdio	0277, 0320			Serino	0277	Susumu	0340
Perfekt	0320			Sinudyne	0323, 0343	Sutron	0323, 0343
Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339			Sinudyne	0323, 0343	SVA	0151
Philharmonic	0282, 0342			Sinudyne	0323, 0343	Sydney	0277, 0282, 0342
Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305,			Sinudyne	0323, 0343		

Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	Trans Continen	0282, 0320	<b>VCR</b>	Dish Network	1018
Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Transtec	0277	ABS	Dishpro	1018
Syntax	0199	Trident	0282	Adventura	Dual	1009, 1027, 1028
Syntax-Brilliant	0199	Triumph	0320	Adyson	Dumont	1026, 1028
Sysline	0349	Uher	0161, 0171, 0320, 0347, 0350	Aiwa	Durabrand	1114
Sytong	0277	Ultravox	0277, 0320, 0339, 0341, 0342	Akai	Dynatech	1069
Tandy	0178, 0282, 0336, 0340, 0342, 0347	Unic Line	0320	Akiba	Echostar	1018
Tashiko	0277, 0282, 0342, 0344, 0346	United	0349	Akura	Elbe	1009
Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Universonum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351	Alba	Elcatech	1008
TCM	0337, 0343	Univox	0320	Alienware	Electrohome	1071
TCL	0400, 0401, 0403, 0406, 0494	Vector Research	0050	Ambassador	Electroponic	1071
Teac	0282, 0320, 0400	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351	American High	Elsay	1008
Tec	0282, 0323, 0342, 0343	Vexa	0320, 0323, 0343, 0349	Amstrad	Elta	1008, 1009, 1029
Technics	0017, 0023, 0056	Victor	0015, 0344, 0350	Anitech	Emerson	1008, 1020, 1068, 1069, 1071
TechniSat	0274, 0496, 0497, 0499	VIDEOLOGIC	0277	Apex	ESC	1009, 1025
Techwood	0008, 0023, 0026, 0056	Videologique	0277, 0282, 0340, 0342	ASA	Etzuko	1008, 1029
TEDELEX	0282	VideoSystem	0320, 0350	Asha	Expressv	1018
Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Videotechnic	0277, 0282	Asuka	Ferguson	1027
Teleavia	0345	Vidikron	0010	Audio Dynamics	Fidelity	1008, 1026
Telecor	0282, 0320	Vidtech	0008, 0026, 0031, 0053	Audiosonic	Finlandia	1028
Telefunken	0320, 0322, 0345, 0350	Viewsonic	0176, 0203, 0232, 0364	Baird	Finlux	1026, 1027, 1028
Telegazi	0320	Viking	0057	Bang & Olufsen	Firstline	1008, 1024, 1029, 1031
Telemeister	0320	Viore	0148	Basic Line	Fisher	1065
Telesonic	0320	Visiola	0277, 0342	Baur	Flint	1024
Telestar	0320, 0323, 0343, 0349	Vision	0282, 0320, 0350	Beaumarck	Formenti/Phoenix	1028
Teleton	0282, 0342	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506	Bell & Howell	Frontech	1030
Televideo	0277	Vortec	0320, 0349, 0350	Bestar	Fuji	1068
Televiso	0321	Voxson	0171, 0320, 0339, 0346, 0347, 0350	Black Panther Line	Fujitsu	1026
Tensai	0282, 0320, 0323, 0340, 0343, 0350	Waltham	0282, 0320, 0342	Blaupunkt	Funai	1026, 1069
Tesmet	0350	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059	Bondstec	Galaxy	1026
Tevion	0337, 0343	Watson	0320, 0349, 0350	Broksonic	Garrard	1069
Texet	0277, 0282, 0323, 0342	Watt Radio	0277, 0341, 0342	Bush	Gateway	1016
Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350	Waycon	0111	Bush	GBC	1029, 1030
Thorn	0320, 0349	Wega	0320, 0339, 0344	Calix	GE	1068, 1070
TMK	0008, 0026, 0031	Wegavox	0323	Candle	GEC	1028
TNCi	0030	Weltblick	0282, 0320, 0349, 0350	Canon	Geloso	1029
Tokai	0282, 0320, 0350	Westinghouse	0107, 0216, 0220	Cathay	General	1030
Tokyo	0277, 0342	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349	Catron	General Technic	1024
Tomashi	0348	Wincom	0101, 0106	CGE	GOI	1018
Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454, 0491	Xrypton	0320	Cimline	GoldHand	1008, 1029
Totevision	0007	Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087	CineVision	Goldstar	1026, 1031, 1064, 1071
Towada	0282, 0347	Yamishi	0282, 0320	Citizen	Goodmans	1008, 1009, 1025, 1026, 1029, 1030, 1031
Trakton	0282	Yokan	0320	Clatronic	Gradiente	1069
		Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350	Colorlyme	Graetz	1027
		Yorx	0340	Condor	Granada	1028
		Zanussi	0282, 0346	Craig	Grandin	1008, 1009, 1025, 1026, 1029, 1030, 1031
		Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062	Crown	Grundig	1028, 1029
				Curtis Mathes	Hanseatic	1009, 1028, 1031
				Cybernex	Harley Davidson	1069
				CyberPower	Harman/Kardon	1064
				Daewoo	Harwood	1008
				Dansai	HCM	1008, 1029
				Dantax	Headquarter	1065
				Daytron	Hewlett Packard	1016
				DBX	Hinari	1008, 1009, 1024, 1029
				De Graaf	Hisawa	1024
				Decca	Hitachi	1011, 1026, 1027, 1028, 1046, 1062
				Dell	HNS	1110
				Denko	Howard Computers	1016
				DiamondVision	HP	1016
				DigiFusion	HTS	1018
				DIRECTV	Hughes	1111, 1113, 1122
					Hughes Network Systems	1110, 1116
					Humax	1012, 1110, 1113



Hush	1016	MTC	1070	RFT	1008, 1028, 1030	Teleavia	1027
Hypson	1008, 1009, 1024, 1029	Multitech	1008, 1026, 1028, 1029, 1030, 1069, 1070	Ricavision	1016	Telefunken	1027
iBUYPOWER	1016			Roadstar	1008, 1009, 1025, 1029, 1031	Teletech	1008, 1009
Impego	1030	Murphy	1026	Royal	1008	Tenosal	1008, 1029
Imperial	1026	NEC	1027, 1064, 1065	Runco	1114	Tensai	1008, 1026, 1029, 1031
Inno Hit	1008, 1009, 1025, 1028, 1029, 1030	Neckermann	1027, 1028	Saba	1027	Tevion	1024
Innovation	1024	NEI	1028	Saisho	1024, 1029	Thomson	1005, 1027
Instant Replay	1068	Nesco	1008, 1029	Samsung	1002, 1034, 1041, 1043, 1057, 1060, 1070, 1084, 1110, 1116, 1122, 1124, 1220, 1222	Thorn	1027
Interbuy	1008, 1031	Nikkai	1008, 1009, 1030			Tivo	1108, 1110, 1111, 1113, 1117, 1118, 1119, 1122
Interfunk	1028	Nikko	1071			TMK	1070
Intervision	1009, 1026	Niveus Media	1016			Tokai	1008, 1029, 1031
Irradio	1008, 1029, 1031	Noblex	1070	Samurai	1008, 1030	Tonsai	1029
ITT	1027	Nokia	1009, 1027	Sanky	1114	Toshiba	1004, 1016, 1027, 1028, 1037, 1049, 1052, 1086, 1087, 1097, 1109, 1112, 1194
ITV	1009, 1025, 1031	Nordmende	1027	Sansui	1023, 1027, 1106, 1115	Totevision	1070, 1071
JC Penney	1064, 1065, 1068, 1070, 1071	Northgate	1016	Sanyo	1032, 1065, 1070	Touch	1016
JCL	1068	Oceanic	1026, 1027	Saville	1009	Towada	1008, 1029
JVC	1007, 1018, 1027, 1039, 1064, 1065, 1066, 1067, 1078, 1089, 1092, 1093, 1094, 1095, 1113, 1208, 1209, 1212, 1213, 1215, 1218	Okano	1008, 1009, 1024	SBR	1028	Towika	1008, 1029
Kaisui	1008, 1029	Olympus	1068	Schaub Lorenz	1026, 1027	TVA	1030
Karcher	1028	Orion	1023, 1024, 1051, 1115, 1217	Schneider	1008, 1009, 1024, 1025, 1026, 1028, 1029, 1030, 1031	Uher	1031
Kendo	1008, 1024, 1025, 1030	Orson	1026	Sears	1065, 1068, 1071	UltimateTV	1019
Kenwood	1027, 1064, 1065	Osaki	1008, 1026, 1029, 1031	SEG	1008, 1009, 1029	Ultravox	1009
Kodak	1068, 1071	Otto Versand	1028	SEI-Sinudyne	1028	Unitech	1070
Korpel	1008, 1029	Palladium	1008, 1027, 1029, 1031	Seleco	1027	United Quick Star	1009, 1025
Kyoto	1008	Panasonic	1000, 1022, 1044, 1055, 1068, 1072, 1085, 1090, 1091, 1120, 1121, 1214	Sentra	1008, 1030	Universum	1026, 1028, 1031
Lenco	1025	Pathe Marconi	1027	Sentron	1008, 1029	Vector Research	1064
Leyco	1008, 1029	Perdio	1026	Sharp	1003, 1033, 1077, 1107, 1127, 1219	Video Concepts	1064
LG	1010, 1026, 1031, 1047, 1054, 1056, 1071, 1103, 1221	Philco	1008, 1068	Shintom	1008, 1029	Videon	1024
Lifetec	1024	Philips	1006, 1013, 1028, 1035, 1040, 1045, 1046, 1050, 1058, 1059, 1061, 1068, 1076, 1101, 1110, 1113, 1116, 1117, 1122, 1126, 1210, 1211	Shivaki	1031	Videosonic	1070
Linksys	1016	Philips Magnavox	1076	Shogun	1070	Viewsonic	1016
Lloyd's	1069	Phonola	1028	Siemens	1031	Voodoo	1016
Loewe Opta	1028, 1031	Pilot	1071	Silva	1031	Wards	1068, 1069, 1070, 1071
Logik	1008, 1029	Pioneer	1028, 1036	Silver	1009	Weltblick	1031
Lumatron	1009, 1025	Polaroid	1088, 1099	Singer	1068	XR-1000	1068, 1069
Luxor	1008	Portland	1009, 1025, 1030	Sinudyne	1028	Yamaha	1064, 1065
LXI	1071	Prinz	1026	Solavox	1030	Yamishi	1008, 1029
M Electronic	1026	Profex	1029	Sonic Blue	1022, 1123	Yokan	1008, 1029
Magnavox	1020, 1068, 1114, 1126	Proline	1026	Sonneclair	1008	Yoko	1008, 1029, 1030, 1031
Magnin	1071	Proscan	1019	Sonoko	1009, 1025	Zenith	1114
Manesth	1008, 1029	Prosonic	1009, 1024	Sontec	1031	ZT Group	1016
Marantz	1028, 1064, 1065, 1068	Pulsar	1114	Sony	1001, 1016, 1048, 1053, 1073, 1074, 1080, 1081, 1082, 1083, 1108, 1118, 1216		
Mark	1009	Pye	1028, 1102	Stack	1016	<b>DVD</b>	
Marta	1071	Quarter	1065	Stack 9	1016	4Kus	2051
Matsui	1024, 1031	Quartz	1065	Standard	1009, 1025	Accurian	2142
Matsushita	1068	Quasar	1068	Stern	1009	Advent	2155, 2251
Media Center PC	1016	Quelle	1026, 1028	STS	1068	AEG	2362
Mediator	1028	Radiolva	1008	Sunkai	1024	Airis	2364
Medion	1024	RadioShack	1071	Sunstar	1026	Aiwa	2322
MEI	1068	RadioShack/Realistic	1065, 1068, 1069, 1070, 1071	Suntronic	1026	Akai	2145, 2177, 2179, 2248
Memorex	1023, 1026, 1031, 1065, 1068, 1069, 1070, 1071, 1098, 1114	Radiola	1028	Sunwood	1008, 1029	Akura	2356
Memphis	1008, 1029	Radix	1071	Superscan	1020	Alba	2064, 2165, 2186, 2337, 2346
MGN Technology	1070	Randex	1071	Sylvania	1020, 1068, 1069, 1102, 1126	Alco	2149
Micromaxx	1024	RCA	1019, 1068, 1070, 1075, 1110, 1113, 1122, 1125	Symphonic	1008, 1069, 1126	Alize	2361
Microsoft	1016	Realistic	1065, 1068, 1069, 1070, 1071	Systemax	1016	Allegro	2133
Microstar	1024	ReplayTV	1022, 1123	Tagar Systems	1016	Amitech	2362
Migros	1026	Rex	1027	Taisho	1024	Amphion MediaWorks	2195
Mind	1016			Tandberg	1009	AMW	2195, 2363
Mitsubishi	1026, 1028, 1079			Tandy	1065	Apex	2030, 2124, 2125, 2126, 2127, 2130, 2131
Motorola	1068			Tashiko	1026, 1071	Apple	2241
				Tatung	1026, 1027, 1028	Arrgo	2138
				TCM	1015, 1024, 1042	Asono	2364
				Teac	1009, 1069		
				Tec	1008, 1009, 1030		
				Technics	1068		
				Teknika	1068, 1069, 1071		

Aspire	2152, 2222	Elta	2341, 2361, 2362	Lenco	2358, 2362, 2367	Philips	2008, 2012, 2025,
Astar	2240	Emerson	2129, 2137, 2150	Lennox	2136, 2153		2044, 2050, 2051,
ATACOM	2364	Enterprise	2129	LG	2002, 2033, 2038,		2053, 2060, 2072,
Audiovox	2061, 2149	Enzer	2380		2057, 2129, 2133,		2108, 2111, 2147,
Avious	2367	Epson	2247		2189, 2191, 2223,		2159, 2163, 2169,
Awa	2363	ESA	2137		2238, 2270, 2288,		2174, 2181, 2185,
Axion	2249	Finlux	2354, 2362, 2367		2335, 2373, 2375		2230, 2361, 2266,
Bang & Olufsen	2128	Fintec	2377	Life	2182		2267, 2286, 2287,
Baze	2367	Fisher	2134	Lifetec	2182		2289, 2295, 2300,
BBK	2364	Funai	2137	Limit	2355		2302, 2317, 2328,
Bellagio	2363	Gateway	2051	Liquid Video	2158		2338, 2342, 2350,
Best Buy	2359	GE	2029, 2131, 2156	Liteon	2043, 2051, 2142		2467
Blaupunkt	2131	Gericom	2351	Loewe	2320	Phonotrend	2367
Blue Parade	2157	GFM	2226	LogicLab	2355	Pioneer	2016, 2017, 2018,
Boghe	2382	Giec	2382	Magnavox	2025, 2050, 2137,		2019, 2035, 2092,
Brainwave	2362	Global Solutions	2355		2150, 2159, 2224,		2094, 2095, 2109,
Brandt	2148, 2188	Global Sphere	2355		2230, 2358		2157, 2180, 2190,
Broksonic	2145, 2146	Go Video	2133, 2213	Magnex	2367		2212, 2269, 2272,
Bush	2064, 2110, 2170,	Goodmans	2165, 2280, 2291,	Majestic	2360		2299, 2304, 2305,
	2268, 2290, 2346,		2358, 2371, 2376,	Marantz	2328		2306, 2307, 2308,
	2358, 2367, 2383		2382	Marquant	2362		2309, 2310, 2311,
California Audio Labs		GPX	2227	Matsui	2148, 2378		2344, 2345, 2347,
	2151	Gradiente	2151	McIntosh	2199		2379
Cambridge Audio	2354	Graetz	2380	Mecotek	2362	Pointer	2362
CAT	2352, 2353	Greenhill	2131	Medion	2182	Polaroid	2125, 2215, 2235
CAVS	2192	Grundig	2349	Memorex	2028, 2145, 2234	Portland	2362
Centrum	2353	Grunkel	2362, 2366	MiCO	2354, 2382	Powerpoint	2363
CGV	2354, 2362	GVG	2377	Micromaxx	2182	Prima	2252
Changhong	2140	H&B	2358	Microsoft	2156	Proceed	2130
Cinetec	2363	H_her	2364	Microstar	2182	Proscan	2156
CineVision	2133, 2237	Haaz	2354, 2355	Minoka	2362	Prosonic	2360, 2377
Clatronic	2358, 2367	Haier	2254	Minowa	2367	Prottron	2202
Coby	2031, 2046, 2360	Harman/Kardon	2047, 2135	Mintek	2131, 2245	Provision	2358
Conia	2383	HiMAX	2359	Mitsubishi	2003	Pye	2144
Continental Edison		Hitachi	2062, 2090, 2115,	Mizuda	2358, 2359	Qwestar	2148
	2363		2274, 2316, 2359,	Monyka	2380	Raite	2380
Crown	2362		2380	Mustek	2186	RCA	2021, 2029, 2104,
C-Tech	2355	Hiteker	2130	Mx Onda	2354		2105, 2131, 2149,
Curtis Mathes	2139	Home Tech Industries		Mystral	2366		2156, 2157, 2229
CVG	2377		2364	Naiko	2362	RedStar	2356, 2360, 2362
CyberHome	2022, 2098, 2138,	Hyundai	2366	Nesa	2131	Regent	2153
	2187, 2336	Ilo	2245	Neufunk	2380	Reoc	2355
Cytron	2244	Initial	2131, 2245	Nevir	2362	Rimax	2361
Daenyx	2363	Innovation	2182	Next Base	2143	Rio	2133
Daewoo	2001, 2133, 2276,	Insignia	2002, 2137, 2253	Nexxtech	2243	Roadstar	2331, 2358
	2298, 2330, 2362,	Integra	2157	NU-TEC	2383	Ronin	2363
	2363, 2377	Irradio	2053	Onkyo	2159, 2368	Rotel	2203
Daewoo International		iSymphony	2246	Oopla	2051	Rowa	2154, 2383
	2363	JBL	2135	Oppo	2196, 2255	Rownsonic	2353
Dalton	2357	JVC	2020, 2096, 2097,	Optim	2381	Saba	2148, 2188
Dansai	2362, 2381		2099, 2100, 2101,	Optimus	2180	Sabaki	2355
Daytek	2184, 2195, 2363		2102, 2103, 2106,	Orava	2358	Saivod	2362
Dayton	2363		2107, 2160, 2257,	Orbit	2363	Sampo	2141
DEC	2358		2260, 2262, 2263,	Orion	2073, 2110	Samsung	2000, 2045, 2077,
Decca	2362		2321, 2324, 2326,	Oritron	2148, 2158		2112, 2113, 2114,
Denon	2059, 2151, 2193,		2327, 2343, 2464,	P&B	2358		2115, 2151, 2200,
	2332		2465, 2468, 2469,	Pacific	2355		2216, 2219, 2228,
Denver	2356, 2358, 2360,		2471	Panasonic	2011, 2024, 2034,		2264, 2265, 2271,
	2370	Jwin	2198		2042, 2058, 2062,		2279, 2294, 2303,
Denzel	2380	Kansai	2360		2066, 2067, 2093,		2329, 2365
Desay	2205	Kawasaki	2149		2116, 2117, 2118,	Sansui	2073, 2145, 2354,
Diamond	2354, 2355	Kennex	2362		2119, 2120, 2121,		2355, 2362
DiamondVision	2225, 2232	Kenwood	2041, 2151, 2348		2122, 2123, 2151,	Sanyo	2134, 2145, 2217,
Disney	2010, 2028	KeyPlug	2362		2159, 2164, 2166,		2292
DK Digital	2339	Kiirro	2362		2167, 2172, 2173,	ScanMagic	2186
Dmtech	2176	Kingavon	2358		2175, 2209, 2214,	Schaub Lorenz	2362
Dual	2380	Kiss	2380		2275, 2277, 2278,	Schneider	2176
DUNE	2509	KLH	2131, 2149		2281, 2282, 2283,	Scientific Labs	2355
Durabrand	2136	Koda	2358		2301, 2374, 2470	Scott	2161, 2357
DVX	2355	Koss	2013, 2148, 2158	Parasound	2197	Seeltech	2364
Easy Home	2359	KXD	2359	peeKTON	2364	SEG	2161, 2355, 2363,
Eclipse	2354	Landel	2143				2380
E-Dem	2364	Lasonic	2132				
Electrohome	2362	Lawson	2355				
Elin	2362	Lecson	2381				

Sharp	2006, 2040, 2088, 2091, 2182, 2194, 2220, 2221, 2231, 2236, 2293, 2340	Venturer	2149	JVC	2100, 2101, 2106, 2107	Gemini	3072, 3123
Shinasonic	2245	Viewmaster	2364	LG	2033, 2057, 2223, 2238	General Instrument	3017, 3025, 3066, 3084, 3090, 3096, 3117
Sigmatek	2359, 2364	Vocopro	2206	Liteon	2043	Goldstar	3120
Silva	2356	VocoStar	2207	Panasonic	2011, 2034, 2058, 2062, 2116, 2117, 2119, 2120, 2121, 2123	Gooding	3099
Singer	2354, 2355	Waitec	2364	Philips	2008, 2044, 2050, 2051, 2147	Grundig	3098, 3099
Skymaster	2325, 2355	Welltech	2382	Pioneer	2017, 2035	Hamlin	3073, 3078
Skyworth	2356	Westinghouse	2063, 2250	Pye	2144	Hirschmann	3097
Slim Art	2362	Wharfedale	2354, 2355	Samsung	2000, 2112, 2216	Hitachi	3066
SM Electronic	2355	Woxter	2361, 2364	Sansui	2073	HomeChoice	3106
Sonic Blue	2133	Xbox	2156, 2183	Sanyo	2217	Humax	3021, 3080, 3083
Sontech	2366	Xlogic	2355, 2362	Sony	2004, 2005, 2007, 2052, 2068, 2069, 2074, 2208, 2210, 2211	ITT Nokia	3097
Sony	2004, 2005, 2007, 2009, 2014, 2015, 2023, 2026, 2027, 2052, 2068, 2069, 2070, 2071, 2074, 2075, 2084, 2085, 2087, 2168, 2171, 2208, 2210, 2211, 2258, 2273, 2284, 2285, 2312, 2313, 2314, 2315, 2318, 2319, 2466	XMS	2362	Sylvania	2239	Jasco	3123
Soundmaster	2355	Xoro	2382	Toshiba	2032, 2036, 2037, 2039, 2049, 2054, 2055, 2076	Jerrold	3017, 3018, 3025, 3066, 3072, 3084, 3090, 3096, 3119, 3123
Soundmax	2355	Yamada	2051, 2361, 2363	Yamaha	2056	JVC	3099
Spectra	2363	Yamaha	2056, 2064, 2065, 2080, 2081, 2082, 2083, 2089, 2118, 2151, 2323			Kabel Deutschland	3024, 3027, 3121
Spectroniq	2201	Yamakawa	2363, 2380			Macab	3101
Standard	2355	Yukai	2186			Magnavox	3079
Star Cluster	2355	Zenith	2002, 2129, 2133, 2159, 2223			Maspro	3099
Starmedia	2358, 2364					Matsui	3099
Sungale	2204					MegaCable	3117
Sunkai	2362					Memorex	3076, 3122
Superscan	2150					Minerva	3099
Supervision	2355					Mnet	3107
Sylvania	2012, 2137, 2150, 2178, 2230, 2239					Motorola	3025, 3026, 3084, 3088, 3090, 3095, 3117
Symphonic	2108, 2230					Movie Time	3077, 3109
Synn	2355					Mr Zapp	3101
T.D.E. Systems	2366					Multichoice	3107
Tatung	2001, 2362					Multitech	3127
TCM	2182, 2297					NEC	3064
Teac	2149, 2333, 2355, 2383					NET Brazil	3085
Tec	2356					Nokia	3097
Technics	2151					Noos	3101
Technika	2362, 2367					NSC	3077
Telefunken	2353					Oak	3074
Tensai	2362					Pace	3006, 3089, 3121
Tevion	2182, 2355, 2357					Palladium	3099
Theta Digital	2157					Panasonic	3112, 3118, 3122
Thomson	2183, 2188, 2334, 2372					Paragon	3122
Tokai	2356, 2380					Philips	3068, 3071, 3079, 3099, 3100, 3101, 3103
Top Success	2364					Pioneer	3001, 3006, 3094, 3098, 3114, 3116, 3120
Toshiba	2032, 2036, 2037, 2039, 2048, 2049, 2054, 2055, 2072, 2073, 2076, 2078, 2079, 2086, 2145, 2159, 2218, 2233, 2256, 2259, 2296, 2369, 2508					Popular Mechanics	3126
TRANScontinents	2363, 2367					Proscan	3066, 3093
Transonic	2367					Pulsar	3122
Trio	2362					PVP Stereo Visual Matrix	3018
Trutech	2242					Quasar	3122
TruVision	2359					RadioShack	3123, 3127
TSM	2364					RCA	3030, 3031, 3087, 3118
Umax	2361					Realistic	3070
United	2367					Recoton	3126
Urban Concepts	2159					Regal	3078
US Logic	2245					Regency	3075
						Rembrandt	3066
						Runco	3122
						Sagem	3101
						Samsung	3069, 3089, 3114, 3120
						SAT	3098

### Blu-ray Disc

Denon	2452, 2500, 2501
Hitachi	2460, 2461, 2463
JVC	2472, 2473, 2475, 2478, 2496, 2499, 2511
LG	2033, 2456, 2457
Marantz (US)	2454, 2455
Mitsubishi	2450, 2451
Onkyo	2504
Panasonic	2011, 2209, 2214, 2476, 2477, 2479
Philips	2510
Pioneer	2212, 2506
Samsung	2045, 2113, 2498
Sharp	2194, 2220, 2221, 2497, 2502, 2503
Sony	2075, 2453, 2458, 2459, 2507
Toshiba	2462
Yamaha	2064, 2448, 2449, 2474, 2505

### DVR

Bush	2110
Hitachi	2090
Panasonic	2066, 2067, 2093, 2116, 2117, 2119, 2120, 2122, 2123
Philips	2108, 2111
Pioneer	2016, 2017, 2018, 2019, 2092, 2094, 2095, 2109
RCA	2105
Samsung	2113, 2219
Sharp	2088, 2091
Sony	2084, 2085, 2087
Toshiba	2086
Victor	2475
Yamaha	2089, 2118

### DVD Recorder

Aspire	2222
Astar	2240
Broksonic	2146
Go Video	2213
Hitachi	2062
Insignia	2002
Irradio	2053

### Cable

ABC	3002, 3003, 3017, 3066, 3067, 3086, 3093, 3119, 3122
ADB	3020
Adelphia	3081
Alcatel	3016
Americast	3124
Amstrad	3022, 3098
Antronix	3065, 3070
Archer	3070
Arcon	3098
AT&T	3095
Axis	3098
Bell South	3124
Cable Vision	3092
Cabletenna	3065
Cabletime	3104
Cableview	3087
Clearmaster	3127
ClearMax	3127
Clyde Cablevision	3105
Colour Voice	3068
Comcast	3084, 3088, 3117
Comcrypt	3107
Comtronics	3069
Contec	3074
Coolmax	3127
COX	3084
Cryptovision	3110
Director	3084
Eastern	3075
Everquest	3123
Fidelity	3098
Filmnet	3107
Filmnet Cablecrypt	3111
Filmnet Comcrypt	3111
Finlux	3097
FIOS	3005
Focus	3126
Foxtel	3022
France Telecom	3100, 3101
Freebox	3023
GC Electronics	3070
GE	3066, 3093
GEC	3105

Scientific Atlanta	3000, 3001, 3002, 3003, 3006, 3028, 3029, 3081, 3086, 3089, 3094, 3095, 3108	Astra	4009, 4011, 4054, 4217, 4219	Distrisat	4053	Homecast	4084, 4085, 4087
Signal	3072, 3123	Astro	4004, 4008, 4010, 4015, 4024, 4213, 4218, 4219	Ditristrad	4048	Houston	4048
Signature	3066	AudioTon	4004, 4048	DNT	4014, 4053, 4055	HTS	4117
Sony	3092, 3125	Aurora	4222, 4246	Drake	4072	Hughes	4064, 4068, 4192, 4194, 4196, 4202
Sprucer	3118	Austar	4222, 4246	DStv	4222, 4246	Hughes Network Systems	4071
Standard Component	3115	Axiel	4216	Dune	4024, 4240, 4242	Humax	4025, 4030, 4060, 4097
Starcom	3017, 3072, 3119, 3123	Axis	4008, 4009, 4024, 4050	Echostar	4014, 4018, 4065, 4089, 4117, 4217	Huth	4005, 4011, 4012, 4013, 4048, 4050, 4219, 4223
Stargate	3072, 3123	BBK	4205	Elap	4217	Hypson	4031
Starquest	3072, 3123	Best	4008, 4024	Elekta	4010	Ilo	4016
Supercable	3090	Blaupunkt	4015	Elsat	4217	Imex	4031
Supermax	3127	Blue Sky	4217	Elta	4001, 4008, 4024, 4048, 4053, 4055	Innovation	4008
Tele+1	3107, 3111	Boca	4011, 4054, 4059, 4217	Emanon	4001	Insignia	4107
TELENET	3004	Boston	4216	Emme Esse	4008, 4024	Intertronic	4011
Telepiu	3107	Brain Wave	4013	Engel	4217	Intervision	4048, 4219
Thomson	3082, 3091	Broadcast	4012	Ep Sat	4006	ITT Nokia	4006
TIME WARNER	3084	Broco	4217	EURIEULT	4031	Jerrold	4019
Tocom	3067	BSkyB	4035, 4041	Eurodec	4052	Johansson	4013
Torx	3017	BT	4216	Europa	4053, 4218, 4219	JOK	4216
Toshiba	3122	Bubu Sat	4217	Europhon	4219	JSR	4048
Tristar	3127	Bush	4006, 4045	Eurosat	4011	JVC	4029, 4065, 4089, 4117
Tudi	3102	Cambridge	4218	Eurosky	4008, 4011, 4215, 4218, 4219, 4024	Kamm	4217
Tusa	3072, 3123	Canal Satellite	4213	Eurostar	4011, 4215, 4219	Kathrein	4015, 4034, 4042, 4053, 4055, 4063, 4215, 4216, 4217
TV86	3077	Canal+	4213	Eutelsat	4217	Kathrein Eurostar	4215
Unika	3065, 3070	CaptiveWorks	4099	Exator	4001, 4004	Klap	4216
United Cable	3018, 3119	Channel Master	4007, 4110	Expressvu	4117	Konig	4219
Universal	3065, 3070	Chaparral	4075	Fenner	4024, 4212, 4217	Kosmos	4049
Universum	3097, 3099	CHEROKEE	4216	Ferguson	4006, 4052, 4214	KR	4004
V2	3127	Chess	4212, 4217	Fidelity	4218	Kreiselmeier	4015
Verizon Fios	3007	CityCom	4006, 4215, 4219	Finlandia	4006	K-SAT	4217
Videoway	3019	Clatronic	4013	Finlux	4006	Kyostar	4001
View Star	3074, 3077, 3079	CNT	4010	FinnSat	4050, 4052	L&S Electronic	4024
Viewmaster	3127	Comag	4080, 4081, 4082, 4083, 4086	Flair Mate	4217	Lasat	4008, 4010, 4024, 4054, 4212, 4215, 4219
Vision	3127	Commlink	4005	Foxtel	4204, 4222, 4244, 4245, 4246, 4247	Lasonic	4108
Visiopass	3097, 3100, 3101	Comtech	4050	Freecom	4001, 4049, 4218	Lenco	4001, 4024, 4049, 4215, 4217, 4219
Vortex View	3127	Condor	4008, 4024, 4219	FTEmaximal	4024, 4217	Leng	4013
Wittenberg	3098	Connexions	4014, 4024	Fuba	4001, 4008, 4014, 4015, 4024, 4055, 4215	Lennox	4048
Zenith	3113, 3122, 3124	Conrad	4024, 4215, 4218, 4219	Galaxis	4005, 4008, 4009, 4024, 4048, 4050, 4215, 4222, 4246	Lenson	4218
Zentek	3126	Conrad Electronic	4217, 4219	GE	4066, 4093, 4111, 4197	Lexus	4053
<b>Satellite</b>		Contec	4050	General Instrument	4019, 4073	LG	4049, 4103, 4107
AB Sat	4216, 4217	Coolsat	4096	GMI	4011	Lifesat	4008, 4024, 4212, 4217
AccessHD	4104	Cosat	4048	GOI	4117	Lifetec	4008
ADB	4220	Coship	4109	Goldbox	4213	Lorenzen	4219
AGS	4216	Crown	4011	GoldStar	4049	Lorraine	4049
Akai	4053, 4055	Daeryung	4014	Goodmans	4002, 4006, 4029	Lupus	4008, 4024
Alba	4001, 4004, 4006, 4007, 4062, 4217	Daewoo	4057, 4217	Goodmind	4111	Luxor	4218
Aldes	4005, 4007, 4010	DDC	4007	Grandin	4031	Lyonnaise	4052
Allsat	4048, 4053, 4055	Delega	4007	Grothusen	4001, 4049	Macab	4052
Allsonic	4005, 4008, 4024	Dew	4050	Grundig	4004, 4006, 4015, 4035, 4211, 4218, 4222, 4246	Magnavox	4127, 4101
Alltech	4217	Diamond	4051	Hänsel & Gretel	4219	Manata	4031, 4216, 4217
Alpha	4053	Digiality	4219	Hantor	4001, 4013	Manhattan	4006, 4010, 4048, 4216
Alpha Digital	4104	Digital Stream	4105	Hanuri	4010	Marantz	4055
Alphastar	4077	DIRECTV	4056, 4064, 4067, 4068, 4070, 4071, 4074, 4107, 4116, 4119, 4121, 4122, 4123, 4127, 4192, 4193, 4194, 4195, 4196, 4197, 4198, 4199, 4200, 4201, 4202, 4203, 4206, 4207, 4221	Hauptpage	4044	Mascom	4010
Amitronica	4217	Discovery	4212	Heliocom	4219	Maspro	4006, 4217
Amstrad	4011, 4035, 4217, 4218	Discoverer	4216	Helium	4219	Matsui	4216
Anglo	4217	Discovery	4216	Hinari	4007	Max	4219
Ankaro	4005, 4008, 4024, 4217	Diseqc	4216	Hirschmann	4015, 4024, 4210, 4216, 4218, 4219	Mediabox	4213
Anttron	4001, 4004	Dish Network	4018, 4065, 4089, 4092, 4094, 4095, 4117	Hisawa	4013	Mediamarkt	4011
Apollo	4001	Dishpro	4018, 4117	Hisense	4016	Mediasat	4009, 4213, 4218
Armstrong	4011, 4053			Hitachi	4006, 4114, 4199, 4203	Medion	4008, 4024, 4217
Artec	4100					Medison	4217
Asat	4053, 4055					Mega	4053, 4055
ASLF	4217					Memorex	4127
Astacom	4216						

Metronic	4001, 4004, 4005, 4010, 4028, 4031, 4217	Promax	4006	Strong	4001, 4004, 4008, 4024, 4049, 4222, 4246	Wewa	4006
Metz	4015	Prosat	4005, 4007	STS	4115	Winersat	4013
Micro electronic	4217, 4218, 4219	Proscan	4066, 4093, 4122, 4197	STVI	4031	Wisi	4006, 4014, 4015, 4218, 4219
Micro Technology	4217	Protek	4051	Sumida	4011	Woorisat	4010
MicroGem	4106	Proton	4016	Sunny Sound	4024	Worldsat	4216
Micromaxx	4008, 4024	Provision	4010	Sunsat	4217	Xrypton	4024
Microstar	4008	Quadral	4005, 4007, 4008, 4216, 4024	Sunstar	4011, 4024, 4054	XSat	4217
Microtec	4217	Quelle	4015, 4215, 4219	Supermax	4223	Zehnder	4008, 4209, 4010, 4215, 4024
Minerva	4015	Quiero	4052	Tandberg	4052	Zenith	4102, 4107, 4195
Mitsubishi	4006, 4015, 4202	RadioShack	4019	Tandy	4004	Zodiac	4004
Mitsumi	4054	Radiola	4053, 4055	Tantec	4006		
Morgan's	4011, 4053, 4054, 4055, 4217	Radix	4014, 4037	TCM	4008		
Motorola	4019, 4088, 4090, 4091	Rainbow	4004	Techniland	4012		
Multichoice	4222, 4246	RCA	4066, 4093, 4112, 4113, 4116, 4118, 4119, 4197, 4122, 4207	TechniSat	4014, 4021, 4026, 4027, 4038, 4039, 4053, 4212, 4213, 4218		
Multitec	4212	Realistic	4078	Technology	4222		
Muratto	4049	Redpoint	4009	Technosat	4223		
Mysat	4217	Redstar	4008, 4024	Technowelt	4219		
Navex	4013	RFT	4005, 4053, 4055	Teco	4011, 4054		
Neuhaus	4009, 4048, 4217, 4218, 4219	Roadstar	4217	Telanor	4007		
Neusat	4217	Roch	4031	Telasat	4215, 4219		
Next Level	4019	Rover	4024, 4217	Telecom	4217		
NextWave	4223	Saba	4010, 4215, 4216, 4219	Telefunken	4001, 4017, 4216		
Nikko	4011, 4217	Sabre	4006	Teleka	4004, 4011, 4014, 4218, 4219		
Nokia	4006, 4040	Sagem	4023, 4052	Telemaster	4010		
Nordmende	4001, 4006, 4007, 4010, 4052	Sakura	4050	TELENET	4241		
Nova	4222	Samsung	4000, 4001, 4003, 4032, 4064, 4069, 4071, 4120, 4123, 4196, 4200	Telesat	4219		
Novis	4013	SAT	4007, 4218	Telestar	4212, 4213, 4218		
Oceanic	4051	Sat Cruiser	4223	Televest	4006, 4218		
Octagon	4001, 4004, 4050	Sat Partner	4001, 4004, 4010, 4013, 4049, 4218	Telewire	4048		
Okano	4011	Sat Team	4217	Tempo	4223		
Optex	4048	Satcom	4012, 4219	Tevion	4008, 4217		
Optus	4204, 4213, 4222, 4223, 4246	Satec	4217	Thomson	4006, 4020, 4052, 4058, 4208, 4213, 4215, 4216, 4217, 4219		
Orbitech	4001, 4212, 4213, 4218	Satelco	4024	Thorens	4051		
OSat	4004	Satford	4012	Thorn	4006		
Otto Versand	4015	Satmaster	4012	Tivax	4104		
Pace	4006, 4015, 4035, 4043, 4047, 4204, 4216, 4243	Satplus	4212	Tivo	4196		
Pacific	4051	Schneider	4008, 4212, 4216	Tokai	4053		
Packsat	4216	Schwaiger	4051, 4212, 4219	Tonna	4006, 4012, 4048, 4217, 4218		
Palcom	4007	SCS	4215	Toshiba	4194, 4202, 4203		
Palladium	4011, 4218	Seemann	4009, 4011, 4014	Triad	4049		
Palsat	4212, 4218	SEG	4001, 4008, 4013, 4024	Triasat	4218		
Panasat	4222, 4246	Seleco	4048	Triax	4015, 4215, 4217, 4218		
Panasonic	4006, 4035, 4036, 4121, 4124, 4126, 4198, 4221	Servi Sat	4031, 4217	Turnsat	4217		
Panda	4006, 4219	Siemens	4015	Tvonics	4214		
Pansat	4125	Silva	4049	Twiner	4031, 4217		
Patriot	4216	Skantin	4217	UEC	4204, 4222, 4246		
Paysat	4127	Skardin	4009	Uher	4212		
PCT	4110	Skinsat	4218	UltimateTV	4070		
Philco	4101	SKR	4217	Uniden	4079, 4127		
Philips	4006, 4033, 4053, 4055, 4061, 4068, 4071, 4127, 4196, 4201, 4202, 4203, 4206, 4213, 4216	Sky Italia	4204	Unisat	4011, 4050, 4053		
Phoenix	4050	Sky master	4005, 4017, 4022, 4212, 4217	Unitor	4013		
Phonotrend	4006, 4005, 4048	Skymax	4053, 4055	Universum	4015, 4215, 4219		
Pioneer	4046, 4213	SkySat	4212, 4217, 4218, 4219	US Digital	4016		
Polsat	4052	Skyvision	4048	Variosat	4015		
Predki	4013	SM Electronic	4212, 4217	Vega	4024		
Premiere	4048, 4213	Smart	4215, 4217	Ventana	4053, 4055		
Priesner	4011	Sony	4067, 4070, 4213	Viewsat	4098		
Primestar	4076	SR	4011, 4054	Visiosat	4013, 4048, 4216, 4217		
Profile	4216	Star Choice	4019	Voom	4019		
		Starland	4217	Vortec	4001		
		Starring	4013	Welltech	4212		
		Start Trak	4001	WeTeKom	4212, 4218		
				Wevasat	4006		

---

## CD

Yamaha 5082, 5095, 5114

---

## CD Recorder

Yamaha 5083

---

## MD

Yamaha 5080, 5081, 5086

---

## Tape

Yamaha 5084, 5087

---

## Tuner

Yamaha 5066, 5085, 5088, 5090, 5092

---

## LD

Yamaha 2080

---

## Amplifier

Yamaha 5019, 5020, 5098

---

## Apple TV

Apple 2241

“Apple TV” is a trademark or registered mark of Apple Inc.

## ■ For U.K. customers

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to the instructions described below.



The plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

## ■ Special Instructions for U.K. Model

### IMPORTANT

THE WIRES IN MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

Blue: NEUTRAL

Brown: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Make sure that neither core is connected to the earth terminal of the three pin plug.

## Information for Users on Collection and Disposal of Old Equipment and Used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.



For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



**Pb**

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



**Important Notice: Guarantee Information for customers in EEA\* and Switzerland****English**

For detailed guarantee information about this Yamaha product, and Pan-EEA\* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. \* EEA: European Economic Area

<http://europe.yamaha.com/warranty/>

