



# *NS-P440/ NS-P446*


(NS-P440/NS-P446: NX-E440 + NX-C440 +SW-P440)

*HOME CINEMA 5.1CH SPEAKER PACKAGE/  
HOME CINEMA 6.1CH SPEAKER PACKAGE*




**OWNER'S MANUAL**

# IMPORTANT SAFETY INSTRUCTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

• Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**IMPORTANT**  
Please record the serial number of this system in the space below.  
MODEL:  
Serial No.:  
The serial number is located on the rear of the main unit. Retain this Owner’s Manual in a safe place for future reference.

**For Canadian Customers**  
To prevent electric shock, match wide blade of plug to wide slot and fully insert.  
  
This Class B digital apparatus complies with Canadian ICES-003.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- Be sure to allow spaces of at least 20 cm above, behind and on both sides of the unit.
- Do not place the following objects on this unit:  
A vessel with water in it.  
If the vessel falls by vibrations and water spills, it may cause damage to the unit, and/or you may get an electric shock.

## FCC INFORMATION (for U.S. customers only)

- 1 **IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**  
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by YAMAHA may void your authority, granted by the FCC, to use the product.
- 2 **IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable(s) supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the U.S.A.
- 3 **NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter(s).

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300  $\Omega$  ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave., Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

## We Want You Listening For A Lifetime

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



# CAUTION: READ THIS BEFORE OPERATING YOUR UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
  - 2 Install the speakers in a cool, dry, clean place – away from windows, heat sources, sources of excessive vibration, dust, moisture and cold. Avoid sources of humming (transformers, motors). To prevent fire or electric shock, do not expose the speakers to rain or water.
  - 3 To prevent the enclosure from warping or discoloring, do not place the speakers where they will be exposed to direct sunlight or excessive humidity.
  - 4 Avoid installing the speakers where foreign objects may fall onto them and/or where they may be exposed to liquid dripping or splashing.
  - 5 Do not place the following objects on top of the speakers:
    - Other components, as they might cause damage and/or discoloration on the surface of the speakers.
    - Burning objects (i.e. candles), as they might cause fire, damage to the speakers and/or personal injury.
    - Containers with liquid in them, as they might cause electric shock to the user and/or damage to the speakers.
  - 6 Do not place the speakers where they are liable to be knocked over or struck by falling objects. Stable placement will also ensure better sound performance.
  - 7 Placing the speakers on the same shelf or rack as the turntable can result in feedback.
  - 8 Secure placement or installation is the owner's responsibility. YAMAHA shall not be liable for any accident caused by improper placement or installation of speakers.
  - 9 Any time you note distortion, reduce the volume control on your amplifier to a lower setting. Never allow your amplifier to be driven into "clipping". Otherwise the speakers may be damaged.
  - 10 When using an amplifier with a rated output power higher than the nominal input power of the speakers, care should be taken never to exceed the maximum input of the speakers.
  - 11 Do not attempt to clean the speakers with chemical solvents as this might damage the finish. Use a clean, dry cloth.
  - 12 Do not attempt to modify or fix the speakers. Contact qualified YAMAHA service personnel when any service is needed. The cabinet should never be opened for any reason.
  - 13 Be sure to read the "TROUBLESHOOTING" section regarding common operating errors before concluding that the speakers are faulty.
- from the rear panel. Place the unit apart from the walls, allowing spaces of at least 20 cm above, behind and on both sides of the unit to prevent fire or damage. Furthermore, do not position with the rear panel facing down on the floor or other surfaces.
  - 4 When using a humidifier, be sure to avoid condensation inside this unit by allowing enough spaces around this unit or avoiding excess humidification. Condensation might cause a fire, damage to this unit, and/or electric shock.
  - 5 Do not cover the rear panel of this unit with a newspaper, a tablecloth, a curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
  - 6 Do not plug in this unit to a wall outlet until all connections are completed.
  - 7 The voltage to be used must be the same as that specified on the rear panel. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. YAMAHA will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
  - 8 Super-bass sound reproduced by this unit may cause a turntable to generate a howling sound. In such a case, move this unit away from the turntable.
  - 9 This unit may be damaged if certain sounds are continuously outputted at high volume level. For example, if 20 Hz–50 Hz sine waves from a test disc, bass sounds from electronic instruments, etc. are continuously outputted, or when the stylus of a turntable touches the surface of a disc, reduce the volume level to prevent this unit from being damaged.
  - 10 If you hear distorted noise (i.e. unnatural, intermittent "rapping" or "hammering" sounds) coming from this unit, reduce the volume level. Extremely loud playing of a movie soundtrack's low frequency, bass-heavy sounds or similarly loud popular music passages can damage this unit.
  - 11 Vibration generated by super-bass sound may distort images on a TV. In such a case, move this unit away from the TV set.
  - 12 When disconnecting the power cord from the wall outlet, grasp the plug; do not pull the cord.
  - 13 When not planning to use this unit for a long period (i.e. vacation, etc.), disconnect the AC power plug from the wall outlet.
  - 14 Install this unit near the wall outlet and where the AC power plug can be reached easily.

This unit features a magnetically shielded design, but there is still a chance that placing it too close to a TV set might impair picture color. Should this happen, move this unit away from the TV set.

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by POWER.

## For SW-P440

- 1 Do not operate this unit upside down. It may overheat, possibly causing damage.
- 2 Do not use excessive force on switches, controls or connection wires. When moving this unit, first disconnect the power plug and the wires connected to other equipment. Never pull the wires themselves.
- 3 Since this unit has a built-in power amplifier, heat will radiate

# CONTENTS

<b>GETTING STARTED</b> .....	<b>2</b>
Supplied accessories .....	2
<b>SETTING UP THE SPEAKERS</b> .....	<b>3</b>
Placing speakers .....	3
Mounting the speakers on the wall (NX-E440) .....	4
Installing the speakers on wall/ceiling brackets or speaker stands (NX-E440) .....	5
Placing the speaker (NX-C440) .....	5
Placing the subwoofer (SW-P440) .....	5
<b>CONNECTIONS</b> .....	<b>6</b>
An example of connections .....	6
Connecting the speaker cables and the subwoofer cable .....	7
<b>USING THE SUBWOOFER (SW-P440)</b> .....	<b>8</b>
Controls and their functions .....	8
Adjusting the subwoofer .....	8
Advanced Yamaha Active Servo Technology II .....	9
QD-BASS TECHNOLOGY .....	9
<b>TROUBLESHOOTING</b> .....	<b>10</b>
<b>SPECIFICATIONS</b> .....	<b>11</b>

## ■ About this manual

- This manual is printed prior to production. Design and specifications are subject to change in part for the reason of the improvements, etc. In this case, the product has priority.
- Some of the illustrations and names of the package contents, etc. written in this manual may differ from the actual products and the names written on the package, etc.

## VOLTAGE SELECTOR

(For Asia and General models only)

The voltage selector switch on the rear panel of this unit must be set for your local main voltage **BEFORE** plugging this unit into the AC main supply.

Voltages are 110-120/220-240 V AC, 50/60 Hz

## ■ For U.K. customers

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to “SPECIAL INSTRUCTIONS FOR U.K. MODEL” on this page.

### Note

The plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

## ■ SPECIAL INSTRUCTIONS FOR U.K. MODEL

### IMPORTANT:

THE WIRES IN MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

Blue: NEUTRAL

Brown: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED. Make sure that neither core is connected to the earth terminal of the three pin plug.

Thank you for selecting this YAMAHA NS-P440/NS-P446 Speaker Package.

## GETTING STARTED

The speaker package “NS-P440 and NS-P446” is designed for use in a multi-channel audio system such as a home theater system.

 
**<NS-P440>** includes four NX-E440 speaker systems, one NX-C440 speaker system and one SW-P440 subwoofer system.

**<NS-P446>** includes five NX-E440 speaker systems, one NX-C440 speaker system and one SW-P440 subwoofer system.

**<NX-E440>**

**2-way acoustic-suspension speaker system used for the front and surround speakers (and surround center speaker for NS-P446)**

NX-E440



For front and surround/surround back speaker

**<NX-C440>**

**2-way acoustic-suspension speaker system used for the center speaker**

NX-C440




For center speaker

**<SW-P440>**

**Active Servo Processing Subwoofer System with a built-in power amplifier**

This subwoofer system employs Advanced Yamaha Active Servo Technology which YAMAHA has developed for reproducing higher quality super-bass sound (see page 9). This super-bass sound adds a more realistic, theater-in-the-home effect to your audio system.

SW-P440

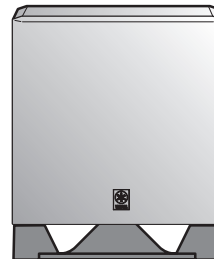


For subwoofer


### Supplied accessories

Please check to make sure all listed items are included.

Speaker cables

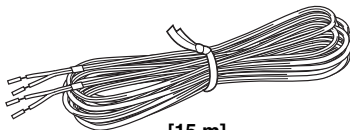


[15 m]  
(for NS-P440 x2)  
(for NS-P446 x3)

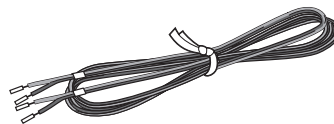


[4 m] x3

 Subwoofer cable



[5 m] x1

 

Fasteners x2  
(for NX-C440)




Non-skid pad x 1 set (4 pcs)  
(for SW-P440)

# SETTING UP THE SPEAKERS

Before making connections, place all speakers in their respective positions. The positioning of the speakers is important because it controls the whole sound quality of your audio system.

Place the speakers depending on your listening position by following the instructions below.

## Placing speakers

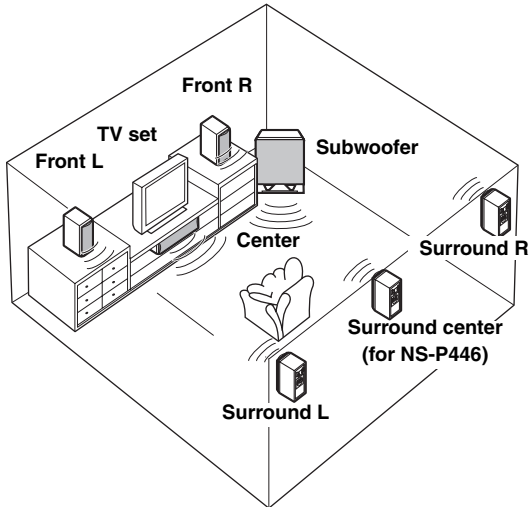

**Front speakers:** On both sides of your TV set. Approximately at the same height as the TV set.

**Surround speakers:**

Behind your listening position, facing slightly inward. About 1.8 m (approx. 6 feet) from the floor.

**Center speaker:** Precisely between the front speakers.

You can place the center speaker on top of the TV if the top is flat, on the floor under the TV, or inside the TV rack. Be sure to place the speaker in a stable position.

**Surround center speaker (for NS-P446):**

Precisely between the surround speakers.

**Subwoofer:**

The position of the subwoofer is not so critical because bass sound is not highly directional. Refer to "Placing the subwoofer (SW-P440)" on page 5 for a recommended positioning of the subwoofer.

### <NS-P440>

This speaker package employs a 6 speaker configuration: 2 front speakers, a center speaker, 2 surround speakers and a subwoofer.

The front speakers carry most of the music/sound effects. The center speaker emits center sound such as dialog, and the surround speakers provide the surround/ambient effects. The subwoofer adds the low-frequency bass sound.

### <NS-P446>

This speaker package employs a 7 speaker configuration: 2 front speakers, a center speaker, 2 surround speakers, a surround center speaker and a subwoofer.


The front speakers carry most of the music/sound effects. The center speaker emits center sound such as dialog, and the surround and surround center speakers provide the surround/ambient effects. The subwoofer adds the low-frequency bass sound.

### Note


The same speakers (NX-E440) are used for the front and surround speakers and surround center speakers (for NS-P446).

## Mounting the speakers on the wall (NX-E440)

You can mount the speakers on a wall. To mount the speakers on a wall, use the holes of the brackets attached on the rear panels of the speakers.

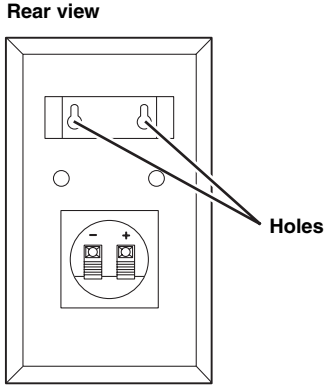


- 1 Fasten two screws into a firm wall or wall support at the interval shown below.

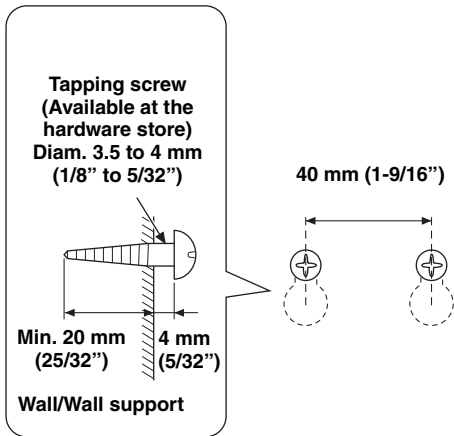

- 2 Hang the speaker by mounting the holes on the protruding screws.

Make sure that the screws are securely affixed by the narrow parts of the holes.

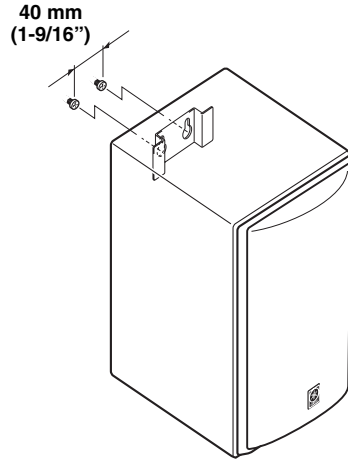

### Caution

- Each speaker weighs as follows  
..... 1.4 kg (3.1 lbs.)
- Do not mount the speakers on thin plywood or a wall composed of a soft surface material. If mounted, the screws may pull out of the flimsy surface and the speakers may fall. This may damage the speakers or cause personal injury.
- Do not affix the speakers to a wall using nails, adhesives, or any other unstable hardware. Long-term use and vibrations may cause the speakers to fall.
- To avoid accidents resulting from tripping over loose speaker cables, fix the cables to the wall.
- Select an appropriate position on the wall to mount the speaker so that no one will injure his/her head or face.




## Installing the speakers on wall/ ceiling brackets or speaker stands (NX-E440)

You can also use the screw holes on the rear panel or the bottom of the speakers to install the speakers on commercially available wall/ceiling brackets or speaker stands (if you do not use the attached mounting brackets).

### ■ Using commercially available wall/ ceiling brackets


A screw with a diameter of 6 mm (1/4") can be used.  
(Hole depth: 15 mm (19/32"))

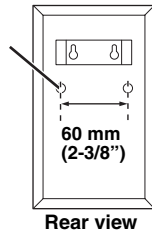


Rear view

### ■ Using commercially available speaker stands

A screw with a diameter of 4 mm (5/32") can be used.  
(Hole depth: 9 mm (11/32"))

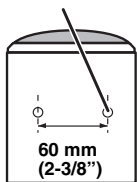

Bottom view

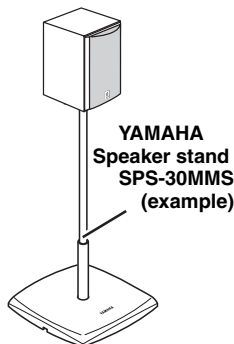

YAMAHA  
Speaker stand  
SPS-30MMS  
(example)


\* The YAMAHA speaker stand SPS-30MMS may not be available in some areas.

## Placing the speaker (NX-C440)

When placing the speaker on top of the TV rack, etc., attach the provided fasteners at two points on the bottom of the speaker and on the top of the TV.

### Notes

- Do not place the center speaker on top of a TV whose area is smaller than the bottom of the speaker. If placed, the speaker may fall and cause injury.
- Do not place the center speaker on top of a TV if the top is inclined.
- Do not touch the adhesive surface after peeling off the seal as this will weaken its adhesive strength.
- Thoroughly wipe clean the surface where the fastener is to be applied. Note that adhesive strength is weakened if the surface is dirty, oily or wet and that this may cause the center speaker to fall.

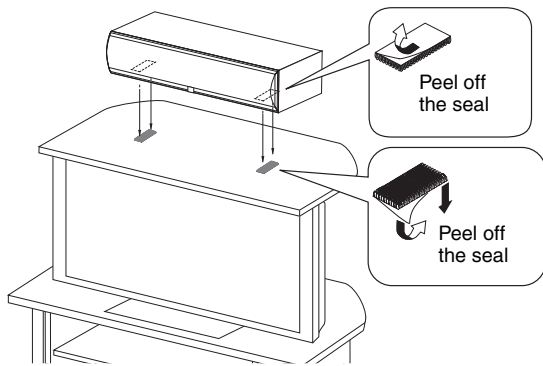

## Placing the subwoofer (SW-P440)

It is recommended to place the subwoofer on the outside of either the right or the left front speaker (figure A). The placement shown in figure B is also possible, however, if the subwoofer is placed directly facing the wall, the bass sound may lessen because the sound from the subwoofer and the sound reflected by the wall may cancel out each other. To prevent this from happening, face the subwoofer obliquely to the wall.

Figure A


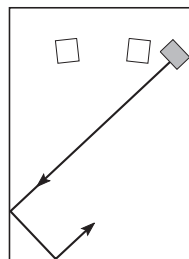



Figure B

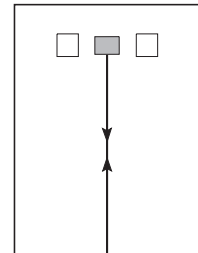

(■ : Subwoofer, □ : Front speakers)

### ■ Use the non-skid pads

Put the provided non-skid pads at the four corners on the bottom of the subwoofer to prevent the subwoofer from moving by vibrations, etc.

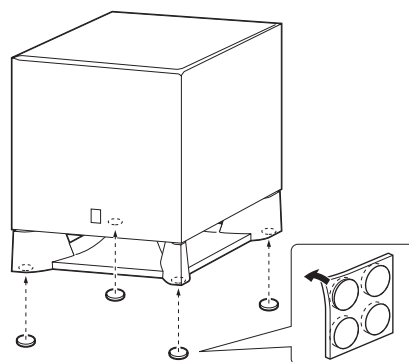


# CONNECTIONS

## Caution

Plug in the subwoofer and other audio/video components after all connections are completed.

## An example of connections

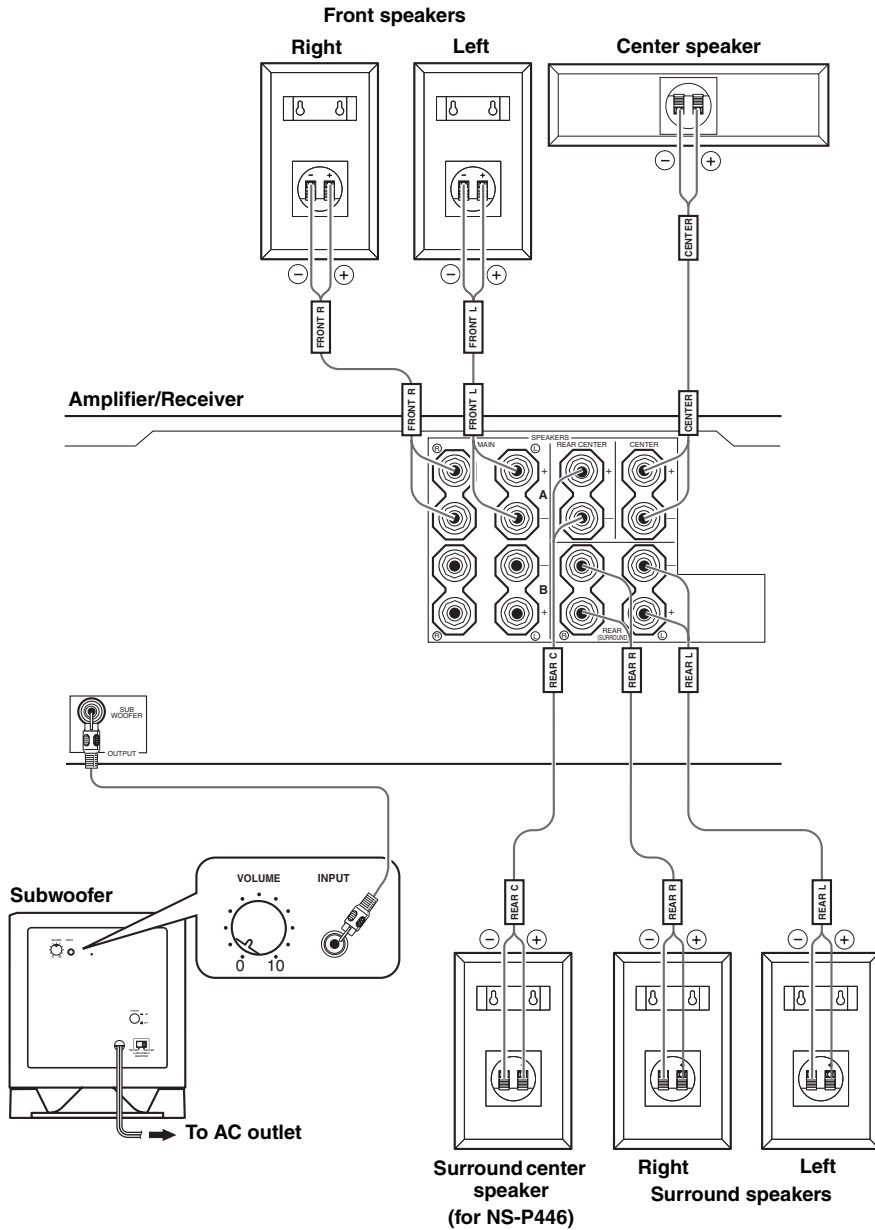

## Connecting the speaker cables and the subwoofer cable

Connect the front, center and surround speakers (and surround center speaker for NS-P446) to the speaker output terminals of your amplifier/receiver with the provided speaker cables. The provided speaker cables have labels marked FRONT L, FRONT R, CENTER, REAR L, REAR R (and REAR C for NS-P446).

### Caution

Before connecting the speakers and the subwoofer, make sure that the power of the subwoofer and the amplifier/receiver is turned off.


### Note

For connections, keep the speaker cables as short as possible. Do not bundle or roll up the excess part of the cables. If the connections are faulty, no sound will be heard from the speakers.

### ■ Front speakers and Center speaker


Use the provided speaker cables (4 m). One side of the speaker cable is red and the other side is black.

- 1 Remove approximately 10 mm (13/32") of insulation from the end of each speaker cable and twist the exposed wires of the cable together to eliminate the risk of a short-circuit.

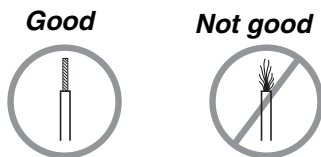

- 2 Press and hold the tab of the terminal, as shown in the figure of step 3.

- 3 Insert the bare wire.

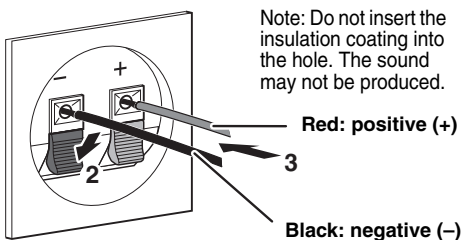

- 4 Release your finger from the tab to allow it to lock securely on the wire end of the cable.

- 5 Test the firmness of the connection by pulling lightly on the cable at the terminal.


### Note

Do not let the bare speaker wires touch each other as this could damage the speaker and/or the amplifier.

### ■ Surround speakers and Surround center speaker (for NS-P446)

Use the provided speaker cables (15 m). One side of the speaker cable has a gray line and the other side has no line.

The connection method is the same with Front speakers and Center speaker. Read from 1 to 5 on left column on this page.

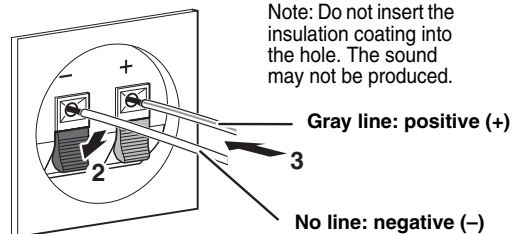

### Note

Do not let the bare speaker wires touch each other as this could damage the speaker and/or the amplifier.


### ■ SUBWOOFER

Connect the subwoofer to the subwoofer pre out jack of the amplifier/receiver.

### ■ Connecting components and the subwoofer to AC plug

After you complete the connection, plug the amplifier/receiver, TV or other outlet component and the subwoofer into an AC outlet of appropriate voltage.

# USING THE SUBWOOFER (SW-P440)

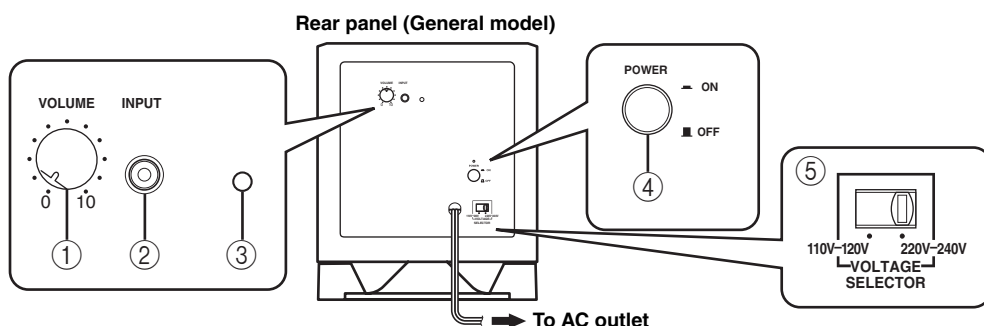

## Controls and their functions

### ① VOLUME control

Adjusts the volume level. Turn the control clockwise to increase the volume and counterclockwise to decrease the volume.

### ② INPUT jack

Used to input unamplified bass signals from the amplifier/receiver (see “An example of connections” on page 6).

### ③ POWER indicator

Lights up while the subwoofer is turned on and goes off when the subwoofer is turned off.

### ④ POWER switch

Press inward to the ON position to turn on the power of the subwoofer. Press again to release it outward to the OFF position to turn off the subwoofer.

### ⑤ VOLTAGE SELECTOR switch (For Asia and General models)

If the preset setting of the switch is incorrect, set the switch to the proper voltage range (110 V-120 V or 220 V-240 V) of your area.

## Caution

**Be sure to unplug the subwoofer before setting the VOLTAGE SELECTOR switch.**

## Adjusting the subwoofer

Before using the subwoofer, adjust the subwoofer to obtain the optimum volume balance between the subwoofer and the other speakers by following the procedures described below.

- 1 Rotate the VOLUME control counterclockwise to the 0 position.**
- 2 Turn on the power of all the other components.**
- 3 Press the POWER switch inward to the ON position.**  
The POWER indicator lights up.
- 4 Play a source that contains bass signal and adjust the volume control of the amplifier/receiver to the desired listening level.**
- 5 Rotate the VOLUME control gradually to adjust the volume balance between the subwoofer and the other speakers.**

## Note

Once the volume balance between the subwoofer and the other speakers is adjusted, you can adjust the volume of your whole audio system by using the volume control of the amplifier/receiver. However, if you change the speakers or the system configuration, you must make this adjustment again.

## Advanced Yamaha Active Servo Technology II

In 1988, Yamaha brought to the speaker systems utilizing YST (Yamaha Active Servo Technology) to give powerful, high quality bass reproduction. This technology uses a direct connection between the amplifier and speaker, allowing accurate signal transmission and precise speaker control.


As this technology uses speaker units controlled by the negative impedance drive of the amplifier and resonance generated between the cabinet capacity volume and port, it creates more resonant energy (the “air woofer” concept) than the standard bass reflex method. This allows for bass reproduction from much smaller cabinets than was previously possible.

Yamaha’s newly developed Advanced YST II adds many refinements to Yamaha Active Servo Technology, allowing better control of the forces driving the amplifier and speaker. From the amplifier’s point of view, the speaker impedance changes depending on the sound frequency. Yamaha developed a new circuit design combining negative-impedance and constant-current drives, which provides a more stable performance and clear bass reproduction without any murkiness.

## QD-BASS TECHNOLOGY

QD-BASS (Quatre Dispersion Bass) technology uses down-firing drivers with square, pyramid-shaped reflective plates to radiate the sound efficiently in four horizontal directions. The reflective plates (not used in competitors' down-firing subwoofers) negate any effects caused by the floor surface and reduce resonance between sound waves reflected from the floor and the unit. Also, most other systems use circular cones, but by radiating in four directions to avoid the legs of the cabinet, QD-BASS reduces turbulence caused by reflection from the legs. Changing the height of the square pyramid varies the acoustic load, permitting relatively simple high-cut adjustment and improved band pass properties.

The QD-BASS system provides extraordinary power and smooth frequency response from an extremely compact unit. It also allows greater freedom of placement, since the sound radiates with equal effectiveness in all directions.

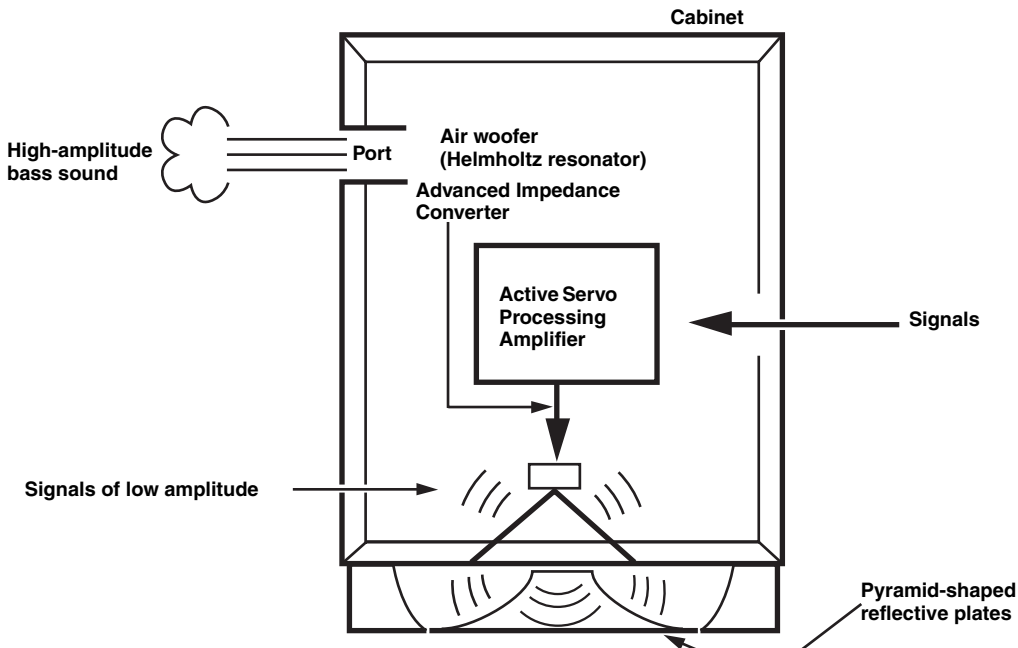

# TROUBLESHOOTING

Refer to the chart below when this speaker package does not function properly. If the problem you are experiencing is not listed below or if the instructions given below do not help, disconnect the AC power plug and contact your authorized YAMAHA dealer or service center.

## ■ General

Problem	Cause	Remedy
<b>No sound.</b>	Speaker cables are not connected securely.	Connect them securely.
<b>Sound level is too low.</b>	Speaker cables are not connected correctly.	Connect them correctly, that is L (left) to L, R (right) to R, “+” to “+” and “-” to “-”.


## ■ For SW-P440

Problem	Cause	Remedy
<b>Power is not supplied.</b>	The power plug is not connected securely.	Connect it securely.
	The POWER switch is set to the OFF position.	Press the POWER switch inward to the ON position.
<b>No sound.</b>	The VOLUME control is set to the 0 position.	Rotate the VOLUME control clockwise.
	The subwoofer cables is not connected securely.	Connect it securely.
<b>Sound level is too low.</b>	A source that contains few bass signal is played.	Play a source that contains bass signal.
	“Standing waves” have been developed between two parallel walls and they cancel the bass sound.	Face the subwoofer obliquely to the wall or break up the parallel surface by placing bookshelves, etc. along the walls.


# SPECIFICATIONS

## ■ Frequency characteristics

The following graph displays the frequency characteristics of the SW-P440 subwoofer.

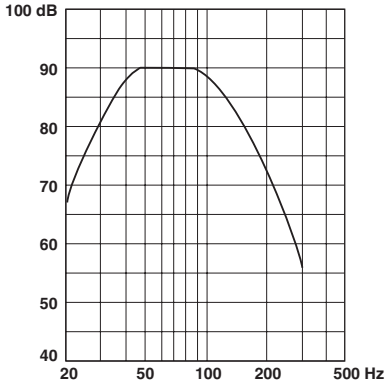

The following graph displays the frequency characteristics of the SW-P440 subwoofer combined with NX-E440 speakers.

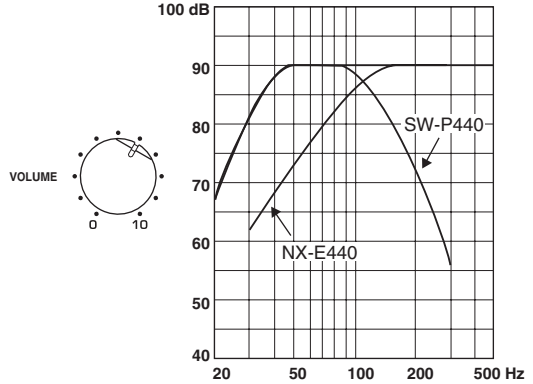

### NX-E440, NX-C440

- Type ..... 2-way acoustic-suspension speaker system  
Magnetically shielded type
- Driver
  - <NX-E440> ..... 8 cm (3-5/32") cone woofer x 1  
2.5 cm (31/32") balanced-dome tweeter x 1
  - <NX-C440> ..... 7 cm (2-3/4") cone woofer x 2  
2.5 cm (31/32") balanced-dome tweeter x 1
- Nominal Input Power ..... 40 W
- Maximum Input Power
  - <NX-E440> ..... 80 W
  - <NX-C440> ..... 100 W
- Impedance ..... 6 Ω
- Frequency Response ..... 65 Hz to 40 kHz
- Sensitivity
  - <NX-E440> ..... 80 dB/2.83 V/m
  - <NX-C440> ..... 82 dB/2.83 V/m
- Dimensions (W x H x D)
  - <NX-E440> ..... 118 mm x 198 mm x 137 mm  
(4-21/32" x 7-25/32" x 5-13/32")
  - <NX-C440> ..... 285 mm x 99 mm x 130 mm  
(11-7/32" x 3-29/32" x 5-1/8")
- Weight
  - <NX-E440> ..... 1.4 kg (3 lbs. 1 oz.)
  - <NX-C440> ..... 1.9 kg (4 lbs. 3 oz.)

### SW-P440

- Type ..... Advanced Yamaha Active Servo Technology II
- Driver ..... 16 cm (6-1/2") cone woofer  
Magnetically shielded type
- Amplifier Output ..... 50 W/5 Ω
- Dynamic Power ..... 100 W/5 Ω
- Input Impedance ..... 12 KΩ
- Frequency Response ..... 30 Hz to 180 Hz
- Power Supply
  - [U.S.A. and Canada models] ..... AC 120 V, 60 Hz
  - [U.K. and Europe models] ..... AC 230 V, 50 Hz
  - [Australia model] ..... AC 240 V, 50 Hz
  - [Asia and General models] ..... AC 110-120/220-240 V, 50/60 Hz
- Power Consumption ..... 45 W
- Dimensions (W x H x D) ..... 280 mm x 325 mm x 296 mm  
(11-1/32" x 12-25/32" x 11-21/32")
- Weight ..... 8.2 kg (18 lbs. 1oz.)

\* Specifications are subject to change without notice due to product improvements.



©2006 YAMAHA CORPORATION All rights reserved.

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.  
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO M1S 3R1, CANADA  
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, 25462 RELINGEN BEI HAMBURG, GERMANY  
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLEE CEDEX02, FRANCE  
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANSWORTH ROAD WATFORD, HERTS WD18 7GQ, ENGLAND  
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÄSTRA FRÖLUNDA, SWEDEN  
YAMAHA MUSIC AUSTRALIA PTY, LTD. 17-33 MARKET ST., SOUTH MELBOURNE, 3205 VIC., AUSTRALIA

YAMAHA CORPORATION

Printed in Indonesia © WG62980