



AB

Made for
iPod iPhone iPad

DAB **DAB+**
Digital Audio Broadcasting Digital Audio Broadcasting


DESKTOP AUDIO SYSTEM


TSX-B232



OWNER'S MANUAL

CAUTION: READ THIS BEFORE OPERATING YOUR UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this unit in a well ventilated, cool, dry, clean place - away from direct sunlight, heat sources, vibration, dust, moisture and cold. For proper ventilation, allow the following minimum clearances.
Top: 15 cm (6 in)
Rear: 10 cm (4 in)
Sides: 10 cm (4 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the "TROUBLESHOOTING" section on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press  to set the system to off, and disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the system off, then leave this unit alone for cooling.
- 20 Install this unit near the wall outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
 - Keep the batteries in a location out of reach of children. Batteries can be dangerous if a child were to put in his or her mouth.
 - If the batteries grow old, the effective operation range of the remote control decreases considerably. If this happens, replace the batteries with new one as soon as possible.
 - Do not use old batteries together with new ones.
 - Do not use different types of batteries (such as alkaline and manganese batteries) together. Read the packaging carefully as these different types of batteries may have the same shape and color.
 - Exhausted batteries may leak. If the batteries have leaked, dispose of them immediately. Avoid touching the leaked material or letting it come into contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
 - If you plan not to use the unit for a long period of time, remove the batteries from the unit. Otherwise, the batteries will wear out, possibly resulting in a leakage of battery liquid that may damage the unit.
 - Do not throw away batteries with general house waste. Dispose of them correctly in accordance with your local regulations.
- 22 Excessive sound pressure from earphones and headphones can cause hearing loss.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off by . In this state, this unit is designed to consume a very small quantity of power.

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

There is a chance that placing this unit too close to a CRT-based (Braun tube) TV set might impair picture color. Should this happen, move this unit away from the TV set.



CONTENTS

NAMES OF PARTS AND THEIR FUNCTIONS	2	Selecting DAB stations.....	12
Top panel / Front panel.....	2	Presetting DAB stations (remote control only)	13
Front panel display.....	3	Selecting preset DAB stations.....	13
Rear panel.....	3	LISTENING TO FM STATIONS	14
Remote control.....	4	Selecting an FM station.....	14
TURNING THE SYSTEM ON	5	Presetting FM stations (remote control only)	15
ADJUSTING THE CLOCK	5	Selecting preset FM stations.....	16
LISTENING TO YOUR iPod	6	LISTENING TO EXTERNAL SOURCES	16
Playing music from your iPod.....	6	USING THE ALARM FUNCTION	17
Using repeat/shuffle playback (remote control only)	6	Setting the alarm	18
LISTENING TO CD AND USB DEVICES	7	Operations while the alarm sound is playing.....	19
Listening to a CD.....	7	USING THE “DTA Controller” APPLICATION	
Listening to a USB device.....	8	FOR THE iPod touch/iPhone/iPad	19
Using repeat/shuffle playback (remote control only)	8	USING THE SLEEP TIMER	20
LISTENING TO MUSIC FROM YOUR Bluetooth		ADJUSTING THE TONE (remote control only)	20
COMPONENT	9	ADJUSTING THE BRIGHTNESS OF THE FRONT	
Pairing this unit with your <i>Bluetooth</i> component	9	PANEL DISPLAY (remote control only)	20
Listening to a <i>Bluetooth</i> component.....	10	TROUBLESHOOTING	21
Connecting an already-paired component via <i>Bluetooth</i> ...	10	NOTES ON DISCS AND USB DEVICES	25
Disconnecting a <i>Bluetooth</i> connection.....	11	SPECIFICATIONS	26
LISTENING TO DAB STATIONS	11		
Preparing for DAB reception	11		

Features

- Play back music from external devices such as your iPod/iPhone/iPad, audio/data CDs, USB devices, or external devices via the AUX, and listen to the DAB/FM.
- By the *Bluetooth* technology, you can enjoy clear sound without wire connections.
- Use your favorite music or a beep tone as an alarm. When the set time arrives, the music you select is played at the volume that you specify, giving you the ideal start to your day (IntelliAlarm function) (P. 19).
- By using the free “DTA Controller” application for the iPod touch/iPhone/iPad, you can control this unit and take advantage of more sophisticated alarm functionality (P. 19).
- You can easily store and recall 30 of your favorite DAB/FM stations.
- Bass, middle, and treble can be adjusted to your taste.

◆ About this manual

 
- References to the iPod appearing in this manual also include the iPhone.
- If an operation can be performed using either the buttons on the unit itself or from the remote control, the explanation will focus on operation using the main unit.
-  indicates precautions for use of the unit and its feature limitations.
-  indicates supplementary explanations for better use.

Supplied accessories



Remote control
(uses a CR2032 type
Lithium Battery)

DAB/FM antenna




Dock cover




USB cap




 Keep the USB cap out of reach of children so as to ensure that it is not mistakenly swallowed.

◆ How to use the remote control

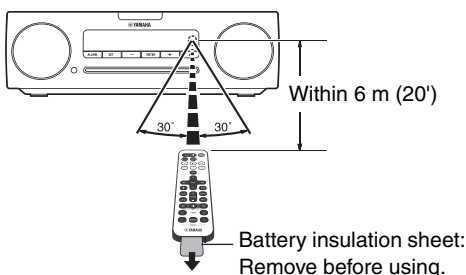


◆ Replacing the battery in the remote control

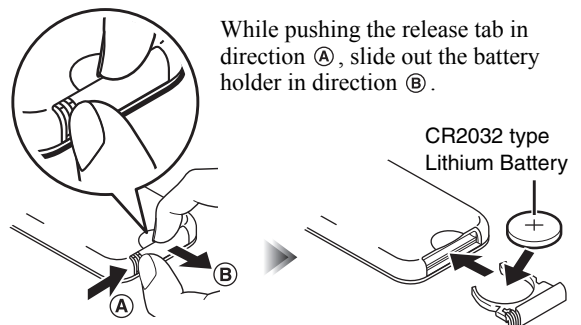


NAMES OF PARTS AND THEIR FUNCTIONS

Top panel / Front panel

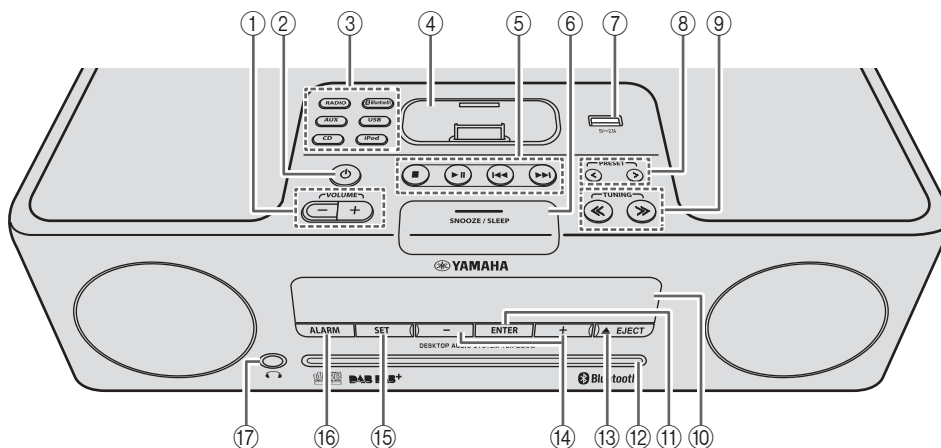

- ① **VOLUME -/+**
Adjust the volume.
- ② **(Power)**
Press to turn the system on/off (☞ P. 5).
- ③ **Source buttons**
Switch the audio source to be played.
If you press one of these while the system is off, the system will turn on and then switch the audio source.
Press **RADIO** repeatedly to switch between DAB/FM.
- ④ **iPod dock**
Connect your iPod here (refer to “Placing your iPod in the iPod dock” below).
- ⑤ **Audio control buttons**
Use these to operate the iPod/CD/USB device.
 - : Stop
 - ▶||: Play/Pause
 - ◀◀/▶▶: Skip, Search backward/forward (press and hold down)
- ⑥ **SNOOZE/SLEEP**
Set the sleep timer or switch the alarm to snooze mode (☞ P. 19, 20).
- ⑦ **USB port**
Connect your USB device/iPod/ iPhone/ iPad here (☞ P. 8).
!
When the USB device is not in use, put the USB cover in place to protect the connector.
- ⑧ **PRESET </>**
Use these buttons to select a DAB/FM station (preset) that you’ve stored (☞ P. 16).
- ⑨ **TUNING <</>**
Tune the DAB/FM (☞ P. 14).
- ⑩ **Front panel display**
The clock and other information is displayed here (☞ P. 3).
- ⑪ **ENTER**
Confirm a selected item or value.
- ⑫ **Disc slot**
Insert a CD here (☞ P. 7).
- ⑬ **▲ EJECT**
Eject the CD.
- ⑭ **-/+**
Select an item or value when setting the clock or the alarm.
- ⑮ **SET**
Set the alarm (☞ P. 18).
- ⑯ **ALARM**
Switch the alarm on/off (☞ P. 19).
- ⑰ **(Headphone jack)**
Connect headphones here.

◆ Placing your iPod in the iPod dock

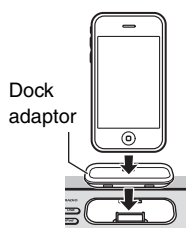


Your iPod will be recharged while it is connected to the dock. However if USB is selected as the source, the iPod will not be recharged.




- Be sure to use a dock adaptor that is compatible with your iPod. If you do not use the adaptor or the adaptor is not compatible, the connection could be loose or poor, which could cause damage to the connector. For details on dock adaptor information, please visit Apple’s official website.
- If an iPod in a protective case is forcibly connected, the connector may be damaged. Remove the protective case before connection.
- When the iPod is not in use, put the iPod dock cover in place to protect the connector.

Front panel display

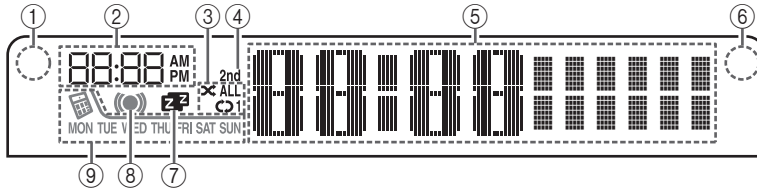


- ① **Illumination sensor**
Detect ambient lighting. Do not cover this sensor.
- ② **Alarm time**
This indicates the alarm time.
- ③ **Repeat/shuffle indicator**
Display the playback mode (☞ P. 6, 8).
- ④ **Secondary indicator**
Turn on if a secondary station is playing when you listen to a DAB station.
- ⑤ **Multi-function indicator**
Display various information, including the clock time, information about the currently-playing track, and the frequency of the DAB/FM station.
- ⑥ **Remote control signal receiver**
Make sure that this sensor is not obstructed (☞ P. 1).
- ⑦ **Sleep indicator**
Turn on if the sleep timer has been set (☞ P. 20).
- ⑧ **Alarm indicator**
Turn on if the alarm has been set (☞ P. 19).
- ⑨ **Weekly alarm indicator**
Shows alarm information specified using the free “DTA Controller” application for the iPod touch/iPhone/iPad (☞ P. 19).

Rear panel

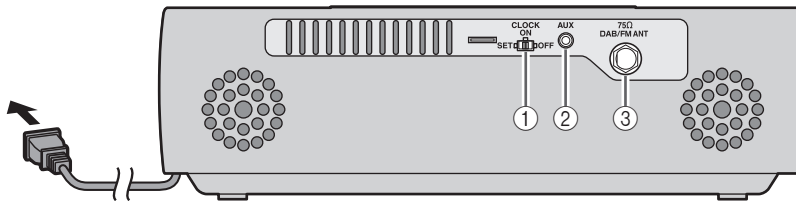


- ① **CLOCK switch**
Sets the clock and specifies whether the clock will be displayed (☞ P. 5).
SET: Set the clock.
ON: Even when the system is off, the clock will be displayed and the alarm function will be available.
OFF: When the system is off, the clock will not be displayed and **the alarm function will not be available.**
- ② **AUX**
Use a commercially available 3.5 mm mini-plug cable to connect your external device here (☞ P. 16).
- ③ **DAB/FM antenna connector**
Connect the DAB/FM antenna here.

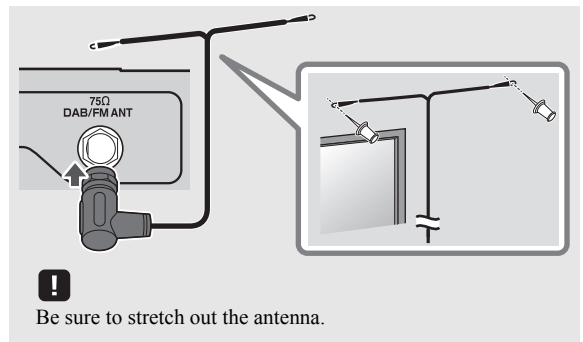

- If reception is poor, try changing the height or direction of the antenna, or move the unit to find a location that has better reception.
- If you use a commercially available outdoor antenna instead of the supplied antenna, reception may be better.

Remote control

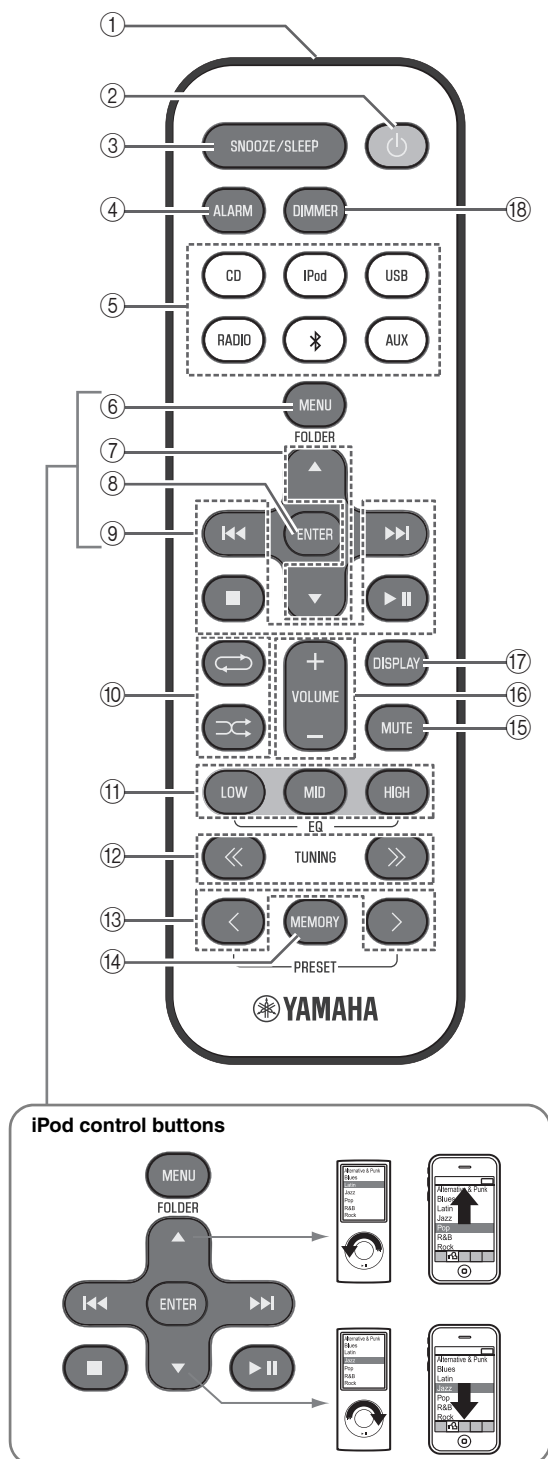

① Remote control signal transmitter

② **Power**

Press to turn the system on/off (☞ P. 5).

③ **SNOOZE/SLEEP**

Set the sleep timer or switch the alarm to snooze mode (☞ P. 19, 20).

④ **ALARM**

Switch the alarm on/off (☞ P. 19).

⑤ **Source buttons**

Switch the audio source to be played.

If you press one of these while the system is off, the system will turn on and then switch the audio source.

Press **RADIO** repeatedly to switch between DAB/FM.

⑥ **MENU**

Switch the iPod menu item / Return to the previous menu (☞ P. 6).

⑦ **FOLDER ▲ / ▼**

Switch the playback folder when playing music on data CDs or USB devices (☞ P. 7, 8).

Select items or edit numerical values (☞ P. 6, 20).

⑧ **ENTER**

Confirm a selected item or value.

⑩ **Audio control buttons**

Use these to operate the iPod/CD/USB device.

■: Stop

▶▶: Play/Pause

◀◀/▶▶: Skip, Search backward/forward (press and hold down)

⑩ **(Repeat) / (Shuffle)**

Play music on an iPod, CD or USB device in repeat/shuffle mode (☞ P. 6, 8).

⑪ **EQ: LOW/MID/HIGH**

Adjust the bass, middle or treble sound quality (☞ P. 20).

⑫ **TUNING << / >>**

Tune the DAB/FM (☞ P. 14).

⑬ **PRESET < / >**

Select a DAB/FM station (preset) that you've stored (☞ P. 16).

⑭ **MEMORY**

Store a DAB/FM station (☞ P. 15).

⑮ **MUTE**

Mute or unmute the sound.

⑮ **VOLUME +/-**

Adjust the volume.


⑰ **DISPLAY**

Switch the information shown in the front panel display (☞ P. 6, 7, 8, 14).


⑱ **DIMMER**

Adjusts the brightness of the front panel display (☞ P. 20).

TURNING THE SYSTEM ON

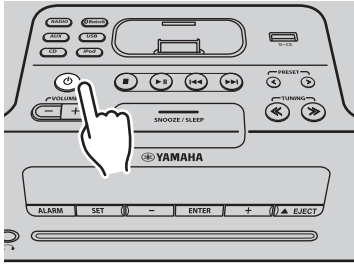

Display (24-hour) when the system is on

 

Display (24-hour) when the system is off (CLOCK switch: ON)



Connect the power cable to an AC outlet, and press .

The system will turn on, and will be ready to play audio sources.


To turn the system off, press once again.



If you set the rear panel **CLOCK** switch to the OFF position (see P. 3), the clock will not be displayed when the system is off, reducing the power consumption.

	Clock display when the system is off	Alarm	Recharging your iPod in the iPod dock
CLOCK switch: ON	Yes	Enabled	Yes
CLOCK switch: OFF (power-saving)	No	Disabled	Yes

ADJUSTING THE CLOCK

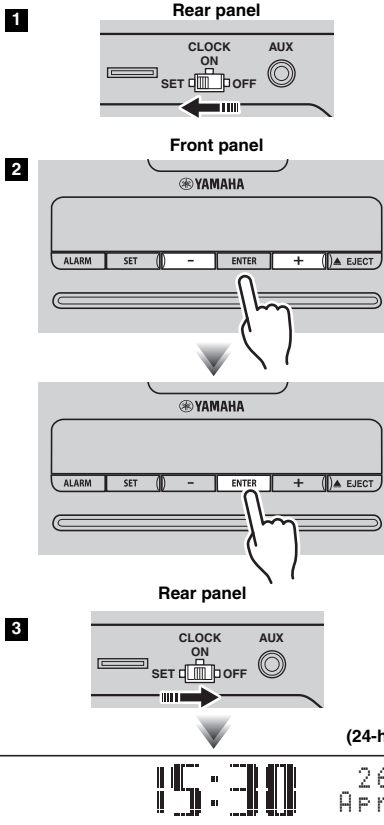

1 Set the rear panel **CLOCK** switch to the SET position.

The display will indicate “CLOCK YEAR,” and the numerical value to be set will blink.

2 Set the date and time.

Press the front panel **-/+** buttons to edit the values, and press **ENTER** to confirm the settings.

Set the items in the order of year → month → day → hour → minute.

When clock setting has finished, the display will indicate “Completed!”.



- On step **2**, you can copy the time of iPod instead of setting time manually by setting the iPod to the iPod dock. The time will not be copied if the iPod is already connected.

- On step **2**, by pressing **SNOOZE/SLEEP** you can select the time format (12-hour / 24-hour).

3 When you’ve finished making settings, set the **CLOCK** switch to the ON position.

The moment you set the switch to the ON position, the clock will start from 0 second.




The time settings will be reset if the unit remains unpowered for more than one week.

Jan	Feb	Mar	Apr	May	Jun
January	February	March	April	May	June
Jul	Aug	Sep	Oct	Nov	Dec
July	August	September	October	November	December

LISTENING TO YOUR iPod

Playing music from your iPod

- For details on compatible iPod models, refer to “SPECIFICATIONS” (P. 26).
- Your iPod can also play back music and recharge while connected to the USB port (P. 8).

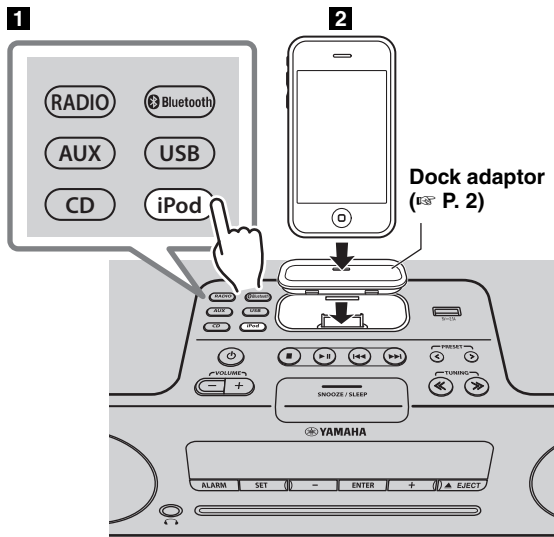

1 Press the **iPod** source button to switch the audio source to iPod.

2 Set your iPod in the iPod dock (P. 2).

3 Play the iPod.

Playback can be controlled with either the remote control, iPod or the unit (P. 2, 4).




Performing the following operations will automatically switch the audio source to iPod and start playback even if this unit is system-off.

- Connect your iPod in the playback state to the iPod dock.
- Play back the connected iPod.

In some cases, the audio source might not switch automatically if the audio source is USB or if this unit is currently connected via *Bluetooth*.

- If USB is selected as the audio source, the iPod will not be charged.
- You can remove the iPod during playback.
- If iPod is selected as the audio source, the system will automatically turn off when 60 minutes have elapsed without a device being connected to the iPod dock nor any operation performed.

◆ iPod menu operations (remote control only)

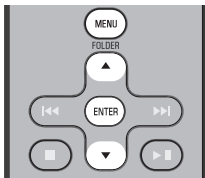


You can use the remote control to operate your iPod.

- MENU:** Switch menu items / Return to the previous menu
- ▲/▼:** Move between items in the menu
- ENTER:** Confirm

◆ Display information (remote control only)



If you press **DISPLAY** on the remote control while a song is playing or paused, the information shown on the front panel display will be switched in the order shown at right.

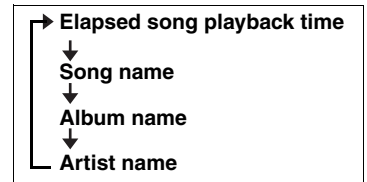

Using repeat/shuffle playback (remote control only)

The playback status is shown by the repeat/shuffle indicator (P. 3) in the front panel display.

◆ Repeat playback



Press **REPEAT** on the remote control repeatedly to select one of the following playback modes.

- No display:** Off
- 1:** One
- ALL:** All

◆ Shuffle playback



Press **SHUFFLE** on the remote control repeatedly to select one of the following playback modes.

- No display:** Off
- SHUFFLE:** Albums
- SHUFFLE:** Songs



Repeat/shuffle may not operate or be displayed correctly as shown above depending on the type of iPod used.

LISTENING TO CD AND USB DEVICES


The unit will operate as follows when playing back tracks/files on CD/USB devices.

- If the CD/USB device being played back is stopped, the track that was being played back will start playing from the beginning of the track the next time playback begins.
- If you press **■** while playback is stopped, tracks will play as follows the next time playback begins:
 - **Audio CD:** Play from the first track of the CD.
 - **Data CD (a CD containing MP3/WMA files) or USB:** Play from the first track in the folder containing the song that you last stopped.
- This unit automatically turns off the system if no operation has been performed for 60 minutes after CD/USB device playback is stopped.



For details on playable discs and files, refer to “NOTES ON DISCS AND USB DEVICES” (P. 25).

Listening to a CD

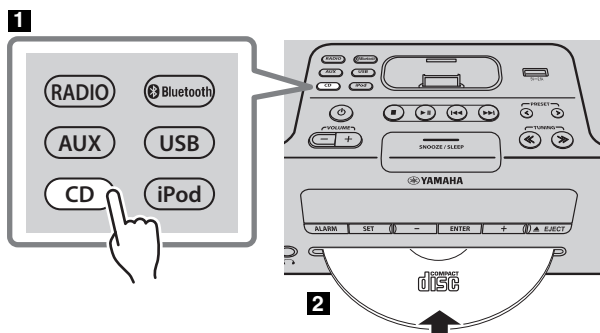

1 Press the **CD** source button to switch the audio source to CD.

If a CD is already inserted, playback will start.

2 Insert a CD into the disc slot.

Playback starts automatically.

Playback can be controlled with either the remote control or the unit (P. 2, 4).




Insert the CD with the label side facing up.



Folders and files on a data CD are played in alphabetical order.

◆ Skipping folders (remote control only)

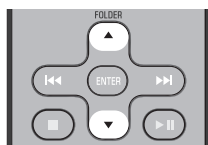

While a data CD is playing, you can use the remote control's **FOLDER ▲/▼** buttons to select the folder.

◆ Display information (remote control only)



The folder number (only for a data CD) or the song/file number is shown for several seconds when starting playback or skipping tracks.

If you press **DISPLAY** on the remote control while a song is playing or paused, the information shown on the front panel display will be switched in the following order.

Audio CD



- Elapsed song playback time
- ↓
- Remaining song playback time
- ↓
- Song name*
- ↓
- Album name*
- ↓
- Artist name*

Data CD

- Elapsed song playback time
- ↓
- Song name*
- ↓
- Album name*
- ↓
- Artist name*
- ↓
- File name
- ↓
- Folder name

* Shown only if this data is included in the song.

Listening to a USB device

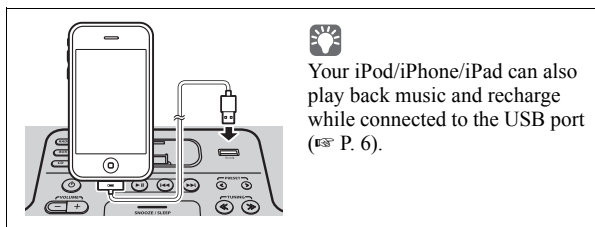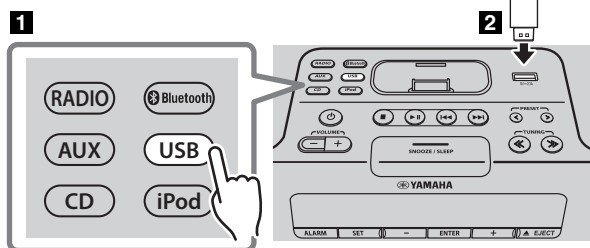

Your iPod/iPhone/iPad can also play back music and recharge while connected to the USB port (P. 6).

1 Press the **USB** source button to switch the audio source to USB.

If a USB device is already connected, playback will start.

2 Connect a USB device to the USB port.

Playback starts automatically. Playback can be controlled using either the remote control, the unit, or the USB device (P. 2, 4).




Folders and files will play in the order in which they were written.



Stop playback before disconnecting the USB device.

◆ Skipping folders (remote control only)

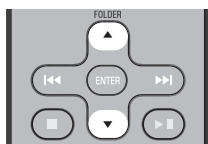

While a USB device is playing, you can use the remote control's **FOLDER ▲/▼** buttons to select the folder.


◆ Display information (remote control only)



The folder/file number is shown for several seconds when starting playback or skipping tracks.

If you press **DISPLAY** on the remote control while a song is playing or paused, the information shown on the front panel display will be switched in the order shown at right.

* Shown only if this data is included in the song.

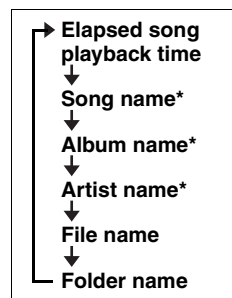

Using repeat/shuffle playback (remote control only)

The playback status is shown by the repeat/shuffle indicator (P. 3) in the front panel display.

◆ Repeat playback



Press (repeat) on the remote control repeatedly to select one of the following playback modes.

No display: Repeat mode off

1: 1 track

: All tracks within the folder (data CD/USB device only)

ALL: All tracks

◆ Shuffle playback



Press (shuffle) on the remote control repeatedly to select one of the following playback modes.

No display: Shuffle mode off

: All tracks within the folder (data CD/USB device only)

ALL: All tracks

LISTENING TO MUSIC FROM YOUR *Bluetooth* COMPONENT

This unit provides *Bluetooth* functionality. You can enjoy wireless music *playback* from your *Bluetooth* component (mobile phone, digital audio player, etc.). Please also refer to the owner's manual of your *Bluetooth* component.



Pairing this unit with your *Bluetooth* component

Pairing is an operation that registers the communicating component (subsequently called “the other component”) with this unit. You'll need to perform the pairing operation the first time you use your *Bluetooth* component with this unit, or if the pairing settings have been deleted. Once pairing has been completed, subsequent reconnection will be easy even after the *Bluetooth* connection is disconnected. If pairing is not successful, refer to the item “Bluetooth” in “TROUBLESHOOTING” (P. 23).



- This unit can be paired with up to eight other components. When pairing with the ninth component has succeeded, pairing data for the component with the oldest connection date will be deleted.
- If this unit is connected via *Bluetooth* to another component, hold down **Bluetooth** source button on this unit or on the remote control to disconnect the *Bluetooth* connection before you perform the pairing operation.

◆ If using an iPod touch/iPhone/iPad

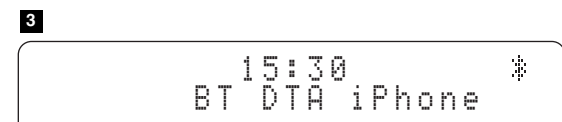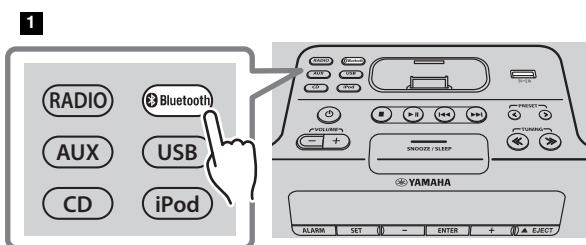

1 Press the **Bluetooth** source button to switch the audio source to *Bluetooth*.



2 On your iPod touch/iPhone/iPad, turn [Settings] → [General] → [Bluetooth] on. The *Bluetooth* connection list will appear in [Devices]. (This procedure or display may differ depending on the type of your iPod touch/iPhone/iPad.)

3 From the *Bluetooth* connection list of the other component, choose this unit (TSX-B232 Yamaha).

When pairing has been completed, your iPod touch/iPhone/iPad will indicate “Connected”.

The front panel display of this unit will indicate “Pairing OK” and show the name of the other component, and the *Bluetooth* indicator will light.

◆ If using other than an iPod touch/iPhone/iPad

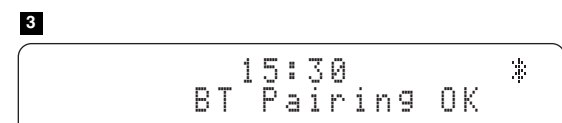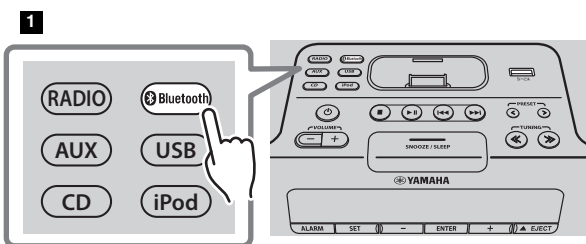

1 Press the **Bluetooth** source button to switch the audio source to *Bluetooth*.

2 Perform *Bluetooth* pairing on the other component.

For details refer to the owner's manual of the other component.


3 From the *Bluetooth* connection list of the other component, choose this unit (TSX-B232 Yamaha).


When pairing has been completed, the front panel display of this unit will indicate “Pairing OK”.



If you are asked to enter a password, enter the numerals “0000”.

Listening to a *Bluetooth* component

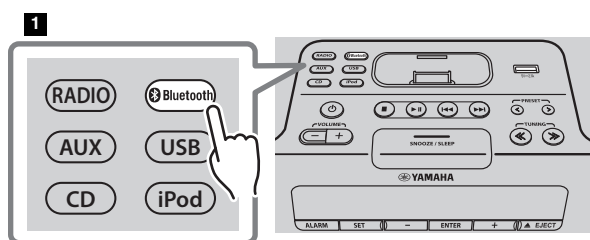

- 1 Press the  Bluetooth source button to switch the audio source to *Bluetooth*.
- 2 Connect this unit and your other component via *Bluetooth*.
- 3 Play back music from your *Bluetooth* component.



Take care that the volume setting of this unit is not too high. We recommend that you adjust the volume on the other component.

 
 




- If you connect via *Bluetooth* from your other component and play back music while this unit is turned off the system, this unit will automatically turn on the system.
- If you disconnect the *Bluetooth* connection from your other component while the audio source is set to *Bluetooth*, this unit will automatically turn off the system.
- If *Bluetooth* is selected as the audio source, this unit will automatically turn off the system when 60 minutes have elapsed without any *Bluetooth* connection nor any operation performed.

Connecting an already-paired component via *Bluetooth*

Once pairing has been completed, connecting a *Bluetooth* will be easy the next time.

◆ Connecting from this unit

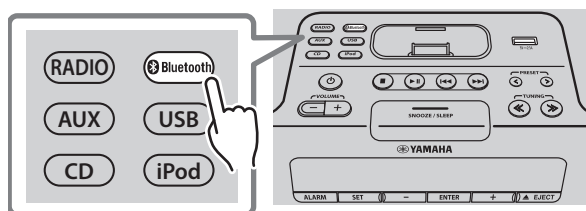

Press the  Bluetooth source button to switch the audio source to *Bluetooth*.

The *Bluetooth* indicator will blink in the front panel display; this unit will search for the other component that was most recently connected via *Bluetooth*, and will then establish a connection (You must first turn on the *Bluetooth* setting of the other component).

When the *Bluetooth* connection has been established, the *Bluetooth* indicator will light, and the name of the other component will be displayed.



Yamaha does not guarantee all connections between this unit and *Bluetooth* component.

◆ Connecting from the other component



- 1 In the *Bluetooth* settings of the other component, turn *Bluetooth* on.
- 2 From the *Bluetooth* connection list of the other component, choose this unit (TSX-B232 Yamaha).
The *Bluetooth* connection will be established, and the front panel display of this unit will indicate the name of the other component.



Bluetooth connections cannot be established from the other component when this unit is in power saving. Turn the system on.

Disconnecting a *Bluetooth* connection

If any of the following operations are performed while a *Bluetooth* connection is being used, the *Bluetooth* connection will be disconnected.

- Hold down  **Bluetooth** source button on this unit or  on the remote control.
- Turn the system off.
- Turn off the *Bluetooth* setting of the other component.



When you connect an iPod touch/iPhone/iPad via *Bluetooth*, the *Bluetooth* connection may be disconnected if you switch the audio source to iPod or USB while another iPod/iPhone/iPad is connected.

LISTENING TO DAB STATIONS

DAB (Digital Audio Broadcasting) and DAB+ use digital signals for clearer sound and more stable reception compared to analog signals.

DAB+ is based on the original DAB standard but uses a more efficient audio codec.

DAB and DAB+ are broadcast in blocks of data called “ensembles” containing up to several radio stations that are simultaneously broadcast.


DAB and DAB+ can also include an extensive amount of text information, enabling you to select a station by name.


Other information, such as the ensemble name or the status of the digital signal, can be displayed on the front panel display.

“DAB” described in this manual may also refer to “DAB+”.

Preparing for DAB reception

Before tuning into DAB stations, an initial scan must be performed. When you select the DAB for the first time, the initial scan is performed automatically.

To listen to a DAB station, connect the DAB/FM antenna ( P. 3).

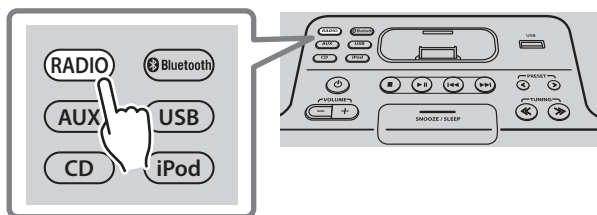

Press the **RADIO** source button repeatedly to switch the audio source to DAB.


The initial scan starts. During the scan, the degree of progress is displayed on the front panel display.

When scan is completed, the number of receivable DAB stations appear on the front panel display.



If the initial scan is performed, stored DAB station information and preset DAB stations are cleared.

◆ Performing the initial scan again (remote control only)

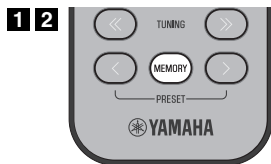


1 Press and hold down **MEMORY** on the remote control.

“DAB INIT SCAN” will appear and “Press MEMORY” will blink.

2 Press **MEMORY**.

The initial scan starts.

Selecting DAB stations

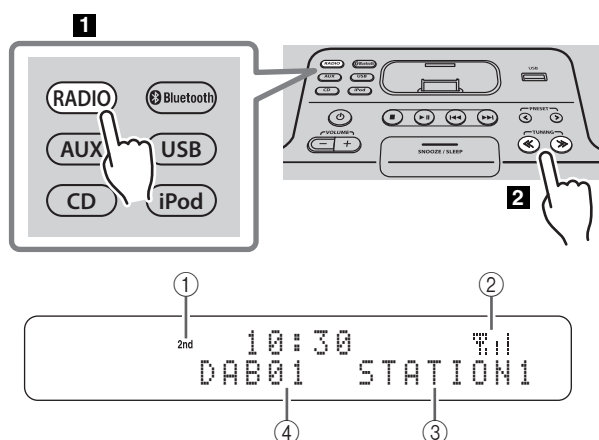

1 Press the **RADIO** source button repeatedly to switch the audio source to DAB.

2 Press **TUNING** <</> to select the DAB station.

While receiving DAB, DAB station information is shown on the front panel display.

If the unit does not receive a DAB signal, “Off Air” is displayed instead of the DAB station name.

① **Secondary indicator:**

Some stations have sub (secondary) stations. If a secondary station is playing, the secondary indicator is displayed.

② **Signal strength indicator:**

Shows current signal strength.


③ **DAB station name**

④ **Preset number**

◆ Display information (remote control only)



If you press **DISPLAY** on the remote control, the information shown on the front panel display will be switched in the following order.

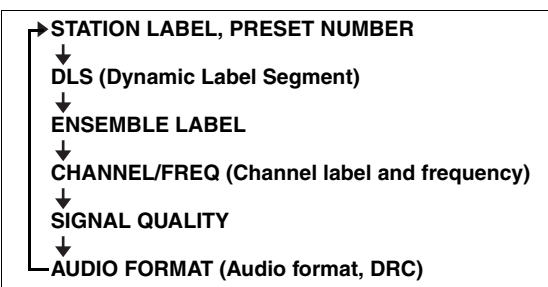

◆ DAB frequency information

This unit can receive Band III only.


Frequency	Channel label
174.928	5A
176.640	5B
178.352	5C
180.064	5D
181.936	6A
183.648	6B
185.360	6C
187.072	6D
188.928	7A
190.640	7B
192.352	7C
194.064	7D
195.936	8A

Frequency	Channel label
197.648	8B
199.360	8C
201.072	8D
202.928	9A
204.640	9B
206.352	9C
208.064	9D
209.936	10A
211.648	10B
213.360	10C
215.072	10D
216.928	11A
218.640	11B

Frequency	Channel label
220.352	11C
222.064	11D
223.936	12A
225.648	12B
227.360	12C
229.072	12D
230.784	13A
232.496	13B
234.208	13C
235.776	13D
237.488	13E
239.200	13F

Presetting DAB stations (remote control only)

Use the preset function to store your favorite 30 stations.

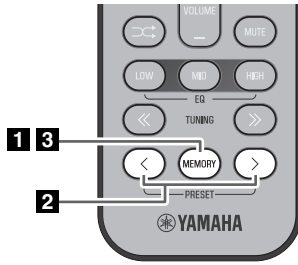

- 1 Select the station that you want to preset, and press **MEMORY**.

The display will indicate “PRESET MEMORY”.

- 2 Press **PRESET </>** to select the preset number that you want to store.




- The lowest preset number that has not been stored will be selected first.
- If you want to cancel the presetting, press ■.
- If you select a preset number in which a station has already been stored, it will be overwritten by the new station.

- 3 Press **MEMORY** to complete the operation.

This stores the DAB station.

The preset will be stored, and the display will indicate “Completed!”.

◆ Deleting a stored preset

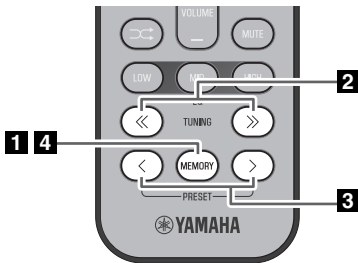

- 1 Press **MEMORY** on the remote control.

The display will indicate “PRESET MEMORY,” and the preset number will blink.

- 2 Press **TUNING </>** to select the preset delete operation.

The display will indicate “PRESET DELETE”.

- 3 Press **PRESET </>** to select the preset number that you want to delete.




If you want to cancel the deleting, press ■.

- 4 Press **MEMORY** to complete the operation.


The preset will be deleted, and the display will indicate “Deleted!”.

Selecting preset DAB stations

Main unit

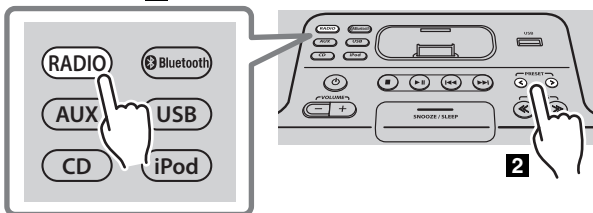

Remote control

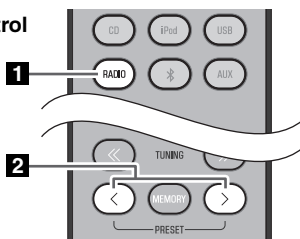

- 1 Press the **RADIO** source button repeatedly to switch the audio source to DAB.



You can also switch the audio source to DAB by pressing **RADIO** on the remote control.

- 2 Press **PRESET </>** to select the DAB station that you want to listen.




You can only select the presets that have been stored.

LISTENING TO FM STATIONS

Selecting an FM station

Connect the antenna if you want to listen to the FM (P. 3).

1

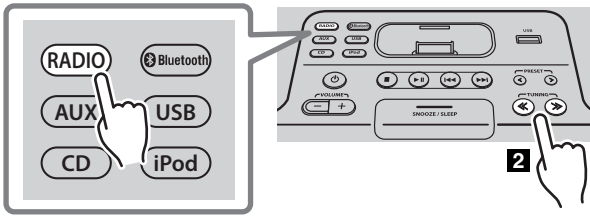

1 Press the **RADIO** source button repeatedly to switch the audio source to FM.

2 Tuning FM stations.

Automatic tuning: Press and hold **TUNING** << / >>.

Manual tuning: Press **TUNING** << / >> repeatedly.



If you tune to a station manually while receiving FM, the sound will be monaural.

◆ Display information

If you press **DISPLAY** on the remote control, the information shown on the front panel display will be switched in the following order.

Preset number and frequency ↔ Reception status*

* Examples of reception status indication.

TUNED/STEREO: A strong FM stereo broadcast is being received.

TUNED/MONO: Receiving an FM broadcast in monaural (even if the FM broadcast is stereo, reception will be monaural if the signal is weak).


Not TUNED: No broadcast is being received.

Displaying Radio Data System information (U.K. model only)

If you press **DISPLAY** on the remote control while Radio Data System information is being received, the information shown on the front panel display will be switched in the order shown at right.



If the signal transmission of the Radio Data System station is too weak, this unit may not be able to receive Radio Data System information completely. In particular, RT (Radio Text) information uses a lot of bandwidth, so it may be less available compared to other types of information.

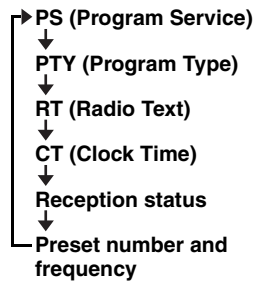


Presetting FM stations (remote control only)

Use the preset function to store your favorite 30 stations.

◆ Auto preset

This method tunes automatically, and automatically presets only the stations that have good reception.

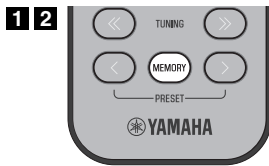

1 Press and hold down **MEMORY** on the remote control.
“AUTO PRESET” will appear and “Press MEMORY” will blink.

2 Press **MEMORY**.
Auto preset will begin.
When presetting has finished, the display will indicate “Completed!”.




When you perform auto preset, all stored stations are cleared and the new stations are stored.



If you want to stop auto preset before it is completed, press ■.

◆ Manual preset

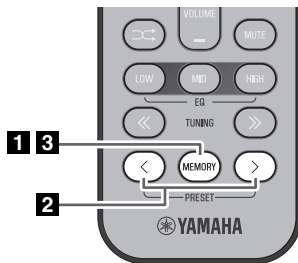

1 Select the station that you want to preset, and press **MEMORY**.

The display will indicate “PRESET MEMORY”.


2 Press **PRESET** </> to select the preset number that you want to store.



- The lowest preset number that has not been stored will be selected first.
- If you want to cancel the presetting, press ■.
- If you select a preset number in which a station has already been stored, it will be overwritten by the new station.

3 Press **MEMORY** to complete the operation.
The preset will be stored, and the display will indicate “Completed!”.

◆ Deleting a stored preset

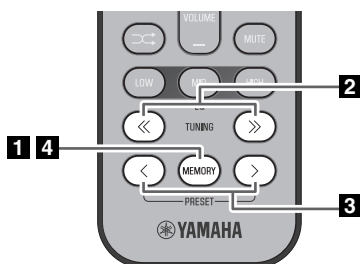

1 Press **MEMORY** on the remote control.
The display will indicate “PRESET MEMORY”, and the preset number will blink.

2 Press **TUNING** <</> to select the preset delete operation.
The display will indicate “PRESET DELETE”.

3 Press **PRESET** </> to select the preset number that you want to delete.




If you want to cancel the deleting, press ■.


4 Press **MEMORY** to complete the operation.
The preset will be deleted, and the display will indicate “Deleted!”.

Selecting preset FM stations

Main unit

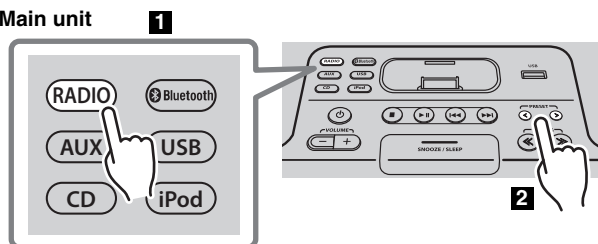

Remote control

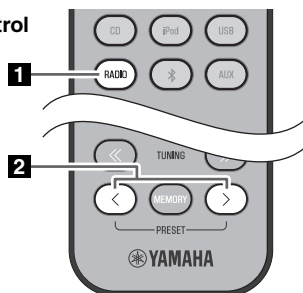

- 1 Press the **RADIO** source button repeatedly to switch the audio source to FM.



You can also switch the audio source by pressing **RADIO** on the remote control.


 
- 2 Press **PRESET </>** to select the FM station that you want to listen.



You can only select the presets that have been stored.

LISTENING TO EXTERNAL SOURCES

Rear panel

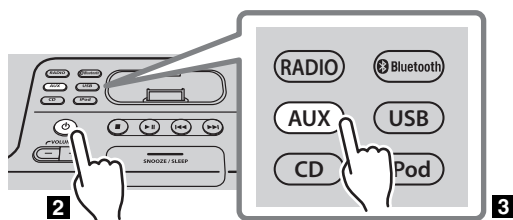

- 1 Using a commercially available 3.5 mm mini-plug cable, connect your external device to the AUX on the rear panel of this unit.



- Turn off the system before connecting the mini-plug cable.
- Turn down the volume of the unit and your external audio device before connection.

- 2 Press **⏻** to turn the system on.
- 3 Press the **AUX** source button to switch the audio source to AUX.
- 4 Start playback on the connected external audio device.

USING THE ALARM FUNCTION

The unit includes an alarm function (IntelliAlarm) that plays back audio sources or a set of beep (internal alarm sound) at the set time using a variety of different methods. The alarm function has the following features.

◆ 3 types of alarms

Select from 3 alarm types, combining music and beep sounds.

SOURCE+BEEP	The selected audio source and beep sound are played at the set time. This mode is recommended for the best possible start to the day. 3 minutes before the set time: the source music begins to fade in and the volume gradually increases as the alarm time approaches. Alarm time: a beeping sound also begins playing.
SOURCE	The selected audio source is played at the set time. The volume fades in gradually and increases to the set volume.
BEEP	The beep sound is played at the set time.

◆ Various audio sources

The iPod, audio CD, data CD, USB device and radio can be selected. The following playback methods can also be selected depending on the audio source:

Source	Playback method	Function
iPod	Resume	The unit resumes play from the last track you played. If you've created a playlist* with the name "ALARM Yamaha DTA" in advance, the playlist stored on the iPod can be played back repeatedly. When entering the playlist name, use single-byte spaces to separate words, and enter single-byte characters, taking care that uppercase/lowercase letters are used correctly.
	Selected track	The selected track is played repeatedly.
Audio CD	Resume	The track you listened to last time is played back.
	Folder	The selected folder is played repeatedly.
Data CD/USB device	Resume	The track you listened to last time is played back.
	Preset station	The selected preset station is played.
DAB/FM	Resume	The DAB/FM station you listened to last time is played back.

* For information on creating a playlist, refer to the instructions for your iPod or iTunes.

◆ Snooze


The snooze function can be enabled to replay the alarm after 5 minutes (☞ P. 19).

Setting the alarm

◆ Set the alarm time and alarm type




Alarm settings cannot be made when the unit is in power saving. If you want to use the alarm function, set the rear panel **CLOCK** switch to the ON position.

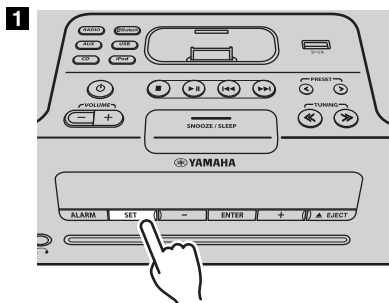

1 Press SET.


The alarm indicator ((●)) will blink.

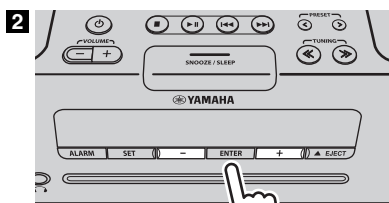

2 Set the alarm.


Set items ①-⑤ described below.

Press -/+ to select a numerical value, and press ENTER to confirm it.

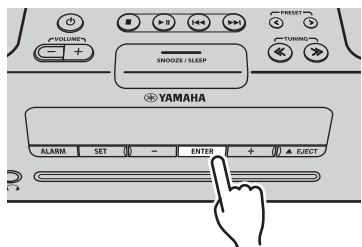

Items	Setting or range
① ALARM SELECT	* This can be selected after you've used "DTA Controller" to set the alarm (P. 19). If you're not using "DTA Controller," proceed to item ②. ONE DAY: An alarm that sounds only once at the specified time. WEEKLY: An alarm whose time can be specified for each day of the week (settable only using "DTA Controller"). If you've chosen WEEKLY, this completes the alarm setting.
② ALARM TIME	Make settings in the order of hours → minutes.
③ ALARM TYPE	Select from SOURCE+BEEP, SOURCE or BEEP. For details, refer to "3 types of alarms" (P. 17). If you selected BEEP, proceed to item ⑤.
④ ALARM SOURCE (If you selected SOURCE+BEEP or SOURCE as the ALARM TYPE)	iPod: Play back music from your iPod (Refer to "Various audio sources" (P. 17).) The iPod connected via <i>Bluetooth</i> is not available. Set the iPod in the iPod dock. CD: Play back music from a CD. Specify the track number (data CD: folder number) (RESUME, 1-99). USB: Play back music from a USB device. Specify the folder number (RESUME, 1-999). DAB/FM: Play a radio station. Specify the preset number (RESUME, 1-30). If the selected source cannot be played back at the time set for the alarm (e.g., the iPod is not connected), the beep sound is played back. If you choose RESUME when specifying the track/folder/preset number, the last-played track/folder/station will be played (resume playback).
⑤ ALARM VOLUME	Specifies the volume (5-60) of the alarm.

 3
Alarm time



Alarm indicator

3 Complete the settings.


When you set the VOLUME for item ⑤, the display will indicate "Completed!" and your settings will be confirmed. This completes the alarm setting.

The alarm will be turned on and the alarm indicator ((●)) will light.



- By pressing **SET** during this procedure, you can confirm the alarm settings with the currently-specified values and complete the procedure.
- If you decide to cancel alarm settings mid-way through the procedure, turn the system off.

◆ Switching the alarm on/off

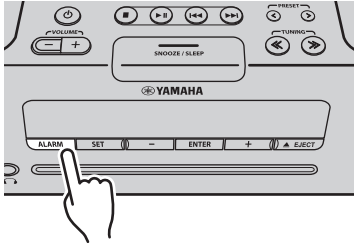

Press **ALARM** to turn the alarm on/off.

When the alarm is on, the alarm indicator ((●)) will light, and the alarm time will be shown.

If you press **ALARM** again, the alarm indicator ((●)) and the alarm will turn off.




When the unit is in power saving, **the alarm will not function** (P. 5).

Operations while the alarm sound is playing

When the set time arrives, the selected alarm sound will play. During playback, the following operations are available.

◆ To pause the alarm (Snooze)

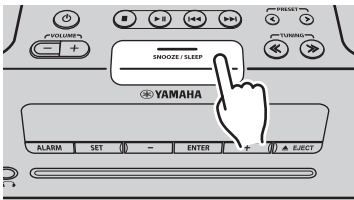

Press **SNOOZE/SLEEP**.


Snooze will stop the alarm and play it again 5 minutes later.



If **SOURCE + BEEP** is set as the alarm type, you can press **SNOOZE/SLEEP** once to stop the beep sound, and twice to stop the audio source.

Five minutes after the audio source is stopped, it will start fading in again and the beep sound will resume.

◆ To turn the alarm off

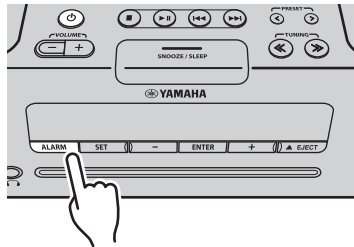

Press **ALARM** or .




- You can also stop the alarm by holding down **SNOOZE/SLEEP**.
- If you don't stop the alarm, it will stop automatically after 60 minutes and the system will turn off.
- The alarm setting will be saved even if the alarm is turned off. If the alarm is turned on again by pressing **ALARM**, the alarm will sound with the previous alarm settings.

USING THE "DTA Controller" APPLICATION FOR THE iPod touch/iPhone/iPad

By using the free "DTA Controller" application for the iPod touch/iPhone/iPad, you can control this unit and make detailed alarm settings. For example, for each day of the week, you can specify the alarm time (Weekly Alarm) and adjust the IntelliAlarm as desired.




The front panel display shows information for the Weekly Alarm you've set.

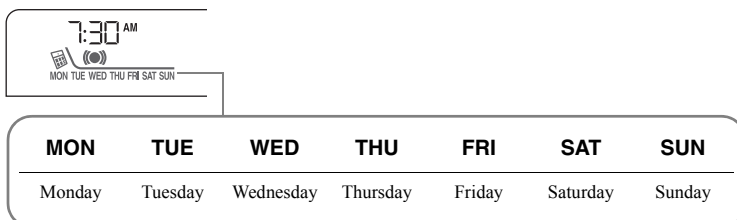

For details of "DTA Controller", refer to the product information in the Yamaha website.

USING THE SLEEP TIMER

When the specified time has elapsed, the system will turn off automatically.

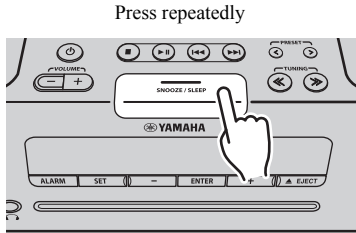

Press **SNOOZE/SLEEP** repeatedly to specify the time after which the system will turn off.


You can specify 30, 60, 90 or 120 minutes.

When you select a time, the sleep timer is turned on, and the sleep indicator (**ZZ**) is shown in the front panel display.



If you press **SNOOZE/SLEEP** while the sleep timer is activated, the sleep timer setting will be canceled.

ADJUSTING THE TONE (remote control only)

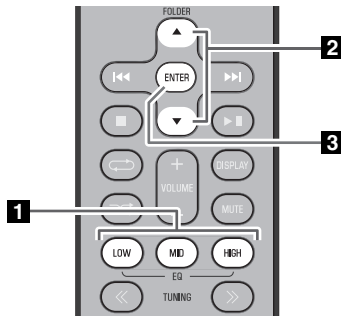

1 During playback, press the **LOW**, **MID**, or **HIGH EQ** button on the remote control. Select the tone to be adjusted (LOW, MID, HIGH).

2 Press **▲/▼** to adjust the tone.

3 Press **ENTER** on the remote control to complete the operation.

You can also press the EQ button that you pressed in Step **1** to complete the settings.

If you want to adjust another frequency band, return to step **1** and press the EQ button for the frequency band that you want to adjust.

ADJUSTING THE BRIGHTNESS OF THE FRONT PANEL DISPLAY (remote control only)



Press **DIMMER** repeatedly on the remote control.

The brightness of the front panel display will change in the order shown below.

AUTO → **1** (bright) → **2** (medium) → **3** (dim)
→ back to **AUTO**



When **AUTO** is set, the brightness of the front panel display is adjusted automatically with the Illumination sensor (P. 3). Ensure that the sensor is not covered.

TROUBLESHOOTING

If there is a problem with the unit, check the following list first. If you cannot resolve the problem with the suggested solutions or if the problem is not listed below, turn off and unplug the system, and consult the nearest authorized Yamaha dealer or service center.

General

Problem	Cause	Solution
The speakers make no sound.	The volume might be set to the minimum level, or muted.	Adjust the volume level.
	The source may be incorrect.	Select the correct source.
	The headphones are connected.	Remove the headphones.
	The volume of a connected external device is not loud enough.	Raise the volume of the external device.
Sound suddenly turns off.	The sleep timer (☞ P. 20) may be set.	Turn the system on and play the source again.
Sound is cracked/distorted or there is abnormal noise.	Input source volume is excessive, or volume of this unit is excessive (especially Bass).	Adjust volume with VOLUME , or adjust Bass with EQ (☞ P. 20). If an external device is playing back, lower the volume of the external device.
The unit does not operate properly.	The unit may have received a strong electrical shock such as lightning or excessive static electricity, or power supply may have dropped.	Turn the system off, and disconnect the power cable. Wait about 30 seconds, reconnect the power cable, and turn on the system.
The system turns on but immediately shuts off.		
A digital or high-frequency equipment produces noises.	The unit may be placed too close to the digital or high-frequency equipment.	Place the unit farther away from the equipment.
The clock setting has been cleared.	The unit remained unpowered for more than one week.	If the power supply is interrupted for about one week, the time setting may be reset. If this occurs, please reset the clock (☞ P. 5).
The iPod does not play back at the alarm time even if the alarm source is set to iPod.	The iPod is not set in the iPod dock.	Set the iPod in the iPod dock (☞ P. 2).
Clock flashes and the unit cannot be operated.	The CLOCK switch is in the SET position, and the clock settings are in progress.	Set the CLOCK switch to the ON or OFF position.
Alarm does not sound.	The CLOCK switch is in the OFF or SET position.	Set the CLOCK switch to the ON position.
The front panel display indicates "ALARM not work" and can't set the alarm.		
The unit turns the system off unexpectedly.	The automatic system-off function may have operated.	This unit will turn the system off when 60 minutes have elapsed without any operation being performed after stopping playback of the USB device or the CD, or if the system has been on for 12 hours or more without any operation being performed.
Front panel display becomes dim.	The front panel display's brightness setting is set to AUTO.	Change the brightness setting to something other than AUTO (☞ P. 20). Alternatively, ensure that the illumination sensor (☞ P. 3) is not obscured.

iPod

Problem	Cause	Solution
No sound.	The iPod is not set in the iPod dock firmly.	Remove the iPod from the unit, and then set it in the iPod dock again (☞ P. 2).
	The headphones of the iPod are connected.	Remove the headphones.
	The iPod software version has not been updated.	Download the latest iTunes software to update the iPod software version to the latest.
The iPod does not charge up.	The iPod is not set in the iPod dock firmly.	Remove the iPod from the unit, and then set it in the iPod dock again (☞ P. 2).
	USB is selected as the audio source.	Select something other than USB as the audio source.
The front panel display indicates “iPod Unknown” when you connect the iPod.	The iPod being used is not supported by the unit.	Use a supported iPod (☞ P. 26).

CD playback

Problem	Cause	Solution
CD cannot be inserted.	Another disc is already inserted.	Unload the disc with ▲ EJECT .
	You are attempting to insert a disc that cannot be used by this unit.	Use a disc supported by the unit (☞ P. 25).
Some button operations do not work.	The disc loaded into the unit may not be compatible.	Use a disc supported by the unit (☞ P. 25).
Playback does not start immediately after pressing ▶II (playback stops immediately.).	The disc may be dirty.	Wipe the disc clean.
	The disc loaded into the unit may not be compatible.	Use a disc supported by the unit (☞ P. 25).
	If the unit was moved from a cold to warm place, condensation may have formed on the disc reading lens.	Wait for an hour or two until the unit adjusts to the room temperature, and try again.
When you insert a disc, the front panel display indicates “No Disc” or “CD Unknown.”	The disc loaded into the unit may not be compatible.	Use a disc supported by the unit (☞ P. 25).
	The disc may be dirty, or a foreign object may have adhered to it.	Wipe the disc clean. Alternatively, remove any foreign object that has adhered to the disc.
	The disc does not contain playable files.	Use a disc containing playable files (☞ P. 25).
	The disc was inserted upside down.	Insert the disc with the label facing upward.
The front panel display indicates “no operation”, and a disc cannot be inserted or unloaded.	The clock/alarm/tone settings are in progress. Alternatively, the alarm is playing.	Complete the clock/alarm/tone settings. Alternatively, stop the alarm.

USB device playback

Problem	Cause	Solution
MP3/WMA file on the USB device does not play.	The USB device is not recognized.	Turn the system off and disconnect the USB device. Then turn the system on and reconnect the USB device to the unit. If the solutions above do not resolve the problem, the USB device is not playable on the unit (☞ P. 25).
	The USB device does not contain playable files.	Use a USB device contains playable files (☞ P. 25).
When you connect a USB device, the front panel display indicates “USB OverCurrent,” and then the front panel display goes blank.	An incompatible USB device is connected to the unit. Alternatively, the USB device is not connect firmly to the unit.	Turn the system off and disconnect the USB device. Then turn the system on and reconnect the USB device to the unit. If the solutions above do not resolve the problem, the USB device is not playable on the unit (☞ P. 25).

Bluetooth

Problem	Cause	Solution
Cannot make this unit paired with the other component.	The other component does not support A2DP.	Perform pairing operations with a component which supports A2DP.
	A <i>Bluetooth</i> adaptor, etc. that you want to pair with this unit has a password other than "0000".	Use a <i>Bluetooth</i> adaptor, etc. whose password is "0000".
	This unit and the other component are too far apart.	Move the other component closer to this unit.
	There is a device (microwave oven, wireless LAN, etc.) outputs signals in the 2.4 GHz frequency band nearby.	Move this unit away from the device that is emitting radio-frequency signals.
Can't establish a <i>Bluetooth</i> connection.	This unit is not registered on the other component's <i>Bluetooth</i> connection list.	Perform pairing operations again (☞ P. 9).
No sound is produced or the sound is interrupted during playback.	The <i>Bluetooth</i> connection of this unit with the other component is disconnected.	Perform <i>Bluetooth</i> connection operations again (☞ P. 10).
	This unit and the other component are too far apart.	Move the other component closer to this unit.
	There is a device (microwave oven, wireless LAN, etc.) outputs signals in the 2.4 GHz frequency band nearby.	Move this unit away from the device that is emitting radio-frequency signals.
	The other component's <i>Bluetooth</i> function is off.	Turn on the <i>Bluetooth</i> function of the other component.
	The other component is not set to send <i>Bluetooth</i> audio signals to this unit.	Check that the <i>Bluetooth</i> function of the other component is set properly.
	The pairing setting of the other component is not set to this unit.	Set the pairing setting of the other component to this unit.
	The other component's volume is set to the minimum.	Increase the volume level.

DAB reception

Problem	Cause	Solution
Cannot tune into any DAB stations.	The antenna may be connected improperly.	Make sure the antenna is connected properly (☞ P. 3).
	The initial scan operations were not performed.	Perform the initial scan operations (☞ P. 11).
	There is no DAB coverage in your area.	Check with your dealer or WorldDMB Online at " http://www.worlddab.org " for a listing of the DAB coverage in your area.
	The DAB signals are too weak.	Change the height, direction, or placement of the antenna.
The initial scan operations are not successful and "Not Found" appears on the front panel display.	The antenna may be connected improperly.	Make sure the antenna is connected properly (☞ P. 3).
	The DAB signals are too weak.	Change the height, direction, or placement of the antenna.
	There is no DAB coverage in your area.	Check with your dealer or WorldDMB Online at " http://www.worlddab.org " for a listing of the DAB coverage in your area.
The DAB station reception is weak.	The antenna may be connected improperly.	Make sure the antenna is connected properly (☞ P. 3).
	The DAB signals are too weak.	Change the height, direction, or placement of the antenna.
There is noise interference (e.g. hiss, crackle, or jitter).	The antenna needs to be repositioned.	
	The DAB signals are too weak.	
The DAB station information does not appear or is inaccurate.	The DAB station may be temporarily out of service, or the DAB station information is not provided by the DAB broadcaster.	Contact the DAB broadcaster.

FM reception

Problem	Cause	Solution
Too much noise.	The antenna may be connected improperly.	Make sure the antenna is connected properly (P. 3) or use a commercially available outdoor antenna.
	The antenna is too close to the unit or to an electronic device.	Position the antenna as far away as possible from the unit or the electronic device.
Too much noise during stereo broadcast.	The radio station you selected may be far from your area, or the radio wave reception is weak in your area.	Try manual tuning to improve the signal quality (P. 14) or use a commercially available outdoor antenna.
Even with an outdoor antenna, radio wave reception is weak. (Sound is distorted.)	Multipath reflection or other radio interferences may have occurred.	Change the height, direction, or placement of the antenna.

Remote control

Problem	Cause	Solution
The remote control does not work properly.	The remote control may be operated outside its operation range.	For information on the remote control operation range, refer to "How to use the remote control" (P. 1).
	The remote control signal receiver on the unit (P. 3) may be exposed to direct sunlight or lighting (inverted fluorescent lamps).	Change the lighting or orientation of the unit.
	The battery may be worn out.	Replace the battery with new one (P. 1).
	There are obstacles between the remote control signal receiver on the unit (P. 3) and the remote control.	Remove the obstacles.

NOTES ON DISCS AND USB DEVICES

CD information

This unit is designed for use with audio CD, CD-R*, and CD-RW* with the logos followings.



* ISO 9660 format CD-R/RW



 
This unit can play back discs bearing any of the logo marks above. A disc logo mark is printed on the disc and the disc jacket.




- Do not load any other type of disc into this unit. Doing so may damage this unit.
- CD-R/RW cannot be played back unless finalized.
- Some discs cannot be played back depending on the disc characteristics or recording conditions.
- Do not use any non-standard shaped discs such as a heart-shaped disc.
- Do not use discs with many scratches on their surface.
- Do not load a cracked, warped, or glued disc.
- Do not use 8-cm discs.

Handling a disc

- Do not touch the surface of the disc. Hold a disc by its edge (and the center hole).
- Do not use a pencil or pointed marker to write on the disc.
- Do not put a tape, seal, glue, etc., on a disc.
- Do not use a protective cover to prevent scratches.
- Do not load more than one disc into this unit at one time. This can cause damage to both this unit and the discs.
- Do not insert any foreign objects into the disc slot.
- Do not expose a disc to direct sunlight, high temperature, high humidity, or a lot of dust.



Caution

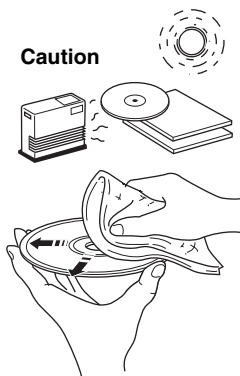

- If a disc becomes dirty, wipe it with a clean, dry cloth from the center out to the edge. Do not use record cleaner or paint thinner.
- To avoid malfunction, do not use a commercially available lens cleaner.

USB device information

This unit supports USB mass storage class devices (e.g., flash memories or portable audio players) using FAT16 or FAT32 format.



- Some devices may not work properly even if they meet the requirements.
- Do not connect devices other than USB mass storage class devices (such as USB chargers or USB hubs), PCs, card readers, an external HDD, etc.
- Yamaha will not be held responsible for any damage to or data loss on the USB device occurring while the device is connected to this unit.
- Playability of and power supply to all kind of USB devices are not guaranteed.
- USB devices with encryption cannot be used.

About MP3 or WMA files



- The unit can play back:

File	Bitrate (kbps)	Sampling frequency (kHz)
MP3	8-320**	16-48
WMA	16-320**	22.05-48

** Both constant and variable bitrates are supported.

- The maximum numbers of files/folders that can be played on the unit are as follows.

	Data CD	USB
Maximum total number of file	512	9999
Maximum folder number	255	999
Maximum file number per folder	511	255

- Copyright-protected files cannot be played back.

SPECIFICATIONS

◆ PLAYER SECTION

iPod (Digital connection)

[As of July, 2012]

- Compatible iPod models
..... iPod touch (1st, 2nd, 3rd and 4th generations)
..... iPod nano (2nd, 3rd, 4th, 5th and 6th generations)
- Compatible iPhone models
..... iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone
- Compatible iPad models iPad (3rd generation), iPad 2, iPad
An iPod may not be detected by the unit or some features may not be compatible, depending on the model or software version of the iPod.

CD

- Media CD, CD-R/RW
- Audio format Audio CD, MP3, WMA

LASER

- Type Semiconductor laser GaAS/GaAlAs
- Wave length 790 nm
- Output Power 7 mW

USB

- Audio format MP3, WMA

AUX

- Input connector 3.5 mm (1/8 in) STEREO mini jack

◆ Bluetooth SECTION

- *Bluetooth* version Ver. 2.1+EDR
- Supported protocols A2DP, AVRCP
- Supported codecs SBC, AAC
- Wireless output *Bluetooth* Class 2
- Maximum communication distance 10 m (without obstructions)

◆ AMPLIFIER SECTION

- Maximum output power 15 W + 15 W (6 Ω 1 kHz, 10 % THD)
- Headphones 3.5 mm STEREO mini jack (Impedance 16 to 32 Ω)

◆ TUNER SECTION

Tuning range

- DAB/DAB+ 174 to 240 MHz (Band III)
- FM 87.50 to 108.00 MHz

◆ GENERAL

- Power supply AC 230 to 240 V, 50 Hz
- Power consumption 30 W
- System off consumption
..... 3.5 W or less/0.5 W or less (Power saving)
- Dimensions (W × H × D)
..... 370 (14-5/8 in) × 110 (4-3/8 in) × 230 (9 in) mm
- Weight 3.9 kg (8.6 lbs.)

Specifications are subject to change without notice.

iPod, iPhone, iPad

“Made for iPod”, “Made for iPhone” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone or iPad, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.

iPad, iPhone, iPod, iPod nano, iPod touch and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.



Digital Audio Broadcasting



Digital Audio Broadcasting

This unit supports DAB/DAB+ tuning.

Information for Users on Collection and Disposal of Old Equipment and Used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.



For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



Pb

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Bluetooth

- *Bluetooth* is a technology for wireless communication between devices within an area of about 10 meters (33 ft) employing the 2.4 GHz frequency band, a band which can be used without a license.
- *Bluetooth* is a registered trademark of the *Bluetooth* SIG and is used by Yamaha in accordance with a license agreement.

Handling *Bluetooth* communications

- The 2.4 GHz band used by *Bluetooth* compatible devices is a radio band shared by many types of equipment. While *Bluetooth* compatible devices use a technology minimizing the influence of other components using the same radio band, such influence may reduce the speed or distance of communications and in some cases interrupt communications.
- The speed of signal transfer and the distance at which communication is possible differs according to the distance between the communicating devices, the presence of obstacles, radio wave conditions and the type of equipment.
- Yamaha does not guarantee all wireless connections between this unit and devices compatible with *Bluetooth* function.

If there should be color blotching or noise when used near a TV, move this unit away from the TV when using it.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.

The user shall not reverse engineer, decompile, alter, translate or disassemble the software used in this unit, whether in part or in whole. For corporate users, employees of the corporation itself as well as its business partners shall observe the contractual bans stipulated within this clause. If the stipulations of this clause and this contract cannot be observed, the user shall immediately discontinue using the software.

We, Yamaha Music Europe GmbH hereby declare that this unit is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Yamaha Music Europe GmbH
Siemensstr. 22-34 25462 Rellingen, Germany
Tel: +49-4101-303-0



■ For U.K. customers

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to the instructions described below.



The plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

■ Special Instructions for U.K. Model

IMPORTANT

THE WIRES IN MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

Blue: NEUTRAL

Brown: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Make sure that neither core is connected to the earth terminal of the three pin plug.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Yamaha Music Europe GmbH

Siemensstr. 22-34 25462 Rellingen, Germany

Tel: +49-4101-303-0

Yamaha Music Australia Pty. Ltd.

Level 1, 99 Queensbridge Street, Southbank, Victoria 3006, Australia

Tel: +61-3-9693-5111

LASER SAFETY



This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

DANGER

This unit emits visible laser radiation when open. Avoid direct eye exposure to beam. When this unit is plugged into the wall outlet, do not place your eyes close to the opening of the disc tray and other openings to look into inside.

The laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

The name plate is located on the bottom of the unit.

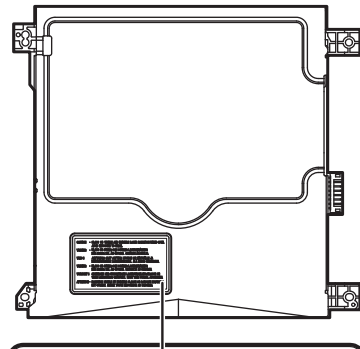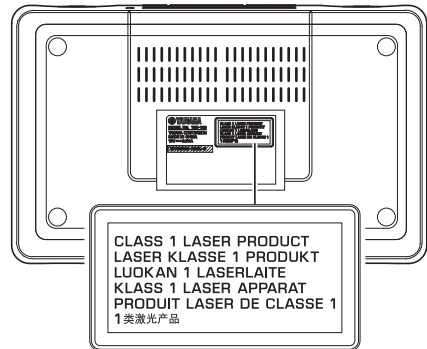

Important Notice: Guarantee Information for customers in EEA* and Switzerland**English**

For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area

<http://europe.yamaha.com/warranty/>

